

MULTIFUNCTIONAL DIGITAL SYSTEMS Copying Guide

ES9160 MFP/ES9170 MFP

©2012 Oki Data Corporation All rights reserved Under the copyright laws, this manual cannot be reproduced in any form without prior written permission of Oki Data.

Preface

How to read this manual

Thank you for purchasing OKI Multifunctional Digital Systems. This manual describes how to use the copying functions. Read this manual before using this equipment. Keep this manual within easy reach, and use it to configure an environment that makes the best use of the OKI's functions.

This equipment provides the scanning/printing function as an option. However, this optional scanning/printing function is already installed in some models.

Symbols in this manual

In this manual, some important items are described with the symbols shown below. Be sure to read these items before using this equipment.



Indicates a potentially hazardous situation which, if not avoided, could result in death, serious injury, or serious damage, or fire in the equipment or surrounding objects.

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, partial damage to the equipment or surrounding objects, or loss of data.



Indicates information to which you should pay attention when operating the equipment.

Other than the above, this manual also describes information that may be useful for the operation of this equipment with the following signage:


Tip

Describes handy information that is useful to know when operating the equipment.

Pages describing items related to what you are currently doing. See these pages as required.


Description of original/paper direction

Paper or originals of A4, B5 or LT size can be placed either in a portrait direction or in a landscape direction. In this manual, "-R" is added to this paper size when this size of paper or original is placed in a landscape direction.

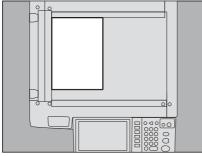

Example: A4 size original on the original glass

Placed in a portrait direction: A4

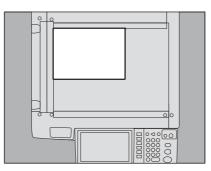

Placed in a landscape direction: A4-R

Paper or originals of A3, B4, LD or LG can only be placed in a landscape direction, therefore "-R" is not added to these sizes.

Screens

- · Screens on this manual may differ from the actual ones depending on how the equipment is used, such as the status of the installed options.
- The illustration screens used in this manual are for paper in the A/B format. If you use paper in the LT format, the display or the order of buttons in the illustrations may differ from that of your equipment.

Trademarks

The company and product names given in this manual or displayed in this software may be the trademarks of their respective companies.

Preface1

Chapter 1 BEFORE USING EQUIPMENT

BASIC Menu for the Copier Function	
Placing Paper	11
Acceptable copy paper	11
Placing paper in drawers	12
Registering paper size	15
Setting paper type	
Placing paper in the Large Capacity Feeder (optional)	

Chapter 2 HOW TO MAKE COPIES

Placing Originals	24
Acceptable originals	
Forgery prevention function	
Placing originals on the original glass	
Book-type originals	
Using the RADF (Reversing Automatic Document Feeder, optional)	
Making Copies	30
Basic copying procedure	30
Scanning the next original during copying	
Interrupting copying and making other copies	34
Proof copy	35
Selecting exit tray	
Bypass Copying	38
Bypass copying on standard size paper	39
Bypass copying on non-standard size paper	

Chapter 3 BASIC COPY MODES

Before Using Copying Functions	52
Default settings	
Confirming the set functions	
Clearing the set functions	
Restrictions on function combinations	53
Paper Selection	54
Automatic Paper Selection (APS)	
Selecting desired paper manually	
Copying mixed-size originals in one operation	
Setting Original Modes	58
Density Adjustment	59
Enlargement and Reduction Copying	60
Automatic Magnification Selection (AMS)	
Specifying both the original size and the copy paper size separately	
Creativing repreduction ratio manually	64
Specifying reproduction ratio manually	
Selecting Finishing Mode	66
	 66 66

Rotate sort mode Staple sort mode Magazine sort / Center fold / Saddle stitch Hole punch mode	
Manual staple mode	81
Duplex Copying	82
Making a 1-sided copy	83
Making a 2-sided copy	84
Making a 2-sided copy from a book-type original	
Performing Copy & File	88
Setting share folder	

Chapter 4 EDITING FUNCTIONS

Displaying EDIT Menu	
Image Shift	
Creating top/bottom margin or left/right margin	
Creating bookbinding margin	
Edge Erase	
Book Center Erase	100
Dual Page	102
2IN1 / 4IN1	104
Magazine Sort Mode	107
Image Editing	109
Trimming / Masking	109
Mirror image / Negative/Positive reversal	112
XY Zoom	113
Cover Sheet	114
Sheet Insertion	116
Time Stamp	119
Page Number	120
Job Build	122
Image Direction	125
Book - Tablet	127
ADF -> SADF	128
Omit Blank Page	130
Outside Erase	132

Chapter 5 IMAGE ADJUSTMENT

Displaying IMAGE Menu	136
Jsing Image Adjustment Functions	137
Background adjustment	137
Sharpness	138

Chapter 6 TEMPLATES

Templates	140
Displaying template menu	140
Using "Useful Templates"	141
Registering Templates	
Registering templates into the public template group	
Creating a new private group	
Registering templates into a private group	
Recalling Templates	150
Changing Data	153
Changing private group data	
Changing template data	
Deleting Groups or Templates	
Deleting private groups	
Deleting templates	

Chapter 7 CONFIRMING JOB STATUS

Confirming Copy Job Status	162
Confirming jobs in progress or ones in waiting	
Confirming copy job history	167
Confirming drawers	168
Confirming amount of toner remaining	

Chapter 8 OTHER INFORMATION

Continuous Copying Speed	172
Copying Function Combination Matrix	173
Combination matrix 1/2	173
Combination matrix 2/2	174
INDEX	175

BEFORE USING EQUIPMENT


This chapter describes what you need to know before using this equipment, such as the composition of the BASIC menu for the copying functions and how to place copy paper.

1

BASIC Menu for the Copier Function	8
Placing Paper	
Acceptable copy paper	
Placing paper in drawers	
Registering paper size	
Setting paper type	
Placing paper in the Large Capacity Feeder (optional)	19

BASIC Menu for the Copier Function

When a few seconds have passed after you have turned the power ON, the BASIC menu for the copier function appears on the touch panel. The BASIC menu shows the following information:

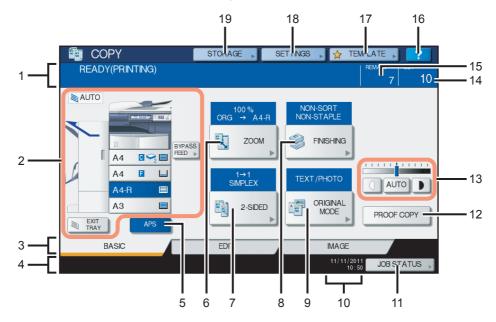

1. Message indication area

This shows a brief description of the functions or the current status of this equipment in message form.

2. Equipment status indication area (III P.10)

This shows the size, paper type or amount of paper remaining in each drawer.

3. Index tabs (BASIC, EDIT, IMAGE) (P.93, P.135)

These are for switching between the menus of "BASIC", "EDIT" and "IMAGE".

4. Alert message indication area

This shows alert messages such as the replacement timing of the toner cartridges.

When this equipment is managed with the user management function and department management function In the above case, the job quota assigned to each user or department appears here for approx. 5 seconds after user authentication.

The displayed number is the smaller one of either user (\clubsuit) or department (\clubsuit).

Tips

- · The display may differ depending on the management status of this equipment.
- · For details of the user management function or the department management function, ask your administrator.

5. [APS] (automatic paper selection) button (

This is for changing the mode to automatic paper selection.

6. [ZOOM] button (P.60)

This is for changing the reproduction ratio of images.

7. [2-SIDED] button (P.82)

This is for selecting simplex/duplex copying (e.g. 1 -> 2-sided, 2 -> 2 sided).

8. [FINISHING] button (III P.66)

This is for selecting a sorting mode.

9. [ORIGINAL MODE] button (P.58) This is for selecting an original mode.

10. Date and time

11. [JOB STATUS] button (P.162)

This is for confirming the processing status of copy, fax, scan or print jobs, and also for viewing their performing history.

12. [PROOF COPY] button (III P.35)

This is for making a proof copy to check an image before making a large amount of copies.

13. Density adjustment buttons (

These are for adjusting the density level of images.

14. Number of copy sets

15. Number of remaining copy sets

16. ? (Help) button

This is for viewing the explanation of each function or the buttons on the touch panel.

17. [TEMPLATE] button (P.139)

This is for the template function.

18. [SETTINGS] button (III P.52)


This is for checking currently set functions.

19. [STORAGE] button (P.88)

This is for the storage function.

Equipment status indication area

The equipment status indication area shows the following information:

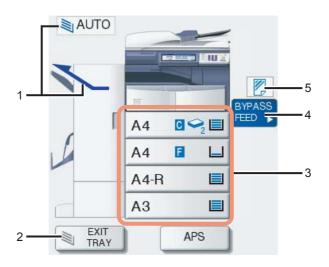

1. Receiving tray indication (P.37)

This shows the tray to which copied paper exits.

2. [EXIT TRAY] button (P.37)

This is for switching receiving (exit) trays.

3. Drawer buttons (III P.55)

These show the size of paper, amount of paper remaining in each drawer and the paper type set for the drawer. When you want to use a particular drawer, press the corresponding button.

Tip

The amount of paper remaining in each drawer is displayed as follows. Use it as a rough guide since the detection of the remaining paper may vary depending on the paper type.

Remaining paper	Display
Approx. more than 10 mm (0.40")*	
1 sheet - approx. less than 10 mm (0.40")*	
No paper	

Approx. 100 sheets of plain paper recommended by OKI

4. [BYPASS FEED] button (P.38)

When this button is pressed with paper set in the bypass tray, it will be selected as the paper source.

5. Paper type on the bypass tray (P.38)

This shows the type of paper placed on the bypass tray with an icon.

Placing Paper

Acceptable copy paper

The following paper can be placed and used for copying.

The values are valid only when Oki-recommended paper is used. For the recommended paper, refer to the **Quick Start Guide**.

Notes

- Do not place paper with mixed sizes or paper types in the same drawer.
- · Be sure that the height of the stacked paper does not exceed the line indicated on the guides.

Feeder	Paper type	Maximum sheet capacity	Size
Drawers incl. the Drawer Module (optional)	Plain paper (64 - 80 g/m ²) (17 - 20 lb. Bond)	600 sheets (64 g/m ²) (17 lb. Bond) 550 sheets (80 g/m ²) (20 lb. Bond)	A/B format: A3, A4, A4-R, A5-R, B4, B5, B5-R, FOLIO LT format:
	THICK 1 (81 - 105 g/m ²) (21 - 28 lb. Bond)	450 sheets	LD, LG, LT, LT-R, ST-R, COMP, 13"LG, 8.5"SQ K format: 8K, 16K, 16K-R
Large Capacity Feeder (optional)	Plain paper (64 - 80 g/m ²) (17 - 20 lb. Bond)	2360 sheets (64 g/m ²) (17 lb. Bond) 2000 sheets (80 g/m ²) (20 lb. Bond)	A4 (equipment for the A/B format), LT (equipment for the LT format)
	THICK 1 (81 - 105 g/m ²) (21 - 28 lb. Bond)	1660 sheets	
Bypass tray	Plain paper (64 - 80 g/m ²) (17 - 20 lb. Bond)	100 sheets	A/B format: A3, A4, A4-R, A5-R, A6-R, B4, B5, B5-R, FOLIO
	THIN *1, *2 (52 - 63 g/m ²) (14 - 17 lb. Bond)	1 sheet	LT format: LD, LG, LT, LT-R, ST-R, COMP, 13"LG, 8.5"SQ
	THICK 1 (81 - 105 g/m ²) (21 - 28 lb. Bond)	80 sheets	K format: 8K, 16K, 16K-R
	THICK 2 ^{*1} (106 - 163 g/m ²) (29 lb. Bond - 90 lb. Index)	40 sheets	Non-standard size: Length: 100 - 297 mm (3.9" - 11.7"), Width: 148 - 432 mm (5.8" - 17")
	THICK 3 ^{*1} (164 - 209 g/m ²) (91 - 110 lb. Index)	30 sheets	
	Tracing paper *1, *3 (75 g/m ²) (20 lb. Bond)	100 sheets	
	Sticker labels *1, *4	1 sheet	
	OHP film *1	1 sheet	A4, LT
	Envelope *1, *5, *6	1 envelope	DL (110 mm x 220 mm), COM10 (4 1/ 8" x 9 1/2"), Monarch (3 7/8" x 7 1/2"), CHO-3 (120 mm x 235 mm), YOU-4 (105 mm x 235 mm)

*1 Duplex copying is not available.

- *3 For making copies on the tracing paper, select "PLAIN" for the paper type.
- *4 For making copies on the sticker labels, select "THICK 2" for the paper type.

*5 Copying on the back side of an envelope is not possible.

^{*2} When the Saddle Stitch Finisher MJ-1106 (optional) is installed, the paper exits on the upper tray.

^{*6} When the Finisher MJ-1101 (optional) or the Saddle Stitch Finisher MJ-1106/MJ-1033 (optional) is installed, the envelope exits to the exit tray of the equipment. When the Inner Finisher MJ-1032 (optional) is installed, the envelope exits to the receiving tray of the finisher.

Tips

- "LT format" is the standard size only for use in North America.
- "K format" is a Chinese standard size.
- · Abbreviations for paper sizes: LT: Letter, LD: Ledger, LG: Legal, ST: Statement, COMP: Computer, SQ: Square

Unacceptable copy paper

Do not use the types of paper shown below. This could cause a paper jam.

- Damp paper
- Folded paper
- Curled or creased paper
- · Paper whose surface is extremely smooth or rough

Do not use the types of paper shown below. This could cause an equipment malfunction.

- Paper whose surface has had special treatment
- · Paper once printed with other copiers or printers

□ Precautions for storing copy paper


Make sure of the following when storing copy paper:

- Wrap the paper in its wrapping to keep it free from dust.
- Avoid direct sunlight.
- Store in a damp-free space.
- To prevent paper from being folded or bent, store it in a flat place.

Placing paper in drawers

Follow the procedure below to place paper in a drawer. For acceptable copy paper, see the following page: P.11 "Acceptable copy paper"


- Turn the power of this equipment ON.
- **9** Pull out a drawer carefully until it comes to a stop.

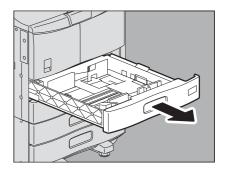


3 Place paper in the drawer.


Notes


- Up to 600 sheets (64 g/m²) (17 lb. Bond) can be placed in one drawer. Be sure that the height of the stacked paper does not exceed the line indicated inside of the side guides.
 P.11 "Acceptable copy paper"
- Fan and jog the stack of paper well before you place it in a drawer, or the sheets may not be separated before being fed. Be careful not to cut your fingers when fanning.
- Place paper with its copy side up. The copy side may be noted on its wrapping paper.

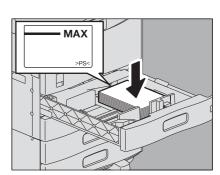


4 Move the end guide to the trailing edge of the paper while pushing its lower part in the direction of the arrows.

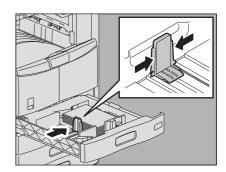

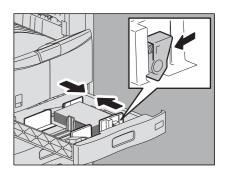

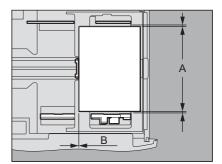

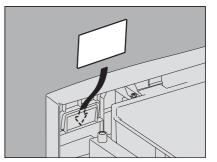

5 While holding the green lever of the front side guide, adjust the side guides to the paper size.

Tip

Adjust the side guides with both hands.

6 Confirm that there is no extra gap between the paper and the side or end guides.

If the gap between the paper and the side or end guides is too big, this would result in paper misfeeding.

Gap between the paper and the side guides ("A" in the figure on the right): Do not make a gap of more than 0.5 mm (0.02") on one side or 1.0 mm (0.04") on both sides. However, if a paper jam occurs in the case of thick paper, create a suitable gap.

Gap between the paper and the end guide ("B" in the figure on the right): Do not make a gap of more than 0.5 mm (0.02").

Change the paper size indicator if required.

8

Be careful not to let your fingers be caught when pushing the drawer into this equipment. This could injure you.

Push the drawer straight into this equipment carefully until it comes to a stop.

9 The menu below appears. When the size or type of paper is different from the one that was in the drawer, press [NO] on the touch panel. When they are the same, press [YES].



Tips

- The menu above may not appear depending on the setting of this equipment. In this case, see the following pages to change the settings of the paper size and paper type:
 - P 15 "Registering paper size"
 - P.17 "Setting paper type"
- If you want to change the setting for displaying this menu, ask your administrator.

If you press [YES], the procedure is completed.

10 Select the size and type of the paper placed in the drawer on the touch panel.


- 1) Select the paper size.
- 2) Select the paper type.
- 3) Press [OK].




Registering paper size

When you place paper for the first time or you replace the paper with that of a different size, you need to register the size to this equipment.

1 Press the [USER FUNCTIONS] button on the control panel.

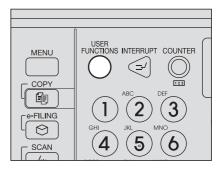



2 Press the [USER] tab on the touch panel to display the user setting menu, and then press [DRAWER].

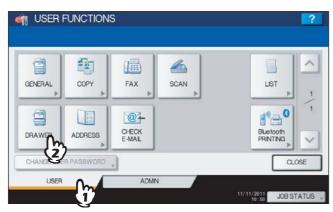

- **3** Select the paper size on the touch panel.
 - 1) Select the drawer in which you placed paper.
 - 2) Select the paper size.
 - 3) Press [OK].

	A3	A4	A4-R	A5-R	
	LD	LT	LT-R	LG	
4	B4	B5	85-R	FOLIO	
13 (17)	ST-R	COMP	13°LG	8.5SQ	
4-R	8K	16K	16K-R	(z)	

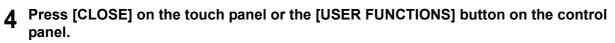

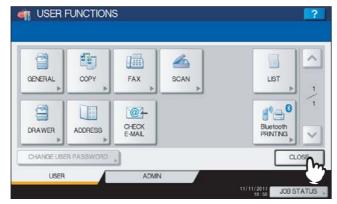

Setting paper type

When you place any special paper other than plain paper or that not used for normal copying, you need to set the thickness and attribute into this equipment.

Tips

- The thickness and attribute can be set together.
- When the thickness "THICK 1", or an attribute other than "NONE" is set for a drawer, the paper placed in this drawer will not be used for the automatic paper selection mode.
- When an attribute other than "NONE" is set for a drawer, the Automatic Change of Paper Source function (Feeding the same size of paper from a different drawer even if the specified drawer from which paper is being fed is empty) is disabled for the paper in this drawer.
- For how to set Automatic Change of Paper Source, refer to the *MFP Management Guide*.
 The set paper type appears on the equipment status indication area with an icon.
 - P.10 "Equipment status indication area"

Acceptable paper types are as follows:

Thickness

Button	Description	lcon
PLAIN	Plain paper: 64 - 80 g/m ² (17 - 20 lb. Bond)	—
THICK 1	Thick paper: 81 - 105 g/m ² (21 - 28 lb. Bond)	\$ 1


Attribute

Button	Description	lcon
NONE	No attribute specified	—
INSERT	Sheets used in the sheet insertion mode P.116 "Sheet Insertion" Up to 2 types of sheets (Insertion sheets 1 and 2) can be set. To set Insertion sheet 1 and 2, select the drawer for Insertion sheet 1 and press [INSERT], and then select a drawer for Insertion sheet 2 and press [INSERT].	I1, I2
COVER	Sheets used in the cover sheet mode P.114 "Cover Sheet"	С
SPECIAL	Colored paper or paper with watermarks, etc.	*
FAX *1, *2	FAX paper	F


*1 Fax transmission and reception is available only when the Fax Unit (optional) is installed.

*2 When lists are printed, paper set as "FAX" is used. For printing lists, refer to the MFP Management Guide.

1 Press the [USER FUNCTIONS] button on the control panel.

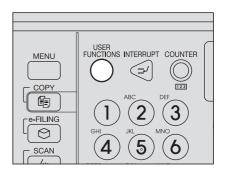

2 Press the [USER] tab on the touch panel to display the user setting menu, and then press [DRAWER].

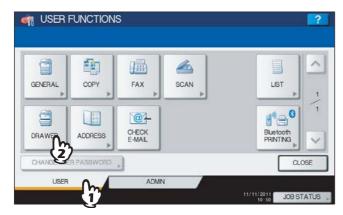

3 Press [PAPER TYPE].

	SIZE				
(manual 10 2	A3	A4	A4-R	A5-R	
	LD	LT	LT-R	LG	
A4 🔳	B4	B5	85-R	FOLIO	
A3 🔲	ST-R	COMP	13%LG	8.5SQ	
4-R 🔲	8K	16K	16K-R		
84 🔳					

4 Select the paper type.

- 1) Select the drawer in which you placed paper.
- 2) Select the paper type.
- 3) Press [OK].

	THICKNESS	PLAN	1	
		THICK 1		
A4			Ռ	
A3 12	ATTRIBUTE	NONE	I NSER	COVER
B4		SPECIAL	FAX	

5 Press [OK].

	SIZE			
	A3	A4	A4-R	A5-R
	LD	LT	LT-R	LG
A4 9	B4	B5	85-R	FOLIO
A3 🔳	ST-R	COMP	13%LG	8.5SQ
A4-R 🔲	8K	16K	16K-R	
B4 🔳				

6 Press [CLOSE] on the touch panel or the [USER FUNCTIONS] button on the control panel.

🦏 USER	FUNCTION	S			?
GENERAL	COPY	FAX	SCAN	LIST	< -/
DRAWER	ADDRESS	CHECK E-MAL		Bluetooth PRINTING	1✓
CHANGE US	R PASSWORD	ADMIN		a	
UGEN		ADmi		11/11/2011 JOB S	TATUS

Clearing the set paper type

Press the drawer button on the menu in step 4, and then press the paper type whose setting you want to clear.


Tip

If both INSERT 1 and INSERT 2 are set and you clear the setting of only INSERT 1, the setting for INSERT 2 automatically becomes the setting for INSERT 1.

Placing paper in the Large Capacity Feeder (optional)


1 Pull out the drawer of the Large Capacity Feeder carefully until it comes to a stop.

Be careful not to touch the slide rails (A in the figure). This could injure you.

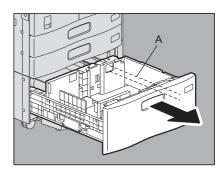

2 Place 2 stacks of paper in the right and left trays correspondingly.

Fan and jog the paper well before placing it. Place it with its copy side up. Place one stack of paper in the right-hand tray (shown as "A" in the figure) with its side touching the right corner of the tray, and place the other stack of paper in the left-hand tray (shown as "B" in the figure) with its side touching the left corner of the tray. Paper can be placed neatly if you divide stacks into small bundles and pile them up on the two trays alternately.

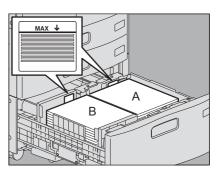

Notes

- Paper in the right-hand tray is used first. When it runs out, paper in the left-hand tray will be moved automatically to the right-hand tray and fed.
- A maximum of 2360 sheets (64 g/m²) (17 lb. Bond) can be placed in the 2 trays. However the stack height of the paper must not exceed the line indicated inside the side guides.
 P.11 "Acceptable copy paper"
- The copy side may be noted on its wrapping paper.
- Be careful not to cut your fingers when fanning the paper.
- When placing paper, be sure that the center lever is not open. (See the label attached in the drawer of the Large Capacity Feeder.)

Push the drawer of the Large Capacity Feeder straight into this equipment carefully.

When the drawer is completely inserted, the right-hand tray will move up to the paper feeding position.

Note

Do not slam the drawer shut. Stacked sheets may collapse and they cannot be transported correctly.

Be careful not to let your fingers be caught when pushing the drawer into this equipment. This could injure you.

4

Change the paper type as required.


Adding paper in the Large Capacity Feeder during copying

When the paper on the left tray of the Large Capacity Feeder has run out during copying, "Paper for left drawer can be added." appears. You can pull out the Large Capacity Feeder and add paper to the left tray without stopping copying. This is useful when you wish to make a large amount of copies quickly.

1 Pull out the drawer of the Large Capacity Feeder carefully until it comes to a stop.


Only the left tray will come out.

Do not touch the slide rail ("A" in the figure on the right). This could injure you.

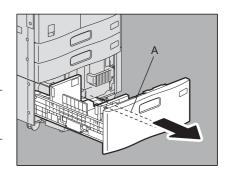

Place paper on the left tray.

Place paper aligning to the left-hand side of the tray.

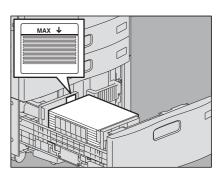

3 Push the drawer of the Large Capacity Feeder straight into this equipment carefully. When the paper on the right tray has run out, that on the left tray will be automatically shifted to the right tray.

Note

Do not slam the drawer shut. Stacked sheets may collapse and they cannot be transported correctly.

Be careful not to let your fingers be caught when pushing the drawer into this equipment. This could injure you.

2

HOW TO MAKE COPIES

This chapter explains the basic copying procedures.

Placing Originals	
Placing Originals	
Forgery prevention function	
Placing originals on the original glass	
Book-type originals	
Using the RADF (Reversing Automatic Document Feeder, optional)	
Making Copies	
Basic copying procedure	
Scanning the next original during copying	
Interrupting copying and making other copies	
Proof copy	
Selecting exit tray	
Bypass Copying	
Bypass copying on standard size paper	
Bypass copying on non-standard size paper	

Placing Originals

Acceptable originals

When the RADF (Reversing Automatic Document Feeder, optional) is used, 2-sided originals can be automatically scanned one sheet after another. When the original glass is used, originals such as OHP films, tracing paper, booklet or 3-dimensional objects, that cannot be placed on the RADF can be scanned, as well as plain paper.

Location	Maximum size	Paper weight	Acceptable sizes for automatic size detection
Original glass	Length: 297 mm (11.69")	_	Other than North America: A3, A4, A4-R, A5-R, B4, B5, B5-R North America: LD, LG, LT, LT-R, ST-R
RADF (optional)	Width: 432 mm (17.01")	1-sided originals: 35 - 157 g/m ² (9.3 - 41.8 lb.) 2-sided originals: 50 - 157 g/m ² (13.3 - 41.8 lb.)	Other than North America: A3, A4, A4-R, A5-R, B4, B5, B5-R, FOLIO North America: LD, LG, LT, LT-R, ST-R, COMP

Notes

- Automatic size detection does not work properly when A/B format originals are used in equipment for North America. It does not work properly when LT format originals are used in equipment other than that for North America.
- Automatic size detection does not work properly when K format paper is used for printing. (K format is a standard paper size in China.)
- Do not place any heavy objects (4 kg (9 lb.) or over) on the original glass and do not press on it with force.
- Be sure to place ST-size or A5-size originals in a landscape direction when using the RADF (optional).
- A maximum of 1000 sheets can be scanned per 1 copy job or up until the embedded memory becomes full.

■ Forgery prevention function

This equipment has a forgery prevention function. Therefore, scan or copy function might not operate correctly.

Placing originals on the original glass

The original glass can be used for originals such as OHP films or tracing paper, as well as plain paper, that cannot be placed on the RADF (optional).

Do not place any heavy objects (4 kg (9 lb.) or over) on the original glass and do not press on it with force. Breaking the glass could injure you.

Raise the Original Cover (optional) or the RADF (optional). 1

Place the original with its face down on the original


Note

Raise it 60 degrees or more so that the size of the original can be detected correctly.

glass and align it with the left rear corner of the glass.

When you copy highly transparent originals

When you copy highly transparent originals such as OHP films or tracing paper, place a blank sheet, which is the same size as the original or larger, over the original.

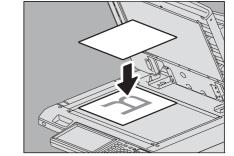


Lower the Original Cover (optional) or the RADF (optional) carefully. 3


Book-type originals

You can place book-type originals on the original glass.

Do not place any heavy objects (4 kg (9 lb.) or over) on the original glass and do not press on it with force. Breaking the glass could injure you.

- **1** Raise the Original Cover (optional) or the RADF (optional).
- **2** Open the desired page of the original and place it with its face down. Align it with the left rear corner of the original glass.

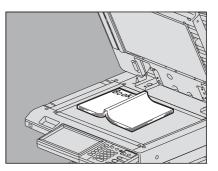

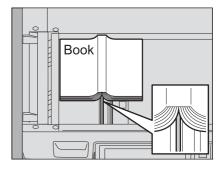

When you make 2-sided copies from book-type originals in modes such as book-type original to 2-sided copying or dual page copying, align the center of the original on the yellow indicator line of the original glass.

P.85 "Making a 2-sided copy from a book-type original"
 P.102 "Dual Page"

3 Lower the Original Cover (optional) or the RADF (optional) carefully.

Notes

- Do not lower the Original Cover (optional) or the RADF (optional) forcibly when the original is very thick. There will be no problem in copying even if it is not fully lowered.
- Do not look directly at the original glass because intensive light may escape during copying.

■ Using the RADF (Reversing Automatic Document Feeder, optional)

Precautions


Do not use the types of originals 1 to 9 shown below because such originals may cause misfeeding or damage to the equipment.

- 1. Badly wrinkled, folded or curled originals
- 2. Originals with carbon paper
- 3. Taped, pasted or cut-out originals
- 4. Originals with multiple perforations such as loose leaf paper
- 5. Clipped or stapled originals
- 6. Originals with holes or tears
- 7. Damp originals
- 8. OHP films or tracing paper
- 9. Coated paper (with wax, etc.)

Use the types of originals 10 and 11 shown below with extra care.

10. Originals which resist sliding with the fingers, or surface-treated originals (The sheets of such originals may not be separated.)

11. Folded or curled originals (They should be fully smoothed out before being used.)

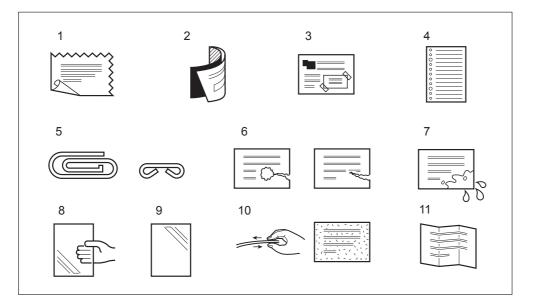

When black streaks appear

If the scanning area or the guide area is dirty, image trouble such as black streaks may occur on printouts. Weekly cleaning of these areas is recommended. For cleaning, refer to the **Quick Start Guide**.

Continuous feed mode

The feeding mode is set at "continuous feed mode" by default. Once you set the originals and then press the [START] button, they are scanned page by page continuously. It is useful when you want to copy more than one original at one time.


1 Align all the originals.

Collate the originals in the order that you want them to be copied. The top sheet of the originals will be copied first.

2 Place the originals with their face up and align the side guides to the original length.

Notes

- Originals up to 100 sheets (35 to 80 g/m² (9.3 to 20 lb.)) 16 mm (0.62") in height are acceptable regardless of their sizes.
- For mixed-size originals, see the following page:
 P.56 "Copying mixed-size originals in one operation"

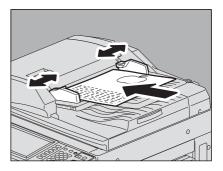


For long originals

Using the original stopper prevents the scanned originals from falling off. Pull it out from the RADF (optional) and raise the sub-stopper.

Note

Lower the sub-stopper and slightly lift the original stopper to push it back in after you have finished using it.

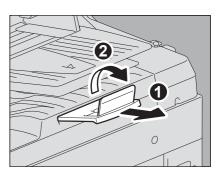

Tip


When there are too many originals to be scanned at one time, divide the originals into several sets before copying. Place the first set of the originals and then press [CONTINUE] on the touch panel while the data of this set are being scanned. When this scanning is finished, place the next set of the originals and press the [START] button on the control panel. (If you press [CONTINUE] just before the originals finish being scanned, this button may not work.)




□ Single feed mode

When the feeding mode is set at "single feed mode", an original is fed automatically as it is placed on the RADF (optional). It is useful when you want to copy only 1 original sheet.

1 Align the side guides to the original length.

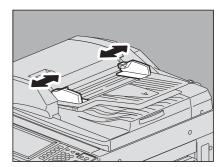

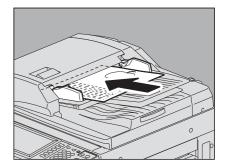


2 Insert the original with its face up and straight along the side guides. The original is automatically pulled in and then the menu of step 3 will

be displayed on the touch panel.

Note

Be sure to let go of the original when it starts being pulled.

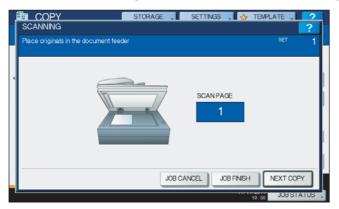

3 If there is another original, insert it in the same way.

4 After all the originals are pulled in, press [JOB FINISH].


Tip

If you want to stop copying, press [JOB CANCEL].

Making Copies

Basic copying procedure

Make copies following the procedure below.

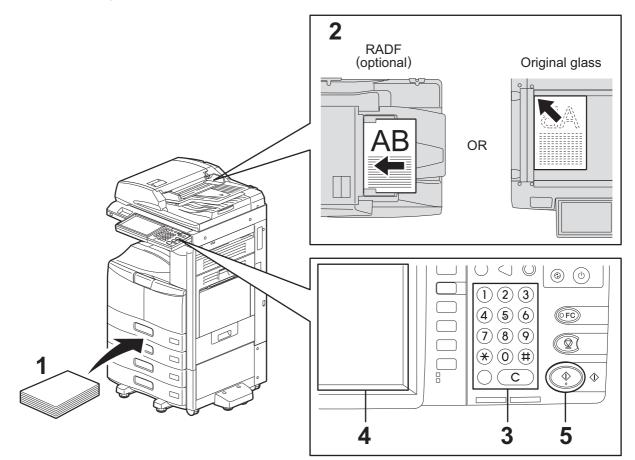

1 Make sure that paper is placed in the drawer(s).

For the types and sizes of acceptable paper and how to place it, see the following pages:

- P.11 "Acceptable copy paper"
- P.12 "Placing paper in drawers"
- P.19 "Placing paper in the Large Capacity Feeder (optional)"

2 Place the original(s).

For the types and sizes of originals and how to place them, see the following pages:

- P.27 "Using the RADF (Reversing Automatic Document Feeder, optional)"
- P.25 "Placing originals on the original glass"
- P.26 "Book-type originals"

3 Key in the desired number of copies if you want more than one copy.

Press the [CLEAR] button on the control panel to delete the number keyed in.

4 Select the copy modes as required.

P.51 "BASIC COPY MODES"
 P.93 "EDITING FUNCTIONS"
 P.135 "IMAGE ADJUSTMENT"



Press the [START] button on the control panel.

Copying starts. The paper exits with its copied side down.

Note

Be careful because the paper exiting area and the paper itself are hot.

The menu shown below may appear when you are using particular modes.

SCANNING Place originals in the docu		SETTINGS , 🛛 🕁	TEMPLATE	2 ? 1
		SCAN PAGE		
	JOB CA		NEXT COPY	_

This menu appears when "SADF (single feed mode)" is set to the document feeder or in modes where the original is placed on the original glass and the scanned data are temporarily stored in the memory, such as sort copying or 1-sided to 2-sided copying. When this menu appears, follow the procedure below.

Tip

There are different messages displayed on the upper part of the menu for when the originals are scanned through the RADF and for when scanning is performed through the original glass.

6 Place the next original, and then press the [START] button on the control panel or [NEXT COPY] on the touch panel.

Scanning starts. (When "SADF (single feed mode)" is set to the document feeder, an original is fed automatically when it is placed on the RADF (optional).)

7 Press [JOB FINISH] on the touch panel after all the originals have been scanned. Copying starts.

Tips


- If you want to stop copying, press [JOB CANCEL].
- When the drawer runs out of paper during copying, another drawer can feed paper instead if it holds paper of the same size and orientation, and copying will not stop. If there is no such drawer, copying stops and "Add paper" appears on the touch panel. In this case, add paper to the drawer.

□ Stopping and restarting copying

1 Press the [STOP] button on the control panel. Copying or scanning stops.



2 Press [JOB CANCEL] on the touch panel to stop copying. Press [NEXT COPY] on the touch panel or the [START] button on the control panel to restart.

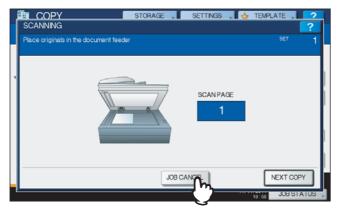


When you press [JOB CANCEL], the scanned data will be deleted and any waiting jobs will be performed.

Tip

Even if you do not press [JOB CANCEL], the scanned data will be deleted by means of the automatic function clear.

Scanning the next original during copying

Even if copying is in progress or "READY (WARMING UP)" is displayed on the touch panel, you can scan the next original (auto job start).

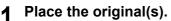

2

Set the number of copy sets and the copy modes as required.


Note

The new job starts in the copy modes that you previously selected unless you select other modes.

? Press the [START] button on the control panel.

Tip

A maximum of 1000 sheets can be scanned per 1 copy job or up until the embedded memory becomes full.

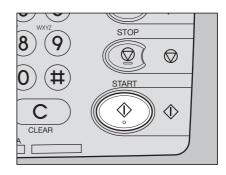

Confirming auto jobs


You can confirm which jobs are in waiting on the touch panel or cancel them as required. For details, see the following page:

P.162 "Confirming Copy Job Status"

Canceling jobs being scanned

Press the [STOP] button on the control panel to stop a job while originals are being scanned.

When you press [JOB CANCEL] on the touch panel or the [FUNCTION CLEAR] button on the control panel while the scanning is being paused, the scanning will end. (In this case, the data which were scanned before the job was paused will be copied.) To restart the scanning, press the [START] button.

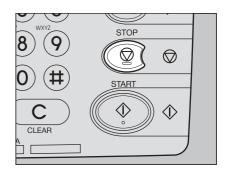


Interrupting copying and making other copies

You can interrupt the copy job in progress to make other copies (interrupt copying). When restarting the interrupted job, you do not have to reselect copy modes that have been set because they are memorized in this equipment.



Tip

- The following functions cannot be used together with interrupt copying: Cover sheet copying, Sheet insertion copying, Job build, Store to e-Filing, Copy & File
- During interrupt copying, the mode cannot be changed to a non-copying one, such as e-Filing, scanning, printing or fax. To change the mode, first press the [INTERRUPT] button to clear the interrupt copying.
- **1 Press the [INTERRUPT] button on the control panel.** "Job interrupted job 1 saved." appears and then the [INTERRUPT] button lights.

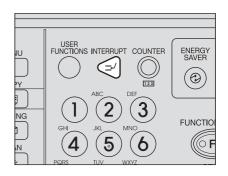

- If the original is being scanned, the message above appears after the scanning has finished.
- **7** Replace the original with a new one.
- 3 Select other copy modes as required and then press the [START] button on the control panel.
- **4 Press the [INTERRUPT] button again after the interrupt copying has finished.** "Ready to resume job 1." appears and the interrupted job restarts.

Proof copy

When you make a large amount of copies, you can check if they will be made exactly as you desire by copying only one page before copying them all (proof copy). Then you can change the modes or settings (e.g. the number of copy sets, receiving tray, page number, time stamp, sort/stapling, hole punching) after checking the proof copy.

Note

If you want to change settings such as the reproduction ratio, density, original mode or 1/2-sided copying, you must finish the proof copy first. Then change these settings and scan the original again.

Place paper in the drawer(s).

Place the original(s).

2 Select the number of copy sets and copy modes.

▲ Press [PROOF COPY] on the touch panel.

"PROOF COPY is set. Press START button to copy." appears for approx. 2 seconds.

COPY	STORAGE S	TTINGS 🔒 🙀 TE	MPLATE 🔋 ?
PROOF COPY is set. Press START button to copy.			SET 6
AUTO	100 % ORG → COPY	SORT	
A4	ZOOM	FINISHING	
A3 A4-R	1→1 SMPLEX	TEXT/PHOTO	AUTO
B4	2-SIDED	ORIGINAL MODE	PROOF COT
BASIC	EDIT	MAGE	
		11/11/201 11:0	JOB STATUS

Note

If [NON-SORT NON-STAPLE] or [GROUP] is selected as a finishing mode, the mode will be changed to [SORT] automatically.

5 Press the [START] button on the control panel.

Scanning starts. 1 set of copies will be printed out.

6 Change the number of copy sets and copy modes as required after checking the proof copy.

Modes or settings such as the number of copy sets, the receiving tray, page number, time stamp, sort/stapling and hole punching can be changed.



Note

If you want to change settings such as the reproduction ratio, density, original mode or 1/2-sided copying, you must finish the proof copy first. Then change these settings and scan the original again. Press [MEMORY CLEAR] on the touch panel or the [FUNCTION CLEAR] button on the control panel to end the proof copy.

7 Press the [START] button on the control panel.

If you did not change the number of copies in step 6 above, the number of copies printed out will be one fewer than that previously set because you have already copied one as a proof copy. (However, if the number of copies you previously set was 1, another set of copies will be printed out besides the proof copy.)

Selecting exit tray


You can select the exit tray if an optional finisher or the Inner Tray is installed.

Notes

- The available exit tray may be restricted depending on copy modes and paper sizes.
- Exit tray selection is set at automatic selection by default.

Changing the exit tray

The exit tray currently selected is displayed on the equipment status indication area. To change the exit tray, press [EXIT TRAY]. Every time you press this, the display changes from the exit tray of the equipment, each exit tray of the finisher and Inner Tray, and automatic selection in this order.

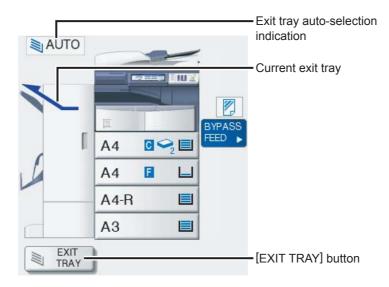

Bypass Copying

When you make copies on OHP film, sticker labels, envelopes or non-standard size paper, place the copy paper on the bypass tray. Bypass copying is also recommended for copying on standard size paper which is not set in any of the drawers.

Tip

If you select the paper size, you can utilize various functions such as the automatic paper selection (APS) or the automatic magnification selection (AMS). For details, see the following page: P.173 "Copying Function Combination Matrix"

Open the bypass tray for bypass copying.


If the paper is large, pull out the paper holder.


When placing or removing copy paper, move the paper holding lever toward the outside. After this, move the paper holding lever back toward the equipment.


When using thick paper for bypass copying, some thick paper may not be fed properly. In this case, turn over the paper and place it again as shown in the figure.

The operating procedure for bypass copying differs depending on the paper size to be used. See the table below for the operating procedure of each size.

38

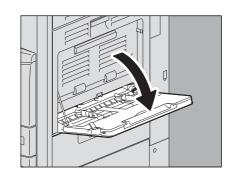

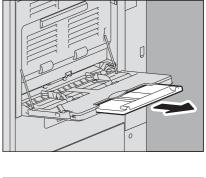

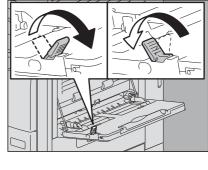



	Paper size	Procedure
Standard size	Other than North America: A3, A4, B4, B5 North America: LD, LT, LG, ST-R	P.39 "Copying on A3, A4, B4 and B5 size paper (in equipment other than for North America) / LD, LT, LG and ST-R size paper (in equipment for North America)"
	Other than the above	P.42 "Copying on other than the above standard sizes of paper"
	Envelope	P.44 "Copying on an envelope"
Others (Non-star	ndard sizes)	P.47 "Bypass copying on non-standard size paper"


Tips

- Bypass copying stops when the paper placed on the bypass tray runs out during copying, even if the paper of the same size is in any of the drawers. Copying restarts when paper is supplied to the bypass tray.
- When bypass copying has been completed, the [FUNCTION CLEAR] button on the control panel blinks. Press this button to switch bypass copying to normal copying using the drawers.
 (Even if you do not press the [FUNCTION CLEAR] button, the bypass copying mode will be cleared when the automatic function clear mode kicks in after a specified period of time.)

Bypass copying on standard size paper

□ Copying on A3, A4, B4 and B5 size paper (in equipment other than for North America) / LD, LT, LG and ST-R size paper (in equipment for North America)


- Place the original(s).
- 2 Move the paper holding lever toward the outside. Place paper with its copy side down on the bypass tray.

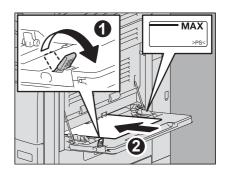

Notes

- The height of the paper must not exceed the indicator on the side guides.
- When you use more than one sheet of paper, fan the sheets well before placing them on the bypass tray. Be careful not to cut your fingers when fanning.
- Do not push paper into the entrance of the bypass feeder. This could cause a paper jam.
- 3 Align the side guides to the paper length while holding the tab. Move the paper holding lever toward the equipment.

When paper is placed, the menu for bypass copying appears.

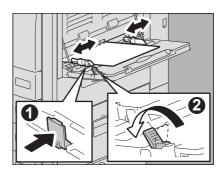

4 Select the same size button under "COPY" as that of the paper you placed on the bypass tray.



The paper size is now set.

Note

If the paper size is not selected in this step, copying may be slowed down.

5 Press [PAPER TYPE] on the touch panel if the paper type of the paper you placed on the bypass tray is other than plain paper.

	STOP	RAGE SETT	rings 🔒 🕁 te	MPLATE
Ready for bypass fee	eding.			<mark>?</mark> ^{SET} 1
AMS		ORIGINAL		COPY A4
25%	100 _%	A3		A3
50%	LIP UP	84		B4
100%	DOWN	A5		A5
200%		OTHER	SIZE SETTING >	OTHER
400%		MIXED SIZE		CUSTOM PAPER
PAPER TYPE		RESET	CANCEL	ОК
			11	JOB STATUS

6 Press the button of the same paper type as the paper you placed on the bypass tray. Then press [OK].

BYPASS FEED	STORAGE S	SETTINGS , 🛛 🧹	TEMPLATE	?
Select Paper Type for By	ass Feed.		SET	1
PLAN (64-106g/m ⁵) TRANS- PARENCY	THIN (152-653/10 ⁺⁷) ENVELOPE	THICK 2 (164-299g/m²)	THICK 3 (210-256g/m ²)	
		CANCEL	ОК	\mathbf{w}
			JUB JUB	2/5

Notes

- If you select a wrong paper type, this could cause a paper jam or significant image trouble.
- When you select a paper type, you can confirm it with the icons displayed on the equipment status indication area as shown below.



Paper type	lcon	Paper type	lcon
PLAIN	_	THICK 3	 ✓₃
THIN	Ì	TRANSPARENCY	
THICK 1	\$ 1	ENVELOPE	
THICK 2	✓2		

Notes

- Automatic 2-sided copying can be applied to plain paper and THICK 1.
- For OHP films (TRANSPARENCY), only 1-sided copying can be performed.
- For envelopes, only 1-sided copying can be performed on its front side.

7 After setting the paper size and type, press [OK]. The menu returns to the BASIC menu.

8 Select other copy modes as required, and then press the [START] button on the control panel.

Note

When you copy on sheets of OHP film, remove the copied OHP film one sheet at a time as they exit onto the receiving tray. If the sheets of OHP film pile up, they may get curled and may not be projected properly.

Copying on other than the above standard sizes of paper

- **1** Place the original(s) and paper in the same procedure noted in steps 1 to 3 in "Copying on A3, A4, B4 and B5 size paper (in equipment other than for North America) / LD, LT, LG and ST-R size paper (in equipment for North America)" (D P.39)
- **2** Press [SIZE SETTING] on the touch panel.

Z		STOR	AGE SETT	rings 🔒 🍲 te	MPLATE 2
Re	eady for bypass fee	eding.			SET 1
			ORIGINAL		COPY
	AMS		A4		A4
1	25%	100 _%	A3		A3
	50%	LUP	B4		B4
ιĈ	100%	DOWN	A5		A5
1	200%		OTHER	SIZE	OTHER
l	400%		MIXED SIZE	U	CUSTOM PAPER
Ī	PAPER TYPE		RESET	CANCEL	ОК
				11:	JUBSTATUS

3 Press the button of the same size as the paper you placed on the bypass tray.

ΟΤ	THER SIZE							?
Sel	lect a paper siz	e for the OTh	HER button				SET	1
	A3	A4	A4-R	A5-R	B4	85	85-A	n -
	LD	LG	LT	LT-R	ST-R	13"LG	COMP	i I
	FOLIO	85SQ	8K	16K	16K-R	A6-R	CHO-3	i 🗌
	YOU-4	COM10	MONARCH	DL				·]
				- M	· •			
-				V		NCEL		
						INCEL		

The selected size will be registered as an "OTHER" size.

▲ Press [OTHER] under "COPY".


Ready for bypass f	feeding.			
		ORIGINAL		COPY
AMS		A4		A4
25%	100 %	A3		A3
50%	LUP	B4		B4
100%	DOWN	A5		A5
200%		OTHER (LT-R)	SIZE SETTING +	OTHER (LT-R)
400%		MIXED SIZE		CUSTOM P

The paper size is now set to the one registered as "OTHER" size.

Note

If the paper size is not selected in this step, copying may be slowed down.

5 Press [PAPER TYPE] if the paper you placed on the bypass tray is other than plain paper.

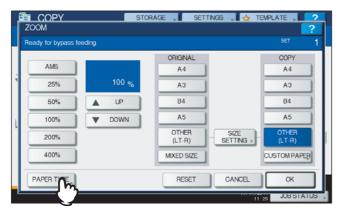

6 Press the button of the same paper type as the paper you placed on the bypass tray. Then press [OK].

1	COPY STORAGE SETTINGS & TEMPLATE
٦.	BYPASS FEED ?
	Select Paper Type for Bypass Feed. SET 1
1	PLAN THN THICK 1 THICK 2 THICK 3
	(64-105g/m ²) (52-63g/m ²) (106-163g/m ²) (164-209g/m ²) (210-256g/m ²)
L	TRANS- PARENCY ENVELOPE
	CANCEL OK OL

Notes

- If you select a wrong paper type, this could cause a paper jam or significant image trouble.
- When you select a paper type, you can confirm it with the icons displayed on the equipment status indication area. For details, see the following page:
 - Table in step 6 in "Copying on A3, A4, B4 and B5 size paper (in equipment other than for North America) / LD, LT, LG and ST-R size paper (in equipment for North America)"(P.39)

7 After setting the paper size and paper type, press [OK].

The menu returns to the BASIC menu.

8 Select other copy modes as required, and then press the [START] button on the control panel.

Copying on an envelope


Notes

- The acceptable envelope sizes are as follows: DL (110 mm x 220 mm), COM10 (4 1/8" x 9 1/2"), Monarch (3 7/8" x 7 1/2"), CHO-3 (120 mm x 235 mm), YOU-4 (105 mm x 235 mm)
- Refer to the Quick Start Guide for the recommended envelopes.

Notes for using an envelopes

Do not use the following envelopes as they may cause paper jamming or damage to the equipment.


- 1. Badly curled, wrinkled or folded envelopes
- 2. Extremely thick or thin envelopes
- 3. Wet or damp envelopes
- 4. Torn envelopes
- 5. Envelopes which include the contents
- 6. Non-standard size envelopes (ones with a special shape)
- 7. Envelopes with eyelets or windows
- 8. Envelopes sealed with adhesive paste or tape
- 9. Partly-opened or perforated envelopes
- 10. Envelopes with special coating on the surface
- 11. Envelopes with glue or double-sided adhesive tape

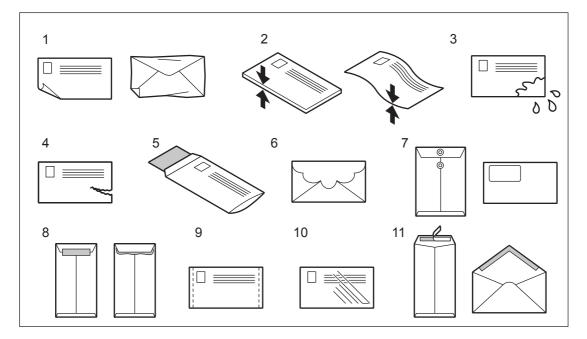

Note

Store envelopes at room temperature and away from heat and moisture.


Place the original on the original glass.

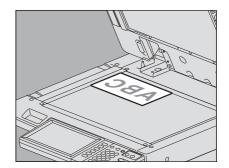

2 Place the envelope on a flat clean surface and press it with your hands in the direction of the arrow to expel any air.

Press it well to prevent the flap from rolling upward.

Correct any bent corners on the envelope.

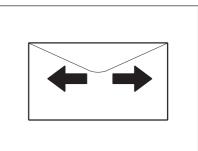

3 Move the paper holding lever toward the outside. Place the envelope with its face down on the bypass tray.

Place the envelope with its flap side at the front.


Note

Do not make a copy on the back of the envelope. This may cause a paper jam or soil the copy paper or the inside of the equipment.


4 Align the side guides to the length of the envelope while holding the tab. Move the paper holding lever toward the equipment.

When the envelope is placed, the menu for bypass copying appears.



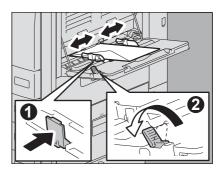

5 Press [SIZE SETTING] on the touch panel.

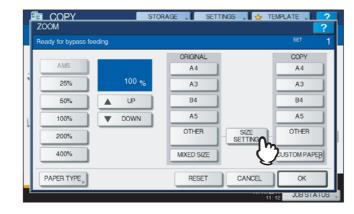

6 Press the button of the same size as the envelope you placed on the bypass tray.



The size of the selected envelope will be registered as an "OTHER" size.

7 Press [OTHER] under "COPY".

tdy for bypass f	leeding.			SET
		ORIGINAL		COPY
AMS		A4		A4
25%	100 _%	A3		A3
50%	LIP UP	84		B4
100%	DOWN	A5		A5
200%		OTHER (MONARCH)	SIZE SETTING ⊩	OTHER (MONARC)
400%		MIXED SIZE		CUSTOM PAR

The paper size is now set to the size of the envelope placed on the bypass tray. The paper type is automatically set to [ENVELOPE].

8 Select other copy modes as required, and then press the [START] button on the control panel.

Copying starts. When the Finisher MJ-1101 (optional) or the Saddle Stitch Finisher MJ-1106/MJ-1033 (optional) is installed, the envelope exits to the exit tray of the equipment.

When the Inner Finisher MJ-1032 (optional) is installed, the envelope exits to the receiving tray of the finisher.

Note

Every 10 copies, take the envelopes out from the exit tray.

Bypass Copying 47

2

Bypass copying on non-standard size paper

You can use non-standard size paper within the sizes shown on the right.

- **1** Place the original on the original glass.
- 2 Move the paper holding lever toward the outside. Place paper with its copy side down on the bypass tray.

Notes


- The height of the paper must not exceed the indicator on the side guides.
- When you use more than one sheet of paper, fan the sheets well before placing them on the bypass tray. Be careful not to cut your fingers when fanning.
- Do not push paper into the entrance of the bypass feeder. This could cause a paper jam.
- **3** Align the side guides to the paper length while holding the tab. Move the paper holding lever toward the equipment.

When paper is placed, the menu for bypass copying appears.




	s feeding.			0.0001/
AMS		ORIGINAL		COPY
Amo		A4		A4
25%	100 _%	A3		A3
50%	L UP	B4		84
100%	DOWN	A5		A5
200%	i —	OTHER	SIZE SETTING >	OTHER
400%	ĵ –	MIXED SIZE		



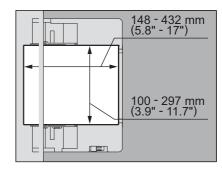




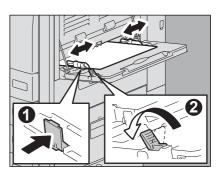


5 Key in the dimension.

- 1) Press [Length] and key in the value. (100 mm to 297 mm (3.94" to 11.69"))
- 2) Press [Width] and key in the value. (148 mm to 432 mm (5.83" to 17.01"))
- 3) Press [OK].

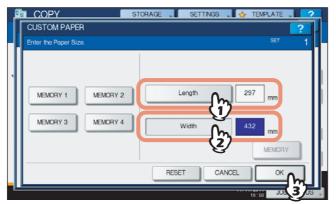

Length and width are indicated as shown on the right:

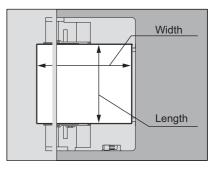


To call up the dimension data registered previously, press the desired button from [MEMORY 1] to [MEMORY 4], and then press [OK].

1		STORAGE SETTINGS 🖕 🕁 TEMPLATE 📃 🤦
	CUSTOM PAPER	?.
	Enter the Paper Size.	SET 1
	MEMORY 1 MEMORY 2 MEMORY 3 MEMORY 4	Width 300 mm MEMORY RESET CANCEL OK
_		10:50 JOB 2 05

Tip

To register dimension data into the memory, see the following page: \square P.49 "Registering non-standard size in the memory"

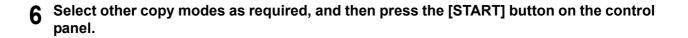

Registering non-standard size in the memory

1 Follow the same procedure noted in steps 1 to 4 in "Bypass copying on non-standard size paper" (

2 Register dimensions.

- 1) Select a desired memory number.
- 2) Press [Length] and key in the value. (100 mm to 297 mm (3.94" to 11.69"))
- 3) Press [Width] and key in the value. (148 mm to 432 mm (5.83" to 17.01"))
- 4) Press [MEMORY].



3

BASIC COPY MODES

This chapter describes the basic copying functions including how to change the reproduction ratio, how to set sorting modes or how to perform duplex copying.

Before Using Copying Functions	
Default settings	
Confirming the set functions	
Clearing the set functions	
Restrictions on function combinations	53
Paper Selection	
Automatic Paper Selection (APS)	
Selecting desired paper manually	
Copying mixed-size originals in one operation	56
Setting Original Modes	
Density Adjustment	
Enlargement and Reduction Copying	
Automatic Magnification Selection (AMS)	
Specifying both the original size and the copy paper size separately	
Specifying reproduction ratio manually	
Selecting Finishing Mode	
Finishing modes and optional finishing devices	
Sort/Group mode	70
Rotate sort mode	72
Staple sort mode	
Magazine sort / Center fold / Saddle stitch	
Hole punch mode	
Manual staple mode	81
Duplex Copying	
Making a 1-sided copy	83
Making a 2-sided copy	
Making a 2-sided copy from a book-type original	85
Performing Copy & File	
Setting share folder	

Before Using Copying Functions

Default settings


This equipment is under its "default settings" when the power is turned ON, namely, if no setting change has been applied yet, the equipment's settings return to the default ones when the energy saving mode is cleared or the [FUNCTION CLEAR] button on the control panel is pressed. The default settings for basic copy modes at installation are shown below.

ltem	Default setting
Reproduction ratio	100%
Copy quantity	1
Paper selection	Automatic Paper Selection (APS)
Simplex/Duplex	1-sided original -> 1-sided copy
Density adjustment	Automatic adjustment
Original mode	TEXT/PHOTO
Finishing mode	When using the original glass: NON-SORT NON-STAPLE When using the RADF (Reversing Automatic Document Feeder, optional): SORT
Feeding mode when using the RADF (optional)	Continuous feed mode

The default settings are changeable. For details, refer to the MFP Management Guide.

Confirming the set functions

If you press [SETTINGS] on the touch panel, the menu shown below is displayed. On this menu, you can view the functions that are currently set.

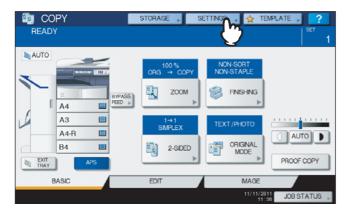



Switching to the function setting menu

To change the functions on the current menu, press the corresponding buttons. The desired setting menu will then appear.

Clearing the set functions

If you want to clear any copy function setting, press [RESET] on the corresponding setting menu.



Clearing all settings changed

When you press the [FUNCTION CLEAR] button on the control panel, all the function changes will be cleared. Even if you do not do so, the changes will be cleared if the equipment is left idle for 45 sec. (default setting). For how to change this period, refer to the *MFP Management Guide*.

Restrictions on function combinations

Several copy functions can be used together. However some functions may not be used with other ones. For details, see the following page:

P.173 "Copying Function Combination Matrix"

Paper Selection

Automatic Paper Selection (APS)

This equipment detects the size of an original and selects paper of the same size automatically. This function is called Automatic Paper Selection (APS).

Tips

- For the original sizes detectable, see the following page:
 P.24 "Acceptable originals"
- Some original sizes may not be detected with this function. In this case, select the desired size manually. P.55 "Selecting desired paper manually"
- Place paper in the drawer(s).

Place the original(s).

? Press [APS] on the touch panel.

💼 COPY	STORAGE 🔎 SETTINGS 🗼 👷 TEMPLATE 🔎 ?
READY	SET
AUTO	
A3 A4-R	1→1 SMPLEX TEXT/PHOTO
B4	2-SIDED ORIGINAL MODE
	PROOF COPY
BASIC	EDIT MAGE
	11/11/2011 JOB STATUS , 11:38

The paper selection mode is now set at Automatic Paper Selection.

Tips

- The paper selection mode is set at Automatic Paper Selection by default.
- Even if the direction of the paper placed in the selected drawer differs from that of the original, this
 equipment rotates the data of the original by 90 degrees to make copies as long as their sizes are the same.
 (This works on A4, B5 or LT paper only.) For example, when an A4 original is placed in a portrait direction
 and A4-R paper is placed in the drawer, the data of the A4 original will be rotated and copied correctly on
 A4-R paper.

Note

If "Change direction of original" or "CHANGE DRAWER TO CORRECT PAPER SIZE", "CHANGE DRAWER TO CORRECT PAPER SIZE PLACE LAST ORIGINAL" appears, follow the directions.

Select other copy modes as required, and then press the [START] button on the control panel.

Selecting desired paper manually

You need to select paper by yourself when copying the following originals whose sizes cannot be detected correctly:

- Highly transparent originals (e.g. OHP film, tracing paper)
- Totally dark originals or originals with dark borders
- Non-standard size originals (e.g. newspapers, magazines)

Tip

3


When paper of the size you want to use is not in any drawer, place it in a drawer or on the bypass tray. P.12 "Placing paper in drawers"

P.38 "Bypass Copying"

1 Place paper in the drawer(s).

When using bypass copying, be sure to set the paper size.

2 Place the original(s).

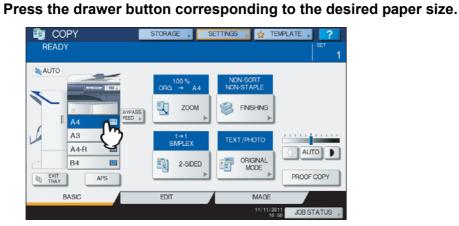

4 Select other copy modes as required, and then press the [START] button on the control panel.

Copying mixed-size originals in one operation

You can copy a set of originals whose sizes are individually different, using the RADF (Reversing Automatic Document Feeder, optional).


The original sizes that can be mixed are as follows: North America: LD, LG, LT, LT-R, COMP Other than North America: A3, A4, A4-R, B4, B5, FOLIO

1 Place paper in the drawer(s).


The bypass tray cannot be used. Use the drawers.

2 Adjust the side guides to the widest original, and then align the originals against the side guide on the front side.

When original widths are the same

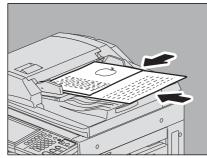

When original widths are not the same

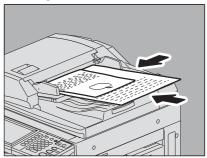


Note

When copying originals of different widths, the copied image of the smaller one may be skewed because it does not touch the side guide on the rear side.



3 Press [ZOOM] on the touch panel.

4 Press [MIXED SIZE].

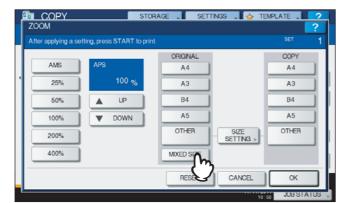

5 Press [AMS] to make copies on paper in one size. To make copies on paper of the same size as the originals, press [OK] or [CANCEL] so that the menu returns to the BASIC menu, and then press [APS].
When (AMO) is substant.

When [AMS] is selected:

	STO	RAGE SETT	rings 🚬 🖕 tei	MPLATE 2
Align the originals	on the front side.			SET 1
AMS On	AMS	ORIGINAL A4		COPY A4
25%) 100 %	A3		A3
50%	LIP	84		B4
100%	DOWN	A5		A5
200%		OTHER	SIZE SETTING >	OTHER
400%	J	MIXED SIZE		
		RESET	CANCEL	ОК
			10:5	JOBSTATUS

Notes

- In the Automatic Magnification Selection, copy images cannot be enlarged from A4 (portrait), B5 (portrait) or LT (portrait) to A3 (landscape), B4 (landscape), LD (landscape) or LG (landscape). In this case, place A4, B5 or LT originals in a landscape direction.
- Before you use Automatic Paper Selection, be sure that all paper sizes corresponding to the original sizes have been placed in the drawers.

6 Select other copy modes as required, and then press the [START] button on the control panel.

Note

If "Change direction of original" appears while scanning is in progress, remove the original from the RADF (optional) and change its direction accordingly.

Setting Original Modes

You can make copies with the optimal image quality by selecting the following modes for your original.

TEXT/PHOTO: Originals with text and photographs mixed **TEXT:** Originals with text (or text and line art) only **PHOTO:** Originals with photographs **COLOR DOCUMENT:** Color originals, such as presentation documents

Note

When "COLOR DOCUMENT" is set, the reproduction ratio is changeable from 25 to 400%.

Tip

TEXT/PHOTO is set by default.

1 Press [ORIGINAL MODE] on the touch panel.



2 Select the original mode, and then press [OK].



Density Adjustment

This equipment detects the density level of originals and automatically adjusts the density level of the copied image to the optimal one. Alternatively, you can manually adjust it to the desired level.

Adjusting automatically (automatic density adjustment)

Press [AUTO] on the touch panel.



Tip

The automatic density adjustment is set by default at installation.

Adjusting manually

Press either \bigcirc or \bigcirc to select the desired density level.



Enlargement and Reduction Copying

You can change the reproduction ratio of copied images in the following procedures:

Automatic Magnification Selection (AMS):

You need to specify the copy paper size in advance. Then this equipment will detect the original size and automatically select the optimal reproduction ratio for the copy paper size.

Specifying both original size and copy paper size separately:

You need to specify both the original size and the copy paper size separately in advance. According to the sizes you specified, the optimal reproduction ratio is selected automatically. This feature is used when Automatic Magnification Selection is not available, such as when copying OHP film originals.

Specifying reproduction ratio manually:

You can select the desired reproduction ratio by pressing [ZOOM] or one-touch zoom buttons on the touch panel.



The available range of reproduction ratio differs depending on whether the original is placed on the original glass or on the RADF (Reversing Automatic Document Feeder, optional).

Original glass: 25 to 400% RADF: 25 to 200%

Automatic Magnification Selection (AMS)

Specify the copy paper size in advance so that this equipment will detect the original size and automatically select the optimal reproduction ratio to the copy paper size.

This function is available when the size of the originals is as follows:

North America: LD, LG, LT, LT-R, ST-R and COMP (COMP is available only when the RADF is used.)

Other than North America: A3, A4, A4-R, A5-R, B4, B5, B5-R, FOLIO (FOLIO is available only when the RADF is used.)



This function does not work properly for the originals noted below. Select other methods when copying them.

- Highly transparent originals (e.g. OHP film, tracing paper)
- · Totally dark originals or ones with dark borders
- Non-standard size originals (e.g. newspapers, magazines)

Place paper in the drawer(s).

Press [ZOOM] on the touch panel.



3 Select the desired paper size, press [AMS] and then [OK].

	IOM MODE, please press t	ORIGINAL		COPY
AMS	AMS	A4		A4
25% 2)	100 %	A3		A3
50%	LUP	B4		B4
100%	V DOWN	A5		A5
200%		OTHER	SIZE SETTING >	OTHER
400%		MIXED SIZE	OLTING P	

Tips

 If you want to select a paper size other than the following, you need to register the size as "OTHER". Once you register this size, it will be specified every time you press [OTHER] on the touch panel. North America: LD, LG, LT, ST

Other than North America: A3, A4, B4, B5

For how to register, see the following page:

P.63 "Registering paper sizes to "OTHER" size"

 Paper sizes can also be registered by pressing the desired drawer button of the equipment status indication area on the BASIC menu.

▲ Place the original(s).

If the original is placed on the original glass, the reproduction ratio is set when the original is placed. If the original is placed on the RADF (optional), the reproduction ratio is set when the original is scanned.

Note

If "Change direction of original" appears, change it accordingly.

Select other copy modes as required, and then press the [START] button on the control panel.

Specifying both the original size and the copy paper size separately

- **1** Place paper in the drawer(s).
- **2** Place the original(s).
- **3** Press [ZOOM] on the touch panel.



▲ Select the desired sizes for the original and copy paper, and then press [OK].

ZOOM	STOR		is 🚬 🖕 Te	MPLATE	?
After setting the ZC	OOM MODE, please press the	9 OK button.		SET	1
AMS		ORIGINAL A4		COPY A4	
25%	86 %	A3 B4	<u></u> კ	A3 B4	(c)
100%	DOWN	A5 OTHER	SIZE	A5 OTHER	Ĭ
400%		MIXED SIZE	SETTING .		ין
		RESET	CANCEL	Ск	J.
			10:8	JOBR	зЛ

Tips

• If you want to select a size other than the following for the original size and copy paper size, you need to register the size as "OTHER". Once you register this size, it will be specified every time you press [OTHER] on the touch panel.

North America: LD, LG, LT, ST

Other than North America: A3, A4, B4, B5

For how to register, see the following page:

P.63 "Registering paper sizes to "OTHER" size"

• Paper sizes can also be registered by pressing the desired drawer button of the equipment status indication area on the BASIC menu.

5 Select other copy modes as required, and then press the [START] button on the control panel.

□ Registering paper sizes to "OTHER" size


If you want to select a size other than the following for the original size and copy paper size, you need to register the size as "OTHER" following the procedures below. Once you register this size, it will be specified every time you press [OTHER] on the touch panel. North America: LD, LG, LT, ST

Other than North America: A3, A4, B4, B5



You can register only standard sizes as [OTHER] and cannot register any non-standard sizes.

Press [SIZE SETTING] on the touch panel.

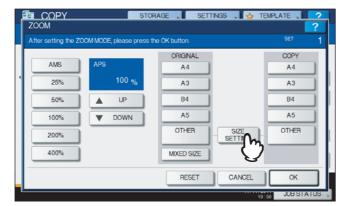

2 Select the desired size.

Sele	ct a paper siz	e for the OTH	HER button.				SET
	A3	A4	A4-R	A5-R	84	85	B5-R
	LD	LG	LT	LT-R	ST-R	13°LG	COMP
	FOLIO	8.5SQ	8K	16K	16K-R	A6-R	CHO-3
	YOU-4	COM10	MONARCH				
				-{m)		

The selected size will be registered as an "OTHER" size.

Specifying reproduction ratio manually

- **1** Place paper in the drawer(s).
- **2** Place the original(s).
- **3** Press [ZOOM] on the touch panel.



▲ Press the buttons below to select the desired reproduction ratio.

[▲ UP] and [▼ DOWN] buttons


The reproduction ratio changes by 1% every time either of them is pressed. When you hold either down, the ratio goes up or down automatically.

One-touch zoom buttons

Select the desired ratio from [400%], [200%], [100%], [50%] and [25%].

Note

When the RADF (optional) is used, the maximum ratio available is 200%.

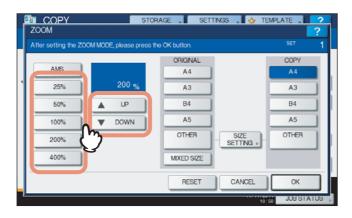

5 Select the desired size, and then press [OK].

AMS		ORIGINAL		COPY
	000	A4		A4
25%	200 %	A3		A3
50%	▲ UP	84		B4
100%	DOWN	A5		A5
200%		OTHER	SIZE SETTING >	OTHER
400%		MIXED SIZE		

Tips

 If you want to select a paper size other than the following, you need to register the size as "OTHER". Once you register this size, it will be specified every time you press [OTHER] on the touch panel. North America: LD, LG, LT, ST
 Other than North America: A3, A4, B4, B5
 For how to register action to following page:

For how to register, see the following page:

P.63 "Registering paper sizes to "OTHER" size"

• Paper sizes can also be registered by pressing the desired drawer button of the equipment status indication area on the BASIC menu.

6 Select other copy modes as required, and then press the [START] button on the control panel.

Selecting Finishing Mode

Finishing modes and optional finishing devices

See the table below for each finishing mode.

Finishing mode	Description
Non-sort Non-staple	Copies exit without being sorted or stapled.
Sort (🕮 P.70)	Copies exit in the same page order as the originals one set after another.
Group (🕮 P.70)	Copies grouped by page exit.
Rotate sort (P.72)	Copies exit set by set alternately in a different direction.
Staple sort (P.73)	Copies exit with their corner stapled.
Magazine sort (C P.76)	Copies exit in a book-type page order.
Center fold (P.76)	Copies exit in a book-type page order with their center folded.
Saddle stitch (P.76)	Copies exit in a book-type page order with their center folded and stapled.
Magazine sort & center fold (P.76)	Magazine sort and center fold are used together.
Magazine sort & saddle stitch (III P.76)	Magazine sort and saddle stitch are used together.
Hole punch (P.80)	Copies exit with their side punched.
Manual staple (🕮 P.81)	Copies are stapled manually.

The available finishing modes differ depending on the type of optional finishing devices (Finisher, Hole Punch Unit and Inner Tray) installed. Finishing devices available for this equipment are as follows:

Finisher

- Finisher MJ-1101
- Saddle Stitch Finisher MJ-1106
- Inner Finisher MJ-1032
- Saddle Stitch Finisher MJ-1033

Hole Punch Unit

- Hole Punch Unit MJ-6103 (for the Finisher MJ-1101 and the Saddle Stitch Finisher MJ-1106)
- Hole Punch Unit MJ-6007 (for the Inner Finisher MJ-1032)
- Hole Punch Unit MJ-6008 (for the Saddle Stitch Finisher MJ-1033)

Inner Tray

Job Separator MJ-5006

Tip

The Inner Tray cannot be installed if the Inner Finisher MJ-1032 is installed.

Check the finishing modes enabled with each finishing device.


	Devices					
Finishing mode	MJ-1101 & MJ-6103	MJ-1101	MJ-1106 & MJ-6103	MJ-1106	MJ-1032 & MJ-6007	MJ-1032
Non-sort Non-staple	Yes	Yes	Yes	Yes	Yes	Yes
Sort	Yes	Yes	Yes	Yes	Yes	Yes
Group	Yes	Yes	Yes	Yes	Yes	Yes
Rotate sort	Yes	Yes	Yes	Yes	Yes	Yes
Staple sort	Yes	Yes	Yes	Yes	Yes	Yes
Magazine sort	Yes	Yes	Yes	Yes	Yes	Yes
Center fold	_	_	Yes	Yes		_
Saddle stitch	_		Yes	Yes		
Magazine sort & center fold	—		Yes	Yes	_	
Magazine sort & saddle stitch	_	_	Yes	Yes	_	_
Hole punch	Yes	—	Yes	—	Yes	_
Manual staple	Yes	Yes	Yes	Yes	_	_

	Devices				
Finishing mode	MJ-1033 & MJ-6008	MJ-1033	MJ-5006	No device	
Non-sort Non-staple	Yes	Yes	Yes	Yes	
Sort	Yes	Yes	Yes	Yes	
Group	Yes	Yes	Yes	Yes	
Rotate sort	Yes	Yes	Yes	Yes	
Staple sort	Yes	Yes	—	—	
Magazine sort	Yes	Yes	Yes	Yes	
Center fold	—	_	_		
Saddle stitch	Yes	Yes	—	—	
Magazine sort & center fold	—	—	—	—	
Magazine sort & saddle stitch	Yes	Yes	—		
Hole punch	Yes	—	_	_	
Manual staple	_	—	—		


3

□ Name of each part of the finishers (optional)


MJ-1101

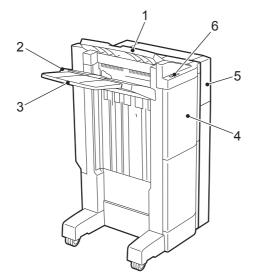

MJ-1106

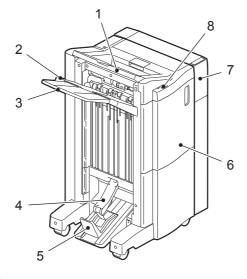

MJ-1032

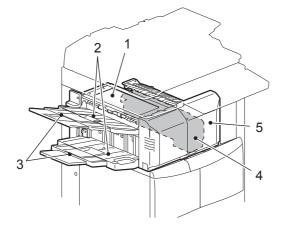


- 1. Upper receiving tray
- 2. Lower receiving tray
- 3. Sub-tray
- 4. Front cover
- 5. Hole Punch Unit MJ-6103
- 6. Stapling control section

- 1. Upper receiving tray
- 2. Lower receiving tray
- 3. Sub-tray
- 4. Saddle stitch tray
- 5. Stopper
- 6. Front cover
- 7. Hole Punch Unit MJ-6103
- 8. Stapling control section

- 1. Upper cover
- 2. Receiving tray
- 3. Sub-tray
- Hole Punch Unit MJ-6007
 Front cover

MJ-1033

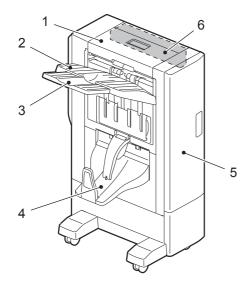


- 1. Upper cover
- 2. Tray

- Sub-tray
 Saddle stitch tray
 Front cover
 Hole Punch Unit MJ-6008

□ Name of each part of the Inner Tray (optional)

MJ-5006

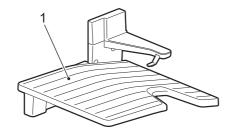


1. Tray


Sort/Group mode

When you make more than one set of copies, they can be made to exit in the same page order as that of the originals. This mode is called the sort mode. Copies can also be made to exit grouped by page. This mode is called the group mode.

Sort mode

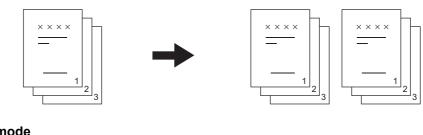

Group mode

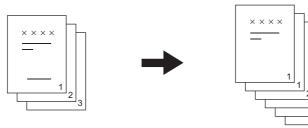

Tip

When you use large-size paper, such as A3, B4, LD and LG, pull out the sub-tray in advance so that the copied paper will not fall off and will be sorted neatly.

Place paper in the drawer(s).

2 Place the original(s).


Tip

When you place originals on the RADF (Reversing Automatic Document Feeder, optional), the display of the sorting mode button will change to "SORT".

3 Press [FINISHING] on the touch panel.

🛅 COPY	STORAGE SE	ettings 🗼 🙀 template 🖡 ?
READY		^{SET} 1
A4	>>	
A3 A4-R B4	1→1 SMPLEX 2-SIDED	
EXIT APS	• •	PROOF COPY
BASIC	EDIT	MAGE
		11/11/2011 JOB STATUS 📡


4 Select [SORT] or [GROUP], and then press [OK].

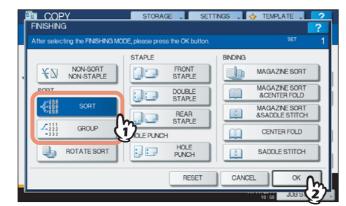

- **5** Key in the desired number of copies.
- 6 Select other copy modes as required, and then press the [START] button on the control panel.

Rotate sort mode

When you make more than one set of copies, one set can be made to exit on top of another set, alternating in portrait and landscape directions. This mode is called the rotate sort mode. Use 2 drawers and 2 stacks of paper of the same size. Place one stack of paper in one drawer in a portrait direction and place the other in another drawer in a landscape direction before you start copying.

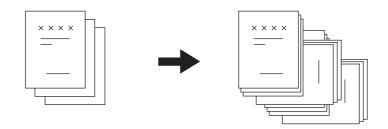

Notes

- A4, B5 and LT sized paper placed on the drawer or bypass tray can be used.
- The rotate sort mode is not available when Automatic Paper Selection is selected.

1 Place paper in the drawer(s).

Tip

Place one stack of paper in one drawer in a portrait direction and place the other in another drawer in a landscape direction.

9 Place the original(s).

3 Press [FINISHING] on the touch panel.



▲ Select [ROTATE SORT], and then press [OK].


	STAPLE	BNDNG
		MAGAZINE SORT
SORT	DOUBLE STAPLE	MAGAZINE SORT &CENTER FOLD
€123 123 SORT	REAR	MAGAZINE SORT &SADDLE STITCH
✓ 111 -333 GROUP	HOLE PUNCH	CENTER FOLD
📙 ROTATE SC	HOLE PUNCH	SADDLE STITCH

- **5** Key in the desired number of copies.
- 6 Select other copy modes as required, and then press the [START] button on the control panel.

Staple sort mode

When you make more than one set of copies, the copied paper can be automatically stapled set by set. This mode is called the staple sort mode. You can choose from 3 different stapling positions.

Example: When [FRONT STAPLE] is selected

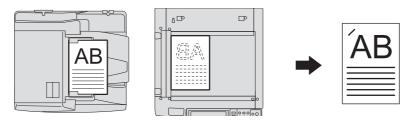

Notes

- Special paper such as OHP film or sticker labels is not applicable.
- Copies in different sizes cannot be stapled. (If the lengths of the copies are the same, they can be stapled.)

Place paper in the drawer(s).

When using bypass copying, be sure to set the paper size.

2 Place the original(s).

3 Press [FINISHING] on the touch panel.



4 Select the desired stapling position from [FRONT STAPLE], [DOUBLE STAPLE] or [REAR STAPLE], and then press [OK].

	STORAGE SETTING	is 🛛 🖕 TEMPLATE 🚬 🔽 🤉
FINISHING		?
After selecting the FINISHI	IG MODE, please press the OK button.	^{SET} 1
	Pro- E	BNDNG
NON-SORT	FRONT STAPLE	MAGAZINE SORT
SORT	DOUBLE STAPLE	MAGAZINE SORT &CENTER FOLD
€123 123 SORT	REAR STAPLE	MAGAZINE SORT &SADDLE STITCH
✓ 111 -222 -333 GROUP	HOLE PUNCH	CENTER FOLD
	F HOLE PUNCH	SADDLE STITCH
	RESET	
		10160 JUBS (2)

5 Select other copy modes as required, and then press the [START] button on the control panel.

Tip

When the number of sheets exceeds the maximum number of sheets available for stapling, this equipment automatically enters into the sort mode.

□ Maximum number of sheets available for stapling

The maximum number of sheets available for stapling differs depending on the type of the finishing device installed, paper size or paper weight.

Finisher MJ-1101

	Paper weight			
Paper size	64 - 80 g/m ² (17 - 20 lb. Bond)	81 - 90 g/m ² (21 - 24 lb. Bond)	91 - 105 g/m ² (25 - 28 lb. Bond)	
A4, B5, LT	50 sheets	30 sheets	30 sheets	
A3, A4-R, B4, FOLIO, LD, LG, LT-R, COMP	30 sheets	15 sheets	15 sheets	

Saddle Stitch Finisher MJ-1106

	Paper weight				
Paper size	64 - 80 g/m ² (17 - 20 lb. Bond)	81 - 90 g/m ² (21 - 24 lb. Bond)	91 - 105 g/m ² (25 - 28 lb. Bond)		
A4 *1, B5, LT *1	50 sheets	30 sheets	30 sheets		
A3, A4-R, B4, FOLIO, LD, LG, LT-R, COMP	30 sheets	15 sheets	15 sheets		

*1 The tray loading capacity is 30 sets.

Inner Finisher MJ-1032 / Saddle Stitch Finisher MJ-1033

	Paper weight				
Paper size	64 - 80 g/m ² (17 - 20 lb. Bond)	81 - 90 g/m ² (21 - 24 lb. Bond)	91 - 105 g/m ² (25 - 28 lb. Bond)		
A4, A4-R, B5, LT, LT-R	50 sheets	50 sheets	30 sheets		
A3, B4, FOLIO, LD, LG, COMP	30 sheets	25 sheets	15 sheets		

Notes

- 2 cover sheets (MJ-1101: 64 to 209 g/m² (17 lb. Bond to 110 lb. Index), MJ-1106: 64 to 209 g/m² (17 lb. Bond to 110 lb. Index), MJ-1032/MJ-1033: 106 to 209g/m² (29 lb. Bond to 110 lb. Index)) can be added. In this case, the number of sheets available includes the 2 cover sheets.
- For the maximum number of sheets loadable on the tray, refer to the Quick Start Guide.


Magazine sort / Center fold / Saddle stitch

You can copy more than one original and bind them in a booklet format (Magazine sort). With the Saddle Stitch Finisher, you can also have the copied booklet folded at its center (Center fold) and stapled (Saddle stitch).

Tip

Center folding can be selected only when the Saddle Stitch Finisher MJ-1106 (optional) is installed.


Magazine sort mode

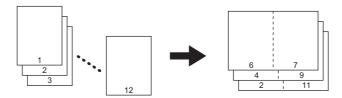


Center fold mode




Saddle stitch mode

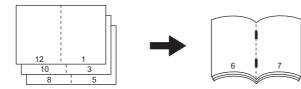

Magazine sort & center fold mode

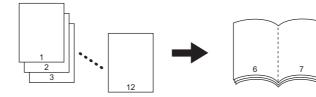

Magazine sort & saddle stitch mode

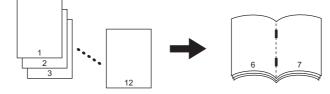

Requirements for center folding Saddle Stitch Finisher MJ-1106

Paper size	Paper weight	Maximum number of sheets available for center folding *1	Maximum number of sets loadable on the saddle stitch tray
A3, A4-R, B4, LD, LT-R, LG	64 - 105 g/m ² (17 - 28 lb. Bond)	25 sheets	 21 - 25 sheets/set: 5 sets 16 - 20 sheets/set: 6 sets 11 - 15 sheets/set: 8 sets 6 - 10 sheets/set: 12 sets Less than 5 sheets/set: 25 sets

*1 1 cover sheet (64 to 256 g/m² (17 lb. Bond to 140 lb. Index)) can be added. In this case the number of sheets per set shall include the cover sheet.

Requirements for saddle stitching Saddle Stitch Finisher MJ-1106

Paper size	Paper weight ^{*1}	Maximum number of sheets available for saddle stitching ^{*2}	Maximum number of sets loadable on the saddle stitch tray
A3, A4-R, B4, LD, LT-R, LG	64 - 90 g/m ² (17 - 24 lb. Bond)	15 sheets	 11 - 15 sheets: 25 sets (10 sets if cover sheets are added) 6 - 10 sheets: 30 sets (15 sets if cover sheets are added) Less than 5 sheets: 50 sets
LD, LI-R, LG	91 - 105 g/m ² (25 - 28 lb. Bond)	10 sheets	6 - 10 sheets: 25 sets (15 sets if cover sheets are added) Less than 5 sheets : 40 sets (30 sets if cover sheets are added)

Saddle Stitch Finisher MJ-1033


Paper size	Paper weight ^{*1}	Maximum number of sheets available for saddle stitching ^{*2}	Maximum number of sets loadable on the saddle stitch tray
	64 - 80 g/m ² (17 - 20 lb. Bond)	15 sheets	11 - 15 sheets: 10 sets 6 - 10 sheets: 15 sets Less than 5 sheets: 20 sets
A3, A4-R, B4, LD, LT-R, LG	81 - 90 g/m ² (21 - 24 lb. Bond)	10 sheets	6 - 10 sheets: 10 sets Less than 5 sheets: 15 sets
	91 - 105 g/m ² (25 - 28 lb. Bond)	10 sheets	6 - 10 sheets: 10 sets Less than 5 sheets : 15 sets

*1 When the paper weights are mixed, take the value of the heavier one.

*2 1 cover sheet (MJ-1106: 64 to 209 g/m² (17 lb. Bond to 110 lb. Index), MJ-1033: 106 to 209g/m² (29 lb. Bond to 110 lb. Index)) can be added. In this case the number of sheets per set shall include the cover sheet.


Tip

When placing portrait originals in a landscape direction as shown on the right in the magazine sort mode, magazine sort & center fold mode or the magazine sort & saddle stitch mode, set the image direction function to ON on the EDIT menu. Otherwise the originals will not be copied in the proper page order. P.125 "Image Direction"

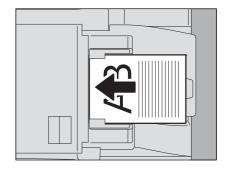

The magazine sort mode can also be selected on the EDIT menu. If you select it on the EDIT menu, you can adjust the binding margin. For details, see the following page:

P.107 "Magazine Sort Mode"

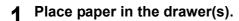

Note

Special paper such as OHP film or sticker labels is not applicable.

2 Select the desired paper size.

A3, A4-R, A5-R^{*1}, B4 or B5-R^{*1} size paper can be used.

*1 A5-R and B5-R are acceptable only for the magazine sort mode.

3 Place the original(s).

When placing the originals on the RADF (optional), place them according to the illustration on the previous page. When placing the originals on the original glass, place them in the following order:

Magazine sort, Magazine sort & center fold, Magazine sort & saddle stitch: Place the first page of the original first.

Center fold, Saddle stitch: For example, if the total number of pages is 12, place pages 1 and 12 together, and then pages 2 and 11, 10 and 3, 4 and 9, 8 and 5, and finally pages 6 and 7.

▲ Press [FINISHING] on the touch panel.

COPY	STORAGE , SE	ETTINGS 🔋 👷 TEMPLATE 🔋 ?
READY		^{SET} 1
AUTO A4 A4 A3 A4-R B4 EA EA EA EA EA EA EA EA EA EA EA EA EA		NON-SOAT NON-STAPLE FINSHING TEXT/PHOTO ORIGINAL MODE PROOF COPY
BASIC	EDIT	MAGE
		11/11/2011 JOB STATUS 📡

5 Select the desired mode from [MAGAZINE SORT], [MAGAZINE SORT & CENTER FOLD], [MAGAZINE SORT & SADDLE STITCH], [CENTER FOLD] or [SADDLE STITCH]. Then press [OK].


After selec	ting the FINISHING M	ODE, please press the OK button.	SET
		STAPLE	anding
×۵	NON-SORT NON-STAPLE	FRONT STAPLE	MAGAZNE SORT
SORT		DOUBLE STAPLE	MAGAZINE SORT &CENTER FOLD
	SORT	REAR STAPLE	MAGAZINE SORT &SADDLE STITCH
✓ 111 2222 -333	GROUP	HOLE PUNCH	CENTER FOLD
b	ROTATE SORT	HOLE PUNCH	SADDLE STITCH

Notes

- [MAGAZINE SORT & SADDLE STITCH] and [SADDLE STITCH] are selectable only when the Saddle Stitch Finisher MJ-1106/MJ-1033 (optional) is installed.
- [MAGAZINE SORT & CENTER FOLD] and [CENTER FOLD] are selectable only when the Saddle Stitch Finisher MJ-1106 (optional) is installed.

- 6 Select other copy modes as required, and then press the [START] button on the control panel.
- 7 Combine the copied paper if the center fold mode or magazine sort & center fold mode is used.

In the center fold mode, paper is folded at the center for every 5 sheets before exiting. If more than 5 sheets of paper are copied, combine them as shown in the figure.

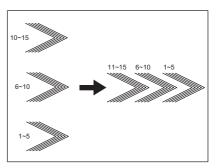

Hole punch mode

You can punch copied paper when the Hole Punch Unit (optional) is installed on the Finisher.

Notes

- Paper whose size is any of A3, A4, A4-R, B4, B5, B5-R, FOLIO, LD, LG, LT, LT-R, ST-R and COMP, and whose weight is 64 to 209 g/m² (17 lb. Bond to 110 lb. Index) (MJ-6103) and 64 to 128 g/m² (17 to 34 lb. Bond) (MJ-6007/MJ-6008) is available.
- Special paper such as OHP film or sticker labels is not applicable.



Place paper in the drawer(s).

When using bypass copying, be sure to set the paper size.

2 Place the original(s).

3 Press [FINISHING] on the touch panel.



▲ Select [HOLE PUNCH], and then press [OK].



5 Select other copy modes as required, and then press the [START] button on the control panel.


Manual staple mode

You can staple copied paper manually without any copying operation. This is useful when you have forgotten to set the staple sort mode before starting copying, or when you want to staple originals. (Available only with the Finisher MJ-1101 or Saddle Stitch Finisher MJ-1106)

Maximum number of she	Maximum number of sheets available for manual stapling						
	Paper weight						
Paper size	64 - 80 g/m ² (17 - 20 lb. Bond)	81 - 90 g/m² (21 - 24 lb. Bond)	91 - 105 g/m² (25 - 28 lb. Bond)				
A4, B5, LT	50 sheets	MJ-1101: 30 sheets MJ-1106: 50 sheets	30 sheets				
A3, A4-R, B4, FOLIO, LD, LG, LT-R, COMP	30 sheets	MJ-1101: 15 sheets MJ-1106: 30 sheets	15 sheets				

Maximum number of sheets available for

Use the buttons on the stapling control section of the Finisher (optional) for manual stapling.

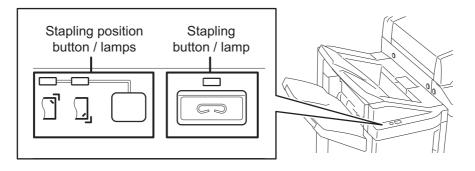


Press the stapling button on the stapling control section.

The shutter of the paper exit area is opened and this equipment enters into the manual staple mode.

Press the stapling position switching button to switch the staple position (front or rear).

Place paper on the lower receiving tray of the Finisher (optional).

Fan and jog the paper well. Place it with its face down. When you staple them at their corner on the front side, place the sheets of paper aligned to the front side. When you staple them on the rear side, place the sheets of paper aligned to the rear side.

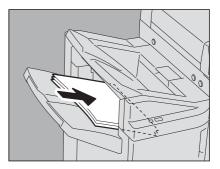

The stapling lamp lights when the paper is properly placed. If it does not light, replace the paper.

Let go of the paper, and then press the stapling button.

Stapling starts. When the stapling position switching lamps start blinking, it means the stapling has finished. Then remove the stapled paper.

▲ CAUTION

Tip

Δ

Be sure that your hands are away from the paper while stapling is in progress.


Finishing the manual staple mode

Remove the stapled paper from the lower receiving tray, and then press the stapling button. The shutter of the paper exit area closes. This means that manual stapling is finished. If no operation is performed for approx. 15 seconds, the manual staple mode will be automatically finished.


Duplex Copying

You can copy a 1-sided original to a 2-sided copy or vice versa, or copy a 2-sided original to a 2-sided copy. This is useful when you want to save the paper, or when you want to copy a book-type original maintaining the same page order.

1-sided original -> 1-sided copy (P.83)

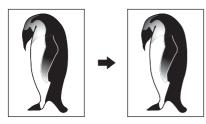


2-sided original -> 1-sided copy (P.83)

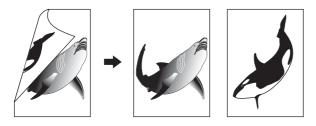


1-sided original -> 2-sided copy (P.84)



2-sided original -> 2-sided copy (P.84)

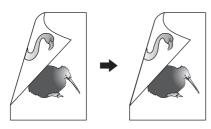

Book-type original -> 2-sided copy (P.85)

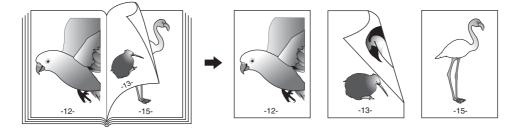


Note

Use plain paper or THICK 1 for duplex copying.

Making a 1-sided copy

Tip

When you copy 2-sided portrait originals which open to the left/right on only 1 side of the paper, use the image direction function on the EDIT menu so that all the copied paper will exit in the proper direction. P.125 "Image Direction"

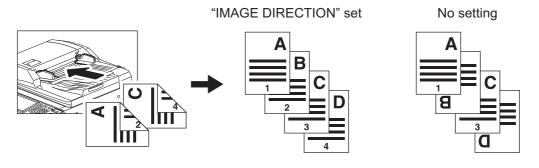


1 Place paper in the drawer(s).

When using bypass copying, be sure to set the paper size.


2 Place the original(s).

3 Press [2-SIDED] on the touch panel.

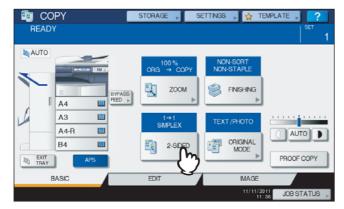

4 Select the desired mode, and then press [OK].

[1->1 SIMPLEX]: 1-sided original to 1-sided copy [2->1 SPLIT]: 2-sided original to 1-sided copy

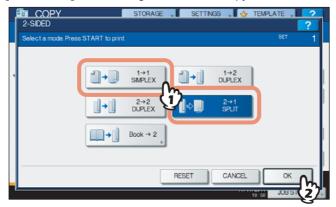


5 Select other copy modes as required, and then press the [START] button on the control panel.

Making a 2-sided copy

Tip

If 1-sided portrait originals have been placed in a landscape direction and you copy them on both sides of the paper, copied sheets are usually in the open to top/bottom direction. You can make copies in the open to left/right direction with the image direction function.



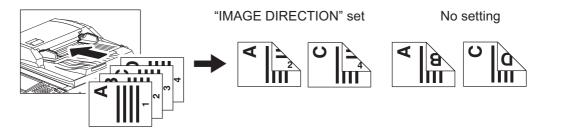

1 Place paper in the drawer(s).

When using bypass copying, be sure to set the paper size.


2 Place the original(s).

3 Press [2-SIDED] on the touch panel.



4 Select the desired mode, and then press [OK].

[1 -> 2 DUPLEX]: 1-sided original to 2-sided copy [2 -> 2 DUPLEX]: 2-sided original to 2- sided copy

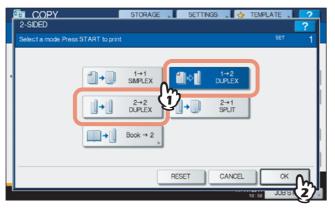

5 Select other copy modes as required, and then press the [START] button on the control panel.

When placing the original on the original glass, follow steps 6 and 7 on 💷 P.30 "Basic copying procedure".

Making a 2-sided copy from a book-type original

You can make 2-sided copies from book-type originals such as books or catalog as in the same page order.

Tip

A4, B5 and LT sizes are applicable.

1 Place paper in the drawer(s).

When using bypass copying, be sure to set the paper size.


2 Press [2-SIDED] on the touch panel.

READ			STORAC	ε, s	ETTING	6 , 🙀 TE	MPLATE
AUTO	A4 A3 A4-R B4	YPASS EED >>	ORG	100 % → COPY ZOOM P 1→1 MPLEX 2-SDED		ON-SORT N-STAPLE FINISHING CT/PHOTO ORIGINAL MODE	
	ASIC		EDIT			MAGE	
						11/11/20 11:3	JOB STATUS


3 Select [Book -> 2].



4 Select the book copying type.

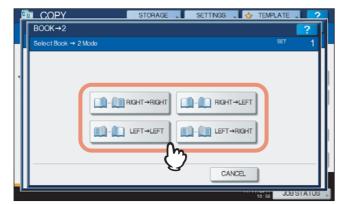

Example: If pages 2 to 6 of a book which opens to the left are to be copied, select [LEFT -> LEFT].

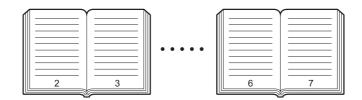

5 Press [OK].

2-SIDED					?
Select a mode. Pi	ess START to print.			SET	1
	1→1 SMPLEX		1→2 DUPLEX		
	G G ON LEA		DOFLER		
	2→2 DUPLEX		2→1 SPLIT		
1					
	Book → 2				
					_
		RESET	CANCEL	OK 🗖	

The menu returns to the BASIC menu.

6 Press the drawer button corresponding to the desired paper size.

Only A4, B5 and LT sizes are applicable.




3

7 Select other copy modes as required.

If the copy needs a binding space, select the book margin mode on the EDIT menu. P.97 "Creating bookbinding margin"

8 Place the original on the original glass.

Place the original with its bottom toward you, aligning its center with the yellow indicator under the original glass.

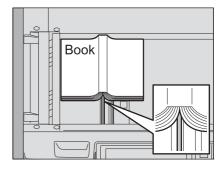


Do not place any heavy objects (4 kg (9 lb.) or over) on the original glass and do not press on it with force.

Breaking the glass could injure you.

9 Press the [START] button on the control panel. Once the pages are scanned, set the next ones on the original glass.

Repeat this step until all the desired pages have been scanned. If the last page is a single page, press [COPY FINAL PAGE] on the touch panel, and then press the [START] button on the control panel to start scanning. The scanned pages will be copied.

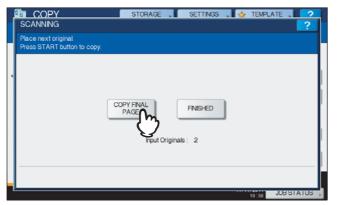

10 When all the pages have been scanned, press [FINISHED]. The scanned pages will be copied.

Performing Copy & File

With the Copy & File function, you can store the copied data in the share folder of the hard disk of this equipment or a specified PC on a network. The data can be stored in any of PDF, TIFF and XPS formats.

Notes

- The "COPY & FILE" function is available only when the Scanner Kit or Printer/Scanner Kit (both optional) is installed.
- The data will be stored as black images. (Resolution: 600 dpi only) The data stored with this function are suited for
 printing but not for being imported as an image into your PC. To obtain the optimal image quality for importing, it is
 recommended to store the data with the Scan to File function of this equipment.
- The network administrator must make settings for Copy & File in advance. For details, refer to the *TopAccess Guide*.
- It is recommended to back up the data stored in the share folder.

Tip

You can store data in an e-Filing box with the Store to e-Filing function. For details, refer to the e-Filing Guide.

Place the original(s).

7 Press [STORAGE] on the touch panel.

🔯 co	PY	STORAGE	ETTINGS 🔋 😭 TEMPLATE 🔋 ?
READY		U U	^{SET} 1
AUTO	A4		NON-SORT NON-STAPLE
	A3 A4-R B4	1→1 SMPLEX	TEXT /PHOTO
EXIT TRAY	APS		PROOF COPY
В	ASIC	EDIT	IMAGE
			11/11/2011 JOB STATUS

3 Press [COPY & FILE] on the touch panel.



4 Press the necessary buttons for entering information about the data to be stored. Then press [OK].



MFP LOCAL: Press this to store the data into the share folder of this equipment.

REMOTE 1, REMOTE 2: Press either of them to store the data into the share folder of a PC that is connected with this equipment via a network.

Notes

- You can select up to 2 of [MFP LOCAL], [REMOTE 1] and [REMOTE 2]. You can cancel the selected item by pressing the same button again.
- When a user who has the privilege of changing the setting of [REMOTE 1] and [REMOTE 2] has pressed either of them, the menu for specifying a directory appears. In this case, see the following page to specify the directory:

P.90 "Setting share folder"

FILE NAME: Press this to display the on-screen keyboard. Then enter the file name within 128 letters.

Note

The trailing characters in a file name (maximum 74) may be deleted depending on the type of letters used.

FILE FORMAT: Select the file format in which the data are stored from PDF, TIFF or XPS.

MULTI / SINGLE: These are for selecting whether the data are stored as a multiple page file or a single page file. If you select "MULTI", all the scanned data will be stored as one file. If you select "SINGLE", a folder is created and each page of the scanned data will be stored individually as one file in the folder.

Press the [START] button on the control panel.


When the original is placed on the RADF (Reversing Automatic Document Feeder, optional), copying and storing start simultaneously.

When the original is placed on the original glass, follow the procedure below.

6 Place the next original on the original glass, and then press [NEXT COPY] on the touch panel or the [START] button on the control panel.

Repeat this step until the scanning of all the originals is finished.

7 When all have been scanned, press [JOB FINISH] on the touch panel.

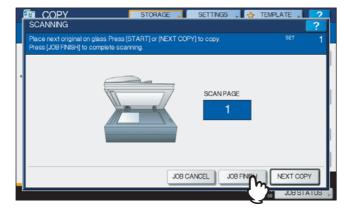


Copying and storing start.

Setting share folder

When a user who has the privilege of setting a share folder has pressed [REMOTE 1] or [REMOTE 2], the menu for specifying a directory appears.

The setting items differ depending on the file transfer protocol to be used. FTP, SMB, NetWare IPX/SPX, NetWare TCP/IP and FTPS are selectable for a file transfer protocol.

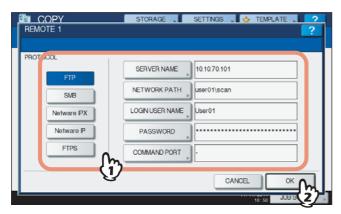

FTP / FTPS

When you press any of the buttons below, the on-screen keyboard appears. Enter with the buttons on the touch panel or the digital keys on the control panel. When you finish the entry, press [OK].

SERVER NAME: Press this to enter the IP address of FTP server. For example, if the data should be transferred to an FTP folder ftp://10.10.70.101/user01/scan/, key in "10.10.70.101".

NETWORK PATH: Press this to enter a network path to an FTP folder where the data are to be stored. For example, if the data should be transferred to an FTP folder ftp://10.10.70.101/user01/scan/, enter "user01\scan".

LOGIN USER NAME: Press this to enter a user name to login to the FTP server. Enter this as required.

PASSWORD: Press this to enter a password to login to the FTP server. Enter this as required.

COMMAND PORT: Press this to key in a command port number for executing commands. Normally "-" is entered in this field, which means that a port number set by the administrator will be used. Change this only when you want to use any other port number.

SMB

PROT	1C0L .	
	FTP	SERVER NAME
	SMB	
	Netware IPX	LOGIN USER NAME Der01
	Netware IP	PASSWORD
1	FTPS	

When you press any of the buttons below, the on-screen keyboard appears. Enter with the buttons on the touch panel or the digital keys on the control panel. When you finish the entry, press [OK].

NETWORK PATH: Press this to enter a network path to the folder where the data are to be stored. **LOGIN USER NAME:** Press this to enter a user name to access the network folder. Enter this as required. **PASSWORD:** Press this to enter a password to access the network folder. Enter this as required.

Tip

If you selected [SMB], the settings for [SERVER NAME] and [COMMAND PORT] are not required.

NetWare IPX / NetWare IP

COPY	STORAGE SETTINGS 🙀 TEMPLATE 📘 2
REMOTE 1	?
PROT JCOL	SERVER NAME
SMB	
Netware IPX	LOGIN USER NAME
Netware P	PASSWORD
FTPS	COMMAND PORT
Q.	CANCEL OK
	10:50 JOB S 2

When you press any of the buttons below, the on-screen keyboard appears. Enter with the buttons on the touch panel or the digital keys on the control panel. When you finish the entry, press [OK].

SERVER NAME: When you select [NetWare IPX], enter either the server name of NetWare server or Tree/Context (if NDS is useable). When you select [NetWare IP], enter the IP address of NetWare server.

NETWORK PATH: Press this to enter a network path to a NetWare server folder where the data are to be stored. For example, if the data should be transferred to a folder "sys\scan" of NetWare server, enter "\sys\scan".

LOGIN USER NAME: Press this to enter a user name to login NetWare server. Enter this as required. **PASSWORD:** Press this to enter a password to login NetWare server. Enter this as required.

4

EDITING FUNCTIONS

This chapter describes how to use various copying functions on the EDIT menu.

Displaying EDIT Menu	94
Image Shift	
Creating top/bottom margin or left/right margin Creating bookbinding margin	
Edge Erase	99
Book Center Erase	
Dual Page	
2IN1 / 4IN1	
Magazine Sort Mode	
Image Editing Trimming / Masking Mirror image / Negative/Positive reversal	
XY Zoom	
Cover Sheet	
Sheet Insertion	116
Time Stamp	119
Page Number	
Job Build	
Image Direction	
Book - Tablet	
ADF -> SADF	
Omit Blank Page	
Outside Erase	

Displaying EDIT Menu

You can display the EDIT menu by pressing the [EDIT] tab on the touch panel when you want to use various editing functions.






The EDIT menu has 2 pages. To switch the pages, press \land or 🔽.



Image Shift

You can create a binding margin by shifting an image to the left, right, top or bottom of the copy paper. This function is called "image shift". It is useful when you wish to punch or staple a stack of paper after copying it. With this function you can easily make a binding margin when you copy a book-type original on both sides of the paper.

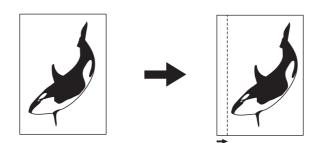

Tip

1

You can make a binding margin in the combinations as follows:

- Top/bottom margin and left/right margin
- Top/bottom margin and bookbinding margin

Creating top/bottom margin or left/right margin

Place paper in the drawer(s).

When using bypass copying, be sure to set the paper size.

2 Place the original(s).

3 Press [IMAGE SHIFT] on the EDIT menu.




<u>A</u> Select the type of binding margin.

MAGE SHIFT	STORAGE SETTING	S 🔮 TEMPLATE 🙎 2
Select LEFT, RIGHT, TOP, BOTTO	DM, BOOK.	^{SET} 1
		10:50 JUB STATUS

5 Adjust the width of the binding margin.

- 1) Press [FRONT MARGIN] and adjust the binding margin width on the front side using [▼0 mm] (0") and [▲ 100 mm] (3.94"). (The width on the back side will be also adjusted in the same way.)
- Press [BACK MARGIN] and adjust the binding margin width on the back side using [▼ 0 mm] (0") and [▲ 100 mm] (3.94"). (Only the width on the back side will be adjusted.)
- 3) Press [OK].

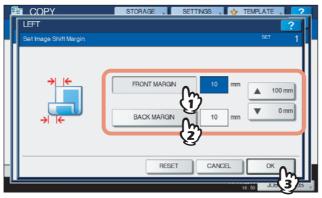

Tip

Note that a left/right binding margin will be created on the opposite side on the back side of paper in duplex copying. (For example, when a binding margin is created on the right of the front side of the paper, it will be created on the left of the back side.)

6 Press [OK].

MAGE SHIFT	STORAGE SETTINGS 🦼 🕁	TEMPLATE 2
Select LEFT, RIGHT, TOP, BOTTOM,	BOOK.	SET 1
	HT TOP BOTTOM	

7 Select other copy modes as required, and then press the [START] button on the control panel.

Creating bookbinding margin

You can easily make a binding margin when you copy a book-type original on both sides of the paper. P.85 "Making a 2-sided copy from a book-type original"

1 Press [IMAGE SHIFT] on the EDIT menu.



2 Press [BOOK].


	STORAGE	SETTINGS 🚬 🕁	TEMPLATE 2
Select LEFT, RIGHT, TOP, BOTTON	I, BOOK.		^{SET} 1
LEFT R	** ₩ IGHT ↓	Воттом ▶	iii ™ €
	RES	ET CANCEL	ОК
			10:50 JUB STATUS

$\label{eq:constraint} \textbf{3} \hspace{0.1 cm} \textbf{Adjust the width of the binding margin.}$

- 1) Press either [▼0 mm] (0") or [▲ 30 mm] (1.18").
- 2) Press [OK].

BOOK	STORAGE , SETTINGS , 🖕 TEMPLATE , 2
Set Image Shift Margin.	^{set} 1.
→ (¢	
	RESET CANCEL OK


4 Press [OK].

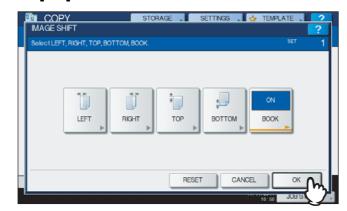

Select the "Book-type original -> 2-sided copy" mode as well. \square P.85 "Making a 2-sided copy from a book-type original"

Edge Erase

You can whiten the edge of the copied image when a shadow-like dark part appears on it. This function is called "edge erase". It is useful when you want to make the copied image neat and clear if the edge of the original is dirty or torn.

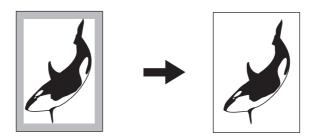

Tip

Only standard size originals are applicable.

1 Place paper in the drawer(s).

When using bypass copying, be sure to set the paper size.


2 Place the original(s).

3 Press [EDGE ERASE] on the EDIT menu.



A Adjust the width of the part to be erased.


- 1) Press either [▼2 mm] (0.08") or [▲ 50 mm] (1.97").
- 2) Press [OK].

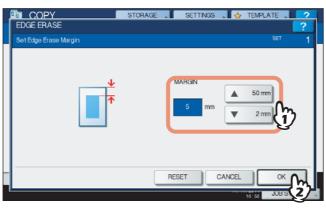

5 Select other copy modes as required, and then press the [START] button on the control panel.

Book Center Erase

You can whiten the center of the copied image when a shadow-like part appears on it. This function is called "book center erase". It is useful when you copy book-type originals.

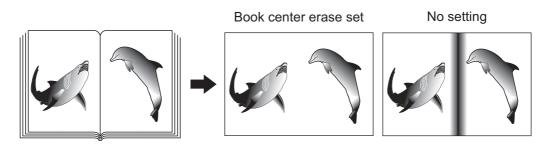

1 Place paper in the drawer(s).

When using bypass copying, be sure to set the paper size.

2 Select the drawer for the desired paper size.



3 Press [BOOK CENTER ERASE] on the EDIT menu.




4 Adjust the width of the part to be erased.

- 1) Press either [▼2 mm] (0.08") or [▲ 50 mm] (1.97").
- 2) Press [OK].



5 Place the original on the original glass.

Place the original with its bottom toward you, aligning its center with the yellow indicator under the original glass.

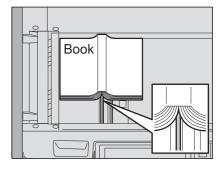

6


Do not place any heavy objects (4 kg (9 lb.) or over) on the original glass and do not press on it with force.

Breaking the glass could injure you.

Select other copy modes as required, and then press the [START] button on the control panel.

Dual Page

You can copy the 2 facing pages of a book-type original or 2 original sheets placed side by side onto 2 separate sheets of paper or on both sides of 1 sheet of paper. This function is called "dual page". You do not have to shift the original on the original glass.

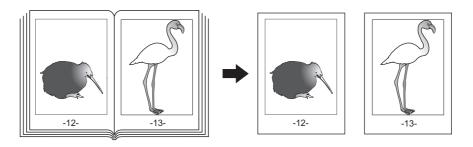

Tip

Only A4, B5 and LT sizes are applicable.

Place paper in the drawer(s).

2 Press [DUAL PAGE] on the EDIT menu.



3 Press [1 SIDE] or [2 SIDE].

1 SIDE: Copying the 2 facing pages of the original to only 1 side of 2 separate sheets of paper **2 SIDE:** Copying the 2 facing pages of the original to 2 sides of 1 sheet of paper



▲ Select other copy modes as required.

You can select "image shift" as well. P.95 "Creating top/bottom margin or left/right margin"


4

5 Press the [BASIC] tab to display the BASIC menu, and then select A4, B5 or LT as the copy paper size.

When using bypass copying, be sure to set the paper size.

6 Open the desired page of the original and place it on the original glass.

Place the original with its bottom toward you, aligning its center with the yellow indicator under the original glass.

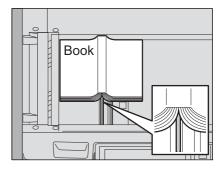


Do not place any heavy objects (4 kg (9 lb.) or over) on the original glass and do not press on it with force.

Breaking the glass could injure you.

7 Press the [START] button on the control panel. When the scanning of the opened pages is finished, open the next pages and place them.

Repeat this procedure until all the desired pages have been scanned. If the last page is a single page, press [COPY FINAL PAGE] on the touch panel, and then press the [START] button on the control panel to start scanning. The scanned pages will be copied.

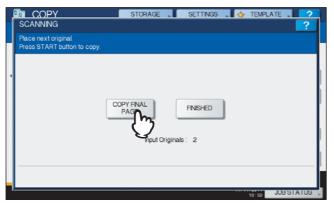


8 When all the pages have been scanned, press [FINISHED]. The scanned pages will be copied.

2IN1 / 4IN1


You can copy 2 or 4 originals to 1 sheet of paper by shrinking them. This function is called "2IN1" or "4IN1". If you use this function together with duplex copying, you can make a total of 8 images on 1 sheet of paper.

The illustrations below show how you can arrange the images.


2IN1

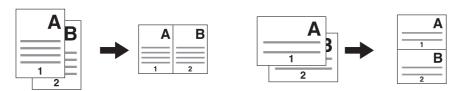


4IN1

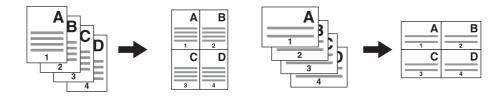

2IN1 & duplex copying (a: side 1, b: side 2)

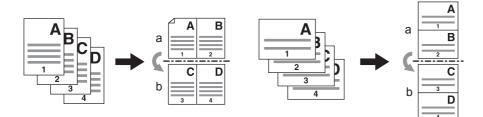

4IN1 & duplex copying (a: side 1, b: side 2)

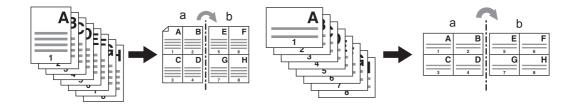

1 Place paper in the drawer(s).

When using bypass copying, be sure to set the paper size.

Tip

If you select paper of a different size to that of the original, press [ZOOM] on the BASIC menu. Next select the desired paper size, press [AMS] and then [OK] in the menu shown below.

		STOR	AGE SETT	rings 🔒 🖕 ti	EMPLATE	?
	ZOOM					?
	After setting the ZOC	M MODE, please press the	OK button.		SET	1
			ORIGINAL		COPY	
	AMS	AMS	A4		A4	
1	25% 2	100 _%	A3		A3	
	50%	LIP UP	B4		B4	lï
	100%	T DOWN	A5		A5	ľ
	200%		OTHER	SIZE SETTING ►	OTHER	
	400%		MIXED SIZE			1
			RESET	CANCEL	OK N	ק
	<u>.</u>			10	50 JOB S	зĽ

- **2** Place the original(s).
- **3** Press [2IN1 / 4IN1] on the EDIT menu.

💼 COPY	STORAGE SET	TINGS 🗼 🙀 TEMPLATE 🖡 📪
READY		SET 1
MAGE SHIFT	OK CENTER ERASE	
EDITNG XY ZOOM	COVER SHEET SHEET NSERTION	00:00 TME STAMP NUMBER
BASIC	EDIT	MAGE
		11/11/2011 JOB STATUS

4 Perform 2IN1 / 4IN1 setting.

- 1) If you want to copy 2 originals on 1 page, select [2IN1]. If you want 4 on 1 page, select [4IN1].
- 2) Select the duplex mode.
- 3) Press [OK].

2N1/4N1	STORAGE	SETTINGS	🔒 🕁 TEMF	
Select 2N1/4N1				SET 1
	1			
NUMBER OF PAGES	2-SIDED			
12 2N1		1→1 SMPLEX	[]+]	1→2 DUPLEX
4 N 1]+]	2→2 DUPLEX]+]	2→1 SPLIT
	RE	SET	CANCEL	OK Cha
			10 : 50	JUB (3)

5 Select other copy modes as required, and then press the [START] button on the control panel.

When the originals are placed on the RADF (optional), scanning and copying start. When they are placed on the original glass, follow steps 6 and 7.

6 Place the next original, and then press [NEXT COPY] on the touch panel or the [START] button on the control panel.

Scanning of the next original starts. If you have more than one original, repeat this step until the scanning of all the originals is finished.


7 When the scanning of all the originals is finished, press [JOB FINISH] on the touch panel.

Copying starts.


Magazine Sort Mode

You can copy more than one original in the book-type page order. This mode is called the magazine sort mode. Also you can do this as well as fold and staple the copied sheets at their center. This mode is called the magazine sort & saddle stitch mode.

Magazine sort mode

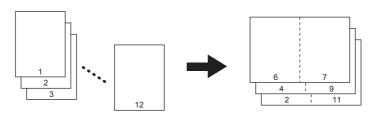

Magazine sort & saddle stitch mode

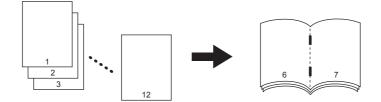

The magazine sort mode can also be selected on the BASIC menu. For details, see the following page:

Place paper in the drawer(s).

Sizes are available as follows: Magazine sort: A3, A4-R, A5-R, B4, B5-R, LD, LG, LT-R, ST-R Magazine sort & saddle stitch: A3, A4-R, B4, LD, LG, LT-R

Select the paper size.

Drawer: Drawer: P.54 "Automatic Paper Selection (APS)" Bypass tray: Draw P.38 "Bypass Copying"

3 Place the original(s).

Tip


When placing portrait originals in a landscape direction as shown on the right in the magazine sort mode or the magazine sort & saddle stitch mode, set the image direction function to ON on the EDIT menu. Otherwise the originals will not be copied in the proper page order. P.125 "Image Direction"

▲ Press [MAGAZINE SORT] on the EDIT menu.



5 Set the saddle stitch mode and the binding margin width as required.

- 1) When setting the saddle stitch mode, press [STAPLE ON]. If not required, press [STAPLE OFF].
- 2) Press either [▼2 mm] (0.08") or [▲ 30 mm] (1.18") to adjust the binding margin width.
- 3) Press [OK].

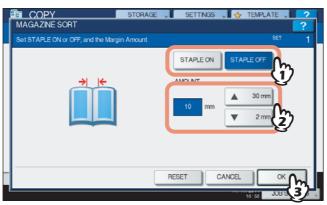

Tip

For the maximum number of sheets available for saddle stitching, see the following page: \square P.76 "Magazine sort / Center fold / Saddle stitch"


Image Editing

You can select the various editing functions shown below for scanned images.

Trimming: You can select a certain area of an original and copy only the selected area. Masking: You can mask a certain area of an original and copy only the unmasked area. Mirror image: You can reverse a page like a mirror. Negative/Positive reversal: You can reverse the black-and-white of a page.

Trimming / Masking

You can select the desired area of an original and copy only the selected area (trimming). You can also mask the desired area of an original and copy only the unmasked area (masking). On both functions you can select up to 4 areas on 1 original. The selected area should be in a rectangle.

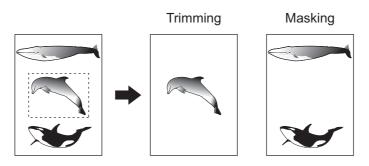

Tips

- Only standard size originals are applicable.
- Note that the entire image of the selected area may not be copied if you do not select proper sizes for the original and copy paper.


1 Place paper in the drawer(s).

When using bypass copying, be sure to set the paper size.

2 Press [EDITING] on the EDIT menu.




3 Select [TRIM] or [MASK].

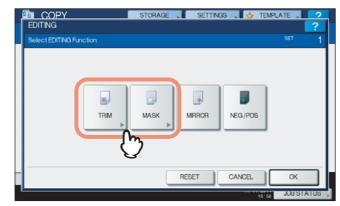

4 Place the original on the original glass with its face up.

Place it with its bottom toward you. Align its top left corner against that of the original glass so that the original will be aligned with the original scales.

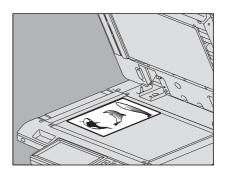


Do not place any heavy objects (4 kg (9 lb.) or over) on the original glass and do not press on it with force.

Breaking the glass could injure you.

5 Read the following 4 values to specify the area using the left and top scales on the original glass.

- **X1:** From the top left to the left edge of the selected area
- X2: From the top left to the right edge of the selected area
- Y1: From the top left to the upper edge of the selected area
- Y2: From the top left to the lower edge of the selected area


Note that the marks of the original scales have a 2 mm (0.08") pitch.

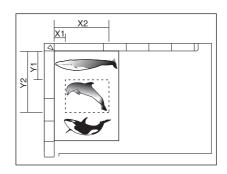

6 Key in the read values.


- 1) Press [X1], [X2], [Y1] and [Y2], and then key in the read values correspondingly.
- 2) You can specify up to 4 areas on 1 page. When you want to specify more than one area, press [AREA 1] to
- [AREA 4] to switch the area, and then key in the values correspondingly. 3) Press [OK] after you have specified all the areas.
 - L COPY STORAGE SETTINGS 💵 🕁 TEMPLATE TRIMMING X1 10 X1 X2 Х2 150 AREA 2 AREA 3 Y1 25 1 AREA 4 Y2 CANCEL RESET
- **7** Place the original again on the original glass with its face down.


Place it with its bottom toward you. Align its top left corner against that of the original glass.

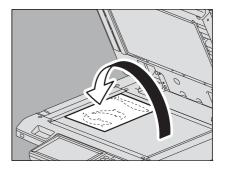

Mirror image / Negative/Positive reversal

You can reverse a page like a mirror (mirror image), or you can reverse the black-and-white of a page (negative/positive reversal).

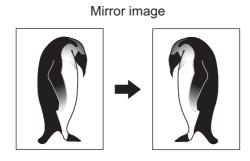

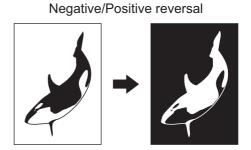

1 Place paper in the drawer(s).


When using bypass copying, be sure to set the paper size.

9 Place the original(s).

3 Press [EDITING] on the EDIT menu.




4 Select [MIRROR] or [NEG/POS], and then press [OK].

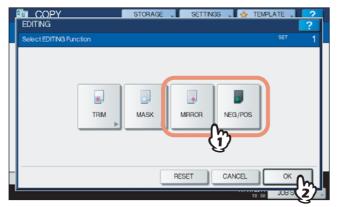

XY Zoom

You can change the reproduction ratio in both vertical and horizontal directions separately. This function is called "XY zoom".

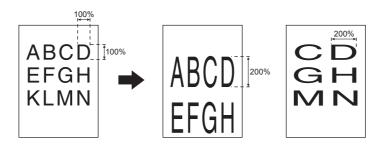

Note

The reproduction ratio is changeable from 25 to 400%. However in the following cases, this range is 25 to 200%.

- When the original mode is COLOR DOCUMENT
- When the original is placed on the RADF (optional)

1 Place paper in the drawer(s).

When using bypass copying, be sure to set the paper size.

9 Place the original(s).

3 Press [XY ZOOM] on the EDIT menu.



▲ Set the reproduction ratio in both vertical and horizontal directions.

- 1) Press [X], and then press either [▼25%] or [▲ 400%] for a horizontal direction.
- 2) Press [Y], and then press either [▼25%] or [▲ 400%] for a vertical direction.
- 3) Press [OK].

XY ZOOM Set XY ZOOM ratio.	STORAGE SETTINGS & A TEMPLATE SET	2 ? 1
Y↓ @@	X 80 % ▲ 400 % 100 % 100 % Y 120 % ▼ 25 %	
	RESET CANCEL OK	<u>,</u>


Cover Sheet

You can add a special type of paper such as colored paper as a front cover sheet or a back cover sheet. This function is called "cover sheet". In the cover sheet mode, you can select whether or not to copy the front or back cover sheet as shown in the table below.

	Front cover	Back cover		
Mode Description		Mode	Description	
NONE	Does not add a sheet as the front cover	NONE	Does not add a sheet as the back cover	
BLANK	Adds a blank sheet as the front cover	BLANK	Adds a blank sheet as the back cover	
TOP COPIED	Adds a sheet copied on the top side as the front cover	TOP COPIED	Adds a sheet copied on the top side as the back cover	
BOTH COPIED	Adds a sheet copied on both sides as the front cover	BOTH COPIED	Adds a sheet copied on both sides as the back cover	
		ONLY BACK COPIED	Adds a sheet copied on the back side as the back cover	

Example: Selecting "TOP COPIED" for the front cover and "BLANK" for the back cover

A sheet copied on the top is added as the front cover and a blank sheet as the back cover.

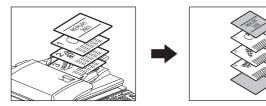

1 Place the paper for the cover sheets.

Place it on the bypass tray or in a drawer previously set for cover sheets. The paper for the cover sheets must be placed in a different paper source than normal paper.

Notes

- When placing paper in a drawer for cover sheets, be sure to select "COVER" as the paper type, and also set the paper size and thickness.
 - P.17 "Setting paper type"
- When placing paper on the bypass tray, be sure to set the paper size and thickness.
 P.38 "Bypass Copying"
- Place the paper for cover sheets of the same size as normal paper in the same direction.

9 Place the normal paper in the drawer(s).

2 Place the original(s).

When placing them on the original glass, they must be placed from the first page.

▲ Press [COVER SHEET] on the EDIT menu.

i COPY		STORAG	æ, set	TINGS 🗼 🙀	TEMPLATE 🖡	?
READY						^{8ет} 1
MAGE SHIFT	EDGE ERASE	BOOK CENTER ERASE	DUAL PAGE	2N1/4N1 ▶	MAGAZNE SORT	^ 1
EDITING	ter	COVER SHEE	SHEET NSERTION	00:00	PAGE NUMBER	2
BASIC		EDIT		MAG	=	
					/2011 JOB ST	ratus ,

5 Select the front and back cover settings, and then press [OK].



Tip

You can select [BOTH COPIED] for the front or back cover sheet only when [1->2 DUPLEX] or [2->2 DUPLEX] is set for the 2-sided copy mode on the basic menu.

6 Press the [BASIC] tab to display the BASIC menu. Then select a drawer in which normal paper is placed (not the one for the cover sheets).

You must place the normal paper of the same size and direction as that for the cover sheets in advance.



7 Select other copy modes as required, and then press the [START] button on the control panel.

When the originals are placed on the RADF (optional), scanning and copying start. When they are placed on the original glass, follow steps 8 and 9.

8 Place the next original, and then press [NEXT COPY] on the touch panel or the [START] button on the control panel.

Scanning of the next original starts. Repeat this procedure until the scanning of all the originals is finished.


9 When the scanning of all the originals is finished, press [JOB FINISH] on the touch panel.

Copying starts.


Sheet Insertion

You can insert a special type of paper such as colored paper at the desired page. This function is called "sheet insertion". You can insert up to 2 types of sheets for a total of 50 pages. The sheet insertion mode has the following 2 types:

COPIED: Inserts a copied sheet, replacing the specified page.

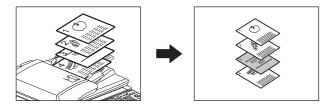

BLANK: Inserts a blank sheet before the specified page.

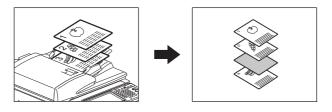

1 Place sheets for sheet insertion.

Place them on the bypass tray or in a drawer previously set for insertion sheets. The paper for the insertion sheets must be placed in a different paper source than normal paper.

Notes

- When placing paper in a drawer for sheet insertion, be sure to select "INSERT 1" or "INSERT 2" as a paper type, and also set the paper size and thickness.
 P.17 "Setting paper type"
- When placing paper on the bypass tray, be sure to set the paper size and thickness.
 P.38 "Bypass Copying"
- Place the paper for insertion sheets of the same size as normal paper in the same direction.

9 Place the normal paper in the drawer(s).


Place the original(s).

When placing them on the original glass, they must be placed from the first page.

▲ Press [SHEET INSERTION] on the EDIT menu.




5 Select either [COPIED] or [BLANK].

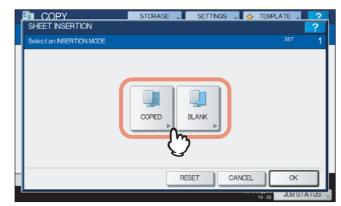

6 Select the page where the insertion sheets will be inserted.

- 1) Select the type of the insertion sheets ([INSERT SOURCE 1] or [INSERT SOURCE 2]).
- 2) Key in page numbers (1 to 1000) where the insertion sheets will be inserted, and then press [SET]. Repeat steps 1) and 2) if you want to insert sheets at more than one page.
- 3) Press [OK] after you have keyed in the page numbers.

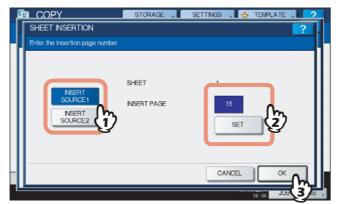

Tips

- If you selected [COPIED] in step 5, the selected page will be replaced with a copied insertion sheet. If you
 selected [BLANK], a blank insertion sheet will be inserted before the selected page.
- Up to 50 pages in total can be selected for [INSERT SOURCE 1] and [INSERT SOURCE 2].

7 Press the [BASIC] tab to display the BASIC menu. Then select the drawer in which normal paper is placed (not the one for sheet insertion).

You must place the normal paper of the same size and direction as that for the insertion sheets in advance.



4

8 Select other copy modes as required, and then press the [START] button on the control panel.

When the originals are placed on the RADF (optional), scanning and copying start. When they are placed on the original glass, follow steps 9 and 10.

9 Place the next original, and then press [NEXT COPY] on the touch panel or the [START] button on the control panel.


Scanning of the next original starts. Repeat this procedure until the scanning of all the originals is finished.

10 When the scanning of all the originals is finished, press [JOB FINISH] on the touch panel.

Copying starts.

Time Stamp

You can add the date and time on the copied paper.

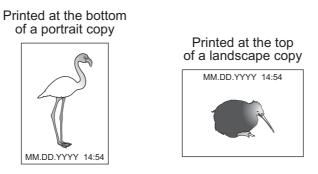

- **1** Place paper in the drawer(s).
- **7** Place the original(s).
- **3** Press [TIME STAMP] on the EDIT menu.





- **4** Select the direction and position of the time stamp.
 - 1) Select the direction ([SHORT EDGE] or [LONG EDGE]).
 - 2) Select the position ([UPPER] or [LOWER]).
 - 3) Press [OK].

TIME STAMP	STORAGE	SETTINGS	. 🕁 TEMPLA	ATE 2
Select the print direction and po	sition			SET 1
DIRECTION	POSITION			
SHORT EDGE	LOWER	2		
	RES	ET C/	NCEL	[∞] Ռ
			10:50	JUB 5 3


Page Number

You can add a page number on the copied paper.

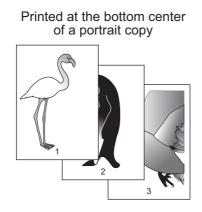

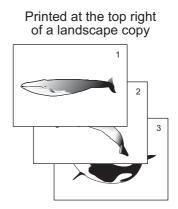


- **1** Place paper in the drawer(s).
- **9** Place the original(s).
- **3** Press [PAGE NUMBER] on the EDIT menu.

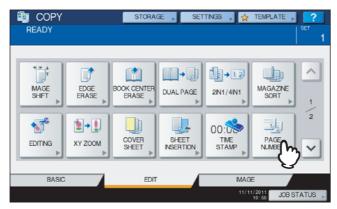


▲ Select the direction and position of a page number.

- 1) Select the direction ([SHORT EDGE] or [LONG EDGE]).
- 2) Select the position ([TOP LEFT], [TOP CENTER], etc.).
- 3) If you want to specify the page number to start with, press 🔽 and go to step 5. Otherwise, press [OK] and go to step 6.

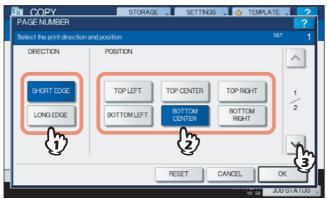


5 Specify the page number you want to start with.

- 1) Key in the page number.
- 2) Press [OK].

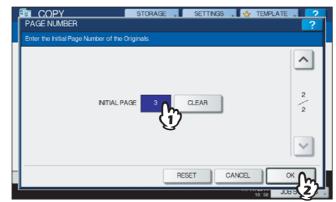

Job Build

You can scan several stacks of originals whose settings are individually different, and then copy or store them in one operation. This function is called "job build". For example, news clips (in the TEXT mode) and photographs in magazines (in the PHOTO mode) in A3 size and photographs in A4 size can be scanned in the optimal settings for each, and copied in one operation.

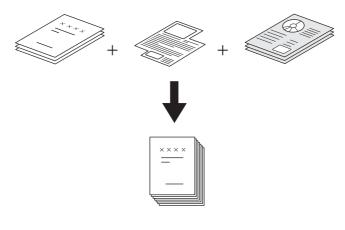

Notes

- Up to 1000 pages of originals can be copied in one operation. There is no limit for the number of jobs.
- Some settings are not available for job build, and some settings for the first job will be applied to all of the other jobs. See the table below before setting job build.

Settings not available	Settings applied for all jobs	Settings changeable for each job
Automatic Paper Selection	e-Filing / File	Reproduction ratio
BOOK -> 2 (Book-type original -> 2-	Mixed-size originals	Automatic Magnification Selection
sided copy)	Copy paper size	(Default setting for job build)
Editing	Finishing mode	Original size
XY zoom	Image shift	Original mode
Cover sheet	Book center erase	Simplex/Duplex copying settings
Sheet insertion	Time stamp	other than Book-type original -> 2-
Magazine sort	Page number	sided copy (1->1 SIMPLEX, 2->1
Magazine sort & saddle stitch	Image direction	SPLIT, 1->2 DUPLEX, 2->2 DUPLEX)
Magazine sort & center fold	Book - tablet	Background adjustment
2IN1 / 4IN1	Omit blank page	Sharpness
		Edge erase
		Dual page
		Document feeder (Feeding mode)
		Outside erase

1 Press [JOB BUILD] on the EDIT menu.



2 Press [OK].

ſ	TEMPLATE STORAGE SETTINGS & TEMPLATE ? ?
	Originals scanned with different settings are printed or saved as one document. SET

Job build is now set and the message below appears.

		_	STORAGE	SETTINGS	- TE	MPLATE 🔋 ?
	START button to changing settings					^{вет} 1
AUTO		BIPASS FED >	ORG → A4	NON	N-SORT STAPLE FNISHING	
EXIT TRAY	A3 A4-R B4 APS		1→1 SMPLEX		C/PHOTO ORIGINAL MODE ▶	
	BASIC		EDIT		MAGE 11/11/201 10:5	JOB STATUS

3 Place the first stack of originals, and then select settings.

Tips


- When placing the original on the original glass, remember that 1 page is equal to 1 job.
- When placing mixed-size originals on the RADF (optional), see the following page:
- If you want to use a particular drawer, select it.

Notes

- Press [SETTINGS] on the touch panel to confirm the current settings.
- If you want to change the settings, press the [FUNCTION CLEAR] button on the control panel, and then restart the procedure from step 1.

▲ Press the [START] button on the control panel.

Scanning starts. When the scanning of all the originals is finished, the message below appears.

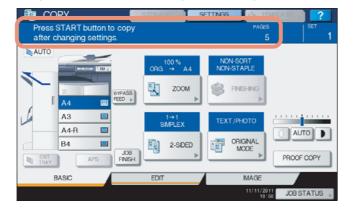

5 Place the next stack of originals, and then select the settings.


Repeat steps 4 and 5 until all the desired pages have been scanned.

Note

If you do not change any settings, those for the last job will be applied.

6

When the scanning of all the originals is finished, change the number of copy sets as required. Then press [JOB FINISH] on the touch panel.

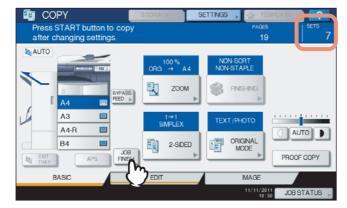


Copying starts. If any storing function is set, that will also start.


Image Direction


When you make 1-sided portrait originals to 2-sided copy by placing them in a landscape direction, normally the copied pages are "open to top". With this function you can make them "open to left". This function is called "image direction". When you make 2-sided "open to left" portrait originals to 1-sided copy, normally the copied pages exit in a different direction alternately. With this function, you can make them all exit in the same direction.

1-sided portrait original (placed in a landscape direction) -> 2-sided copy

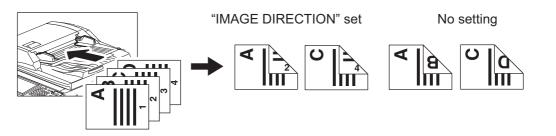

2-sided "open to left" portrait original -> 1-sided copy

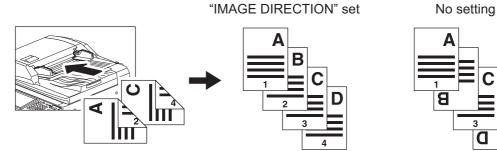

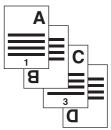

- Place paper in the drawer(s).
- Place the original(s).
- Set duplex copying setting. 3 P.82 "Duplex Copying"
- ▲ Press [IMAGE DIRECTION] on the EDIT menu.

COPY READY	STORAGE 🔎	SETTINGS , 😭 TEMPLATE , ?
	BOOK↔ TABLET	OMIT BLANK OUTSIDE
BASIC	EDIT	MAGE

4

5 Press [OK].


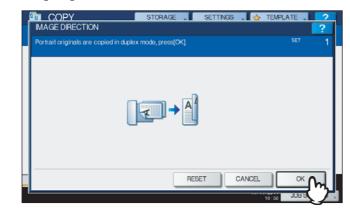


Image direction is now set.

Book - Tablet

As for the directions of originals or copied images, "open to left" is called "book" and "open to top" is called "tablet". With this function you can make 2-sided originals to 2-sided copy, rotating only the back side of the copied page by 180 degrees, namely, you can copy "book" originals to "tablet" copy, or vice versa.

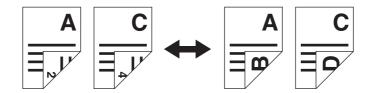

- **1** Place paper in the drawer(s).
- **9** Place the original(s).
- **3** Press [BOOK <->TABLET] on the EDIT menu.



4 Press [OK].

BOOK+TABLET	STORAGE .	SETTINGS	. 😓	TEMPLATE	?
When 2→ 2, book type originals and tablet type originals are copi				SET	' 1
-	RES	ET	CANCEL		×M
				10:50 JU	<u>ੜ</u> ``ਮ

Book - tablet is now set.



ADF -> SADF

You can switch the feeding mode when the RADF (Reversing Automatic Document Feeder, optional) is used, from "ADF" to "SADF". The paper feeding mode has 2 types as follows:


- **ADF (Continuous feed mode):** Feeds originals continuously when you press the [START] button on the control panel while originals are being placed on the RADF (optional). This is useful when you make more than one copy in one operation. (Default setting)
- SADF (Single feed mode): Feeds originals one by one automatically. This is useful when you usually only have 1 original.

Note


When the single feed mode (SADF) is set, place originals one sheet at a time. If you place more than one original, the copied image may be skewed or the originals may jam.

Place paper in the drawer(s).

2 Press [ADF -> SADF] on the EDIT menu.

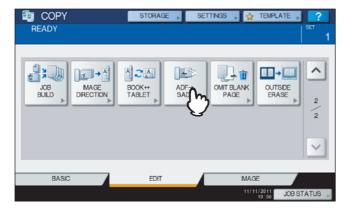

3 Press [OK].

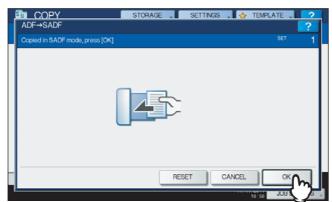


The feeding mode is now set at "single feed mode".

4 Select other copy modes as required.

5 Place the original(s) on the RADF (optional) one sheet at a time.

The original is pulled into the RADF (optional) automatically, and then the menu below appears.

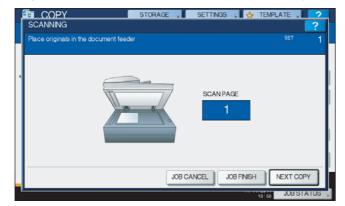

Repeat step 5 if you have another original. The placed original will be pulled into the RADF (optional) automatically even if you do not press [NEXT COPY] on the touch panel.


6 When the scanning of all the originals is finished, press [JOB FINISH].

Tip

If you want to stop copying, press [JOB CANCEL].

Omit Blank Page

You can remove blank sheets included in the scanned originals before copying is started. This function is called "omit blank page".

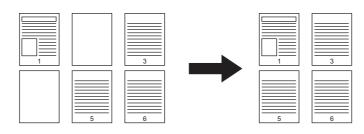

Notes

- This function may not properly detect blank sheets included in the following types of originals:
 Half-tone originals
 - Originals including sheets almost blank (e.g. blank pages having only page numbers)
- If you copy 2-sided originals including blank sheets to 2-sided copy while this function is enabled, the front and back sides of the originals and the copies will not be matched.

Tip

The sensitivity to detect blank pages can be changed. For details, refer to the MFP Management Guide.

1 Place paper in the drawer(s).


When using bypass copying, be sure to set the paper size.

2 Place the original(s).

3 Press [OMIT BLANK PAGE] on the EDIT menu.



▲ Press [OK].

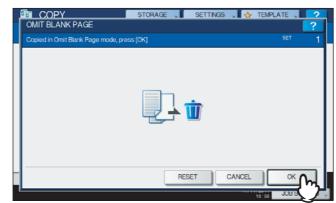

Omit blank page is now set.


5 Select other copy modes as required, and then press the [START] button on the control panel.

Scanning and copying start. A message notifying you of the number of the blank sheets appears for approx. 5 seconds.



Outside Erase

You can whiten a shadow-like dark part which has appeared outside of the copied image; this has been caused by a gap between the original glass and the platen sheet. This function is called "outside erase". It is useful when you place thick originals such as booklets on the original glass.

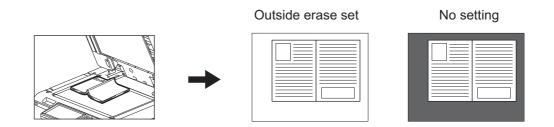

Notes

- This function is disabled when you place originals on the RADF (optional) or you place them on the original glass with the RADF or the Original Cover (optional) closed fully.
- When this function is enabled, the automatic density adjustment is disabled. Adjust the density level manually.
 Originals with an intricate outer shape (e.g. an original with cut-out parts on its edge) may not be copied properly because this function may not detect the border between the original and areas not belonging to the original.

1 Place paper in the drawer(s).

When using bypass copying, be sure to set the paper size.

2 Select the drawer for the desired paper size.




3 Press [OUTSIDE ERASE] on the EDIT menu.



▲ Set "outside erase".


- 1) Press [ON].
- 2) Adjust the width of the border around the original by pressing either or + as required.
 - When you adjust it to the 🛨 side, the area to be detected as not belonging to the original is widened.
 - When you adjust it to the side, the area to be detected as not belonging to the original is narrowed.
- 3) Press [OK].

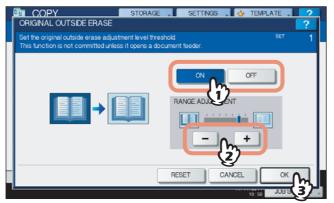

5 Place the original on the original glass.

Notes

- When placing the original, be sure that the Original Cover (optional) or the RADF (optional) is fully raised. If not, this function may not properly be able to detect the border between the original and areas not belonging to it.
- Do not directly look at the original glass during copying since an intense light may leak.

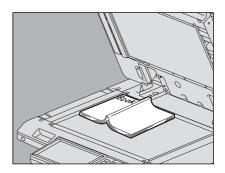

Do not place any heavy objects (4 kg (9 lb.) or over) on the original glass and do not press on it with force.

Breaking the glass could injure you.

Select other copy modes as required, and then press the [START] button on the control panel.

4

5

IMAGE ADJUSTMENT

This chapter describes the image adjustment functions of this equipment.

Displaying IMAGE Menu	
Using Image Adjustment Functions	
Background adjustment	
Sharpness	

Displaying IMAGE Menu

You can display the IMAGE menu by pressing the [IMAGE] tab on the touch panel when you want to use various image adjustment functions.






Using Image Adjustment Functions

Background adjustment

This function allows you to adjust the density of the original's background. It avoids the back side of a 2-sided original becoming visible on its front side.

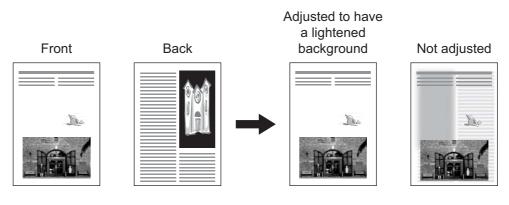

Note

This mode cannot be used with the automatic density adjustment function.





2 Press [LIGHT] or [DARK] to adjust the density, and then press [OK].


TELCOPY STORAGE SETTINGS & TEMPLATE ? BACKGROUND ADJUSTMENT ?
Adjust Background Density Level SET 1
10150 JOBS 2/5

Canceling background adjustment


- Move the indicator to the middle, and then press [OK].
- Press [RESET] and then [OK].

Sharpness

This function allows you to emphasize or blur the outline of the image.

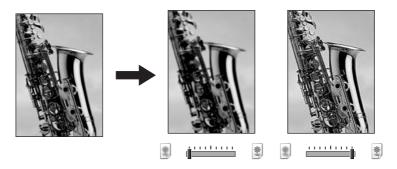

Press [SHARPNESS] in the IMAGE menu.

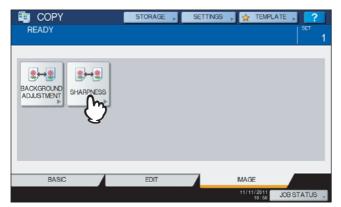

2 Press [SOFT] or [SHARP] to adjust the sharpness, and then press [OK].

When the sharpness level is adjusted to the [SOFT] side, the moire fringes on the printed photos, etc. are softened. If it is adjusted to the [SHARP] side, the letters and fine lines become sharper.



Canceling sharpness adjustment

- Move the indicator to the middle, and then press [OK].
- Press [RESET] and then [OK].

6

TEMPLATES

This chapter describes how to use templates.


Templates	
Displaying template menu	
Using "Useful Templates"	141
Registering Templates	
Registering templates into the public template group	
Creating a new private group	
Registering templates into a private group	148
Recalling Templates	150
Changing Data	
Changing private group data	
Changing template data	
Deleting Groups or Templates	
Deleting private groups	
Deleting templates	

Templates

You can create a template with several functions that are frequently used so that they can be employed whenever you want by recalling the template, thus eliminating the need to perform complicated settings every time. Templates can be used in copying, scanning and sending a fax.

Note

Fax functions are available only when the Fax Unit (optional) is installed.

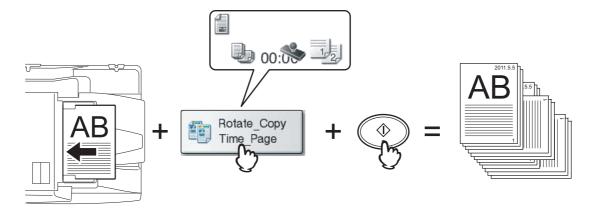

Displaying template menu

You can display the template menu by pressing [TEMPLATE] on the touch panel when you want to register or recall templates.





Using "Useful Templates"

This equipment has 12 default templates that can be used immediately. They are registered to the group number 001 "Useful Templates". For how to recall them, see the following page:

P.150 "Recalling Templates"



Templates with copying functions

Button	Function *1
Dcard Copy	Original size: 2-sided small originals, such as business cards Paper size: A4 (equipment for the A/B format), LT (equipment for the LT format) 2IN1 / 4IN1: 2IN1 (Place the original on the original glass before recalling the template since the automatic start is enabled in this template. After scanning the front side and then the back of the 2-sided original, press [JOB FINISH] to start copying.)
2in1 D-D Staple	2IN1 / 4IN1: 2IN1 Simplex/Duplex: 2 -> 2 DUPLEX Staple: FRONT STAPLE ^{*2}
APS Staple Mixed Org	Original size: Mixed-size Paper selection: Automatic Paper Selection Staple: FRONT STAPLE ^{*2}
AMS Staple Mixed Org	Original size: Mixed-size Paper selection: Automatic Magnification Selection Paper source: 1st drawer Staple: FRONT STAPLE *2

Templates with scanning functions

Button	Function *1
StoF S Text	Original: 1-sided Color mode: FULL COLOR Original mode: TEXT Storing method: Stored in the share folder of this equipment as a high-compression PDF file (multi) *3
StoF D Text	Original: 2-sided Color mode: FULL COLOR Original mode: TEXT Storing method: Stored in the share folder of this equipment as a high-compression PDF file (multi) *3
StoF S T&P	Original: 1-sided Color mode: BLACK Original mode: TEXT/PHOTO Resolution: 400 dpi Storing method: Stored in the share folder of this equipment as a PDF file (multi) *3
StoB S Text	Original: 1-sided Color mode: AUTO COLOR Original mode: TEXT Resolution: 300 dpi Storing method: Stored in the e-Filing box (public box) *3

Templates with e-Filing functions

Button	Function *1
CtoB T&P S-S	Original mode: TEXT/PHOTO Simplex/Duplex: 1 -> 1 SIMPLEX Storing method: Stored in the e-Filing box (public box) No copying
CtoB T&P G D-S	Original mode: TEXT/PHOTO Simplex/Duplex: 2 -> 1 SPLIT Storing method: Stored in the e-Filing box (public box) No copying
CtoB T&P S-D	Original mode: TEXT/PHOTO Simplex/Duplex: 1 -> 2 DUPLEX Storing method: Stored in the e-Filing box (public box) Copying performed
DualPAGE to B	Original mode: TEXT/PHOTO Simplex/Duplex: 1 -> 1 SIMPLEX Editing function: Dual page Storing method: Stored in the e-Filing box (public box) No copying (The dual page function is available only for A4, LT and B5 sizes.)

*1 Functions other than those noted here are in their default settings.
*2 An optional finisher is required for stapling and saddle stitching. If a finisher is not installed, the printed paper is only sorted.
*3 The Scanner Kit (optional) or Printer/Scanner Kit (optional) is required.

Registering Templates

Templates must be registered to either the "public template group" or "private groups". You can set a password to restrict the use of registered templates.

Public template group:

Provided by default. Templates in this group can be used by everyone. It is useful to register several combinations of functions frequently used in the entire office or department. Up to 60 templates can be registered to the public group. The Admin (administrator) Password is required when you wish to register, delete or change templates in the public template group.

Private group:

You can create up to 200 private groups. These are useful for each department, section or user. Up to 60 templates can be registered per group. You can set a password to restrict the use of the registered templates. "Useful Templates" are registered under the group 001 by default.

Registering templates into the public template group

1 Set all the required functions.

Example: Editing function - image shift, reproduction ratio - 90%, number of copy sets -10

2 Press [TEMPLATE] on the touch panel.

i COF	۶Y		STORAG	3Ε, S	ETTING	6 , 🙀 TE	MPL/TE
READY							
AUTO	A4	BYPASS	ORG	100 % → COPY ZOOM		N-SORT N-STAPLE FINISHING ▶	
	A3 A4-R B4	1		1→1 MPLEX 2-SIDED	тех	ORIGINAL MODE	
EXIT TRAY B/			EDIT	Þ		MAGE	PROOF COPY
					_	11/11/20	JOB STATUS

The template menu appears.

3 Select the public template group.

- 1) Press the [REGISTRATION] tab.
- 2) Press [PUBLIC TEMPLATE GROUP].
- 3) Press [OPEN].

PUBLIC TEMPLATE GROUP	001 Useful Templates	002	003	00.4	
" (2	2 008	007	008	009	=

4 Press [PASSWORD].

****	PASSWORD	
	Q	

The on-screen keyboard appears.

5 Enter the Admin Password using the on-screen keyboard or the digital keys. Then press [OK].

c		•						Back S	Space	Clear
	1	2	3	4 5	6	7	8 9	0		+
0	w	E	R	тү			0	P [
A	s	D	F	G	н) ј	к	L			
	z	x	c	V B	N	м		.) /	0	
Caps Lock	Shift			Spa	се					-

6 Select a template.

- 1) Press a blank button.
- 2) Press [SAVE].





7 Enter the necessary information about the template.

000 PUBLIC TEMPLATE GROUP	AUTOMATIC START
	ENABLE DISABLE
NAME2 001	This icon is indicated when an automatic s
USER NAME User01	is enabled.
PASSWORD	•

- **NAME 1 & 2:** Enter the name of the template. NAME 1 appears above the template button and NAME 2 appears below. Be sure to enter at least one of them. When you press either of them, the on-screen keyboard appears. Enter within 11 characters.
- **USER NAME:** Enter the name of the template owner as required. When you press it, the on-screen keyboard appears. Enter within 30 characters.
- **PASSWORD:** Key in a password here, if you want to require a password to recall the template. When you press it, the on-screen keyboard appears. Follow the procedure below.
- 1) Press [PASSWORD] and then enter the password (up to 20 characters) with the buttons on the touch panel or the digital keys on the control panel. The characters keyed in appear as asterisks (*).
- 2) Press [RETYPE PASSWORD], and then key in the password again.
- 3) Press [OK].

4	
	SET PASSWORD ?
-	Enter Password
	PASSWORD M
	RETYPE PASSWORD
	E I
	CANCEL
1	

Note

The symbols below cannot be used in passwords. ' $\$ & < > []

AUTOMATIC START: Press [ENABLE] if you want the operation of set functions to start immediately after pressing a button for the corresponding template. Press [DISABLE] if you do not want it to start until you press the [START] button on the control panel.

Note

Even when the automatic start function is enabled, you need to enter the user name and password when recalling the template in the following cases. For details of the User Authentication for Scan to E-mail and the user management function, ask your administrator.

- · When the User Authentication for Scan to E-mail is enabled and the user management function is disabled
- When both the User Authentication for Scan to E-mail and the user management function are enabled, but the user names and passwords are different


When you have entered all the necessary items, press [SAVE]. The template is now registered and the menu returns to the one immediately before registration.

Creating a new private group

1 Press [TEMPLATE] on the touch panel.



The template menu appears.

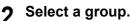


- 1) Press the [REGISTRATION] tab.
- 2) Select the desired group by pressing its button or keying in its group number (3 digits).
- 3) Press [OPEN].



To switch the menu Press \frown or \bigtriangledown .

3 Enter the necessary information about the group.

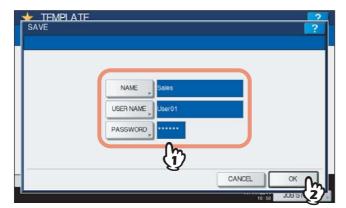

NAME: Enter the name of the group. When you press it, the on-screen keyboard appears. Enter within 20 characters. Be sure to enter it.

- **USER NAME:** Enter the name of the group owner as required. When you press it, the on-screen keyboard appears. Enter within 30 characters.
- **PASSWORD:** Key in a password here, if you want to require a password to view the group or register templates into the group. When you press it, the on-screen keyboard appears. Follow the procedure below.
- 1) Press [PASSWORD] and then enter the password (up to 20 characters) with the buttons on the touch panel or the digital keys on the control panel. The characters keyed in appear as asterisks (*).
- 2) Press [RETYPE PASSWORD], and then key in the password again.
- 3) Press [OK].

ľ	SET PASSWORD	2
	Enter Password	
		PASSWORD
		RETYPE PASSWOR
-		CANCEL OK
14		10100

Note

Δ

The symbols below cannot be used in passwords. $' \setminus \% \& < > []$

When you have entered all the necessary items, press [OK]. The new group is now registered and the menu moves to the one for registering templates.

Press the [FUNCTION CLEAR] button on the control panel.

The menu returns to the BASIC menu.

Registering templates into a private group

1 Set all the required functions.

Example: Editing function – image shift, reproduction ratio – 90%, number of copy sets – 10

2 Press [TEMPLATE] on the touch panel.

🛅 COPY		STORAGE S	ETTINGS , 👷 TE	MPLATE . ?
READY				1
	BYPASS FEED	ORG → COPY	NON-SORT NON-STAPLE	
A3 A4-R	-	1→1 SMPLEX	TEXT/PHOTO	
EXIT APS		2-SDED ▶	ORIGINAL MODE	PROOF COPY
BASIC		EDIT	IMAGE	
			11/11/20 11:3	JOB STATUS

The template menu appears.

3 Select the desired group.

- 1) Press the [REGISTRATION] tab.
- 2) Select the desired group by pressing its button or keying in its group number (3 digits).
- 3) Press [OPEN].

PUBLIC TEMPLATE	001 Useful Templates	002 Sales	003	004	1_
GROUP	005	007	2	009	21

To switch the menu

Press \land or 🔽.

A Key in the password for the selected group. (If no password is set, go to step 5.)


- 1) Press [PASSWORD] and then enter the password with the buttons on the touch panel or the digital keys on the control panel.
- 2) Press [OK].

NPUT GROUP PA				?
	NAME USER NAME PASSWORD	: Sales : User01		
			CANCEL	× m
			10:5	JUBSI 2

5 Register a template following steps 6 and 7 on **P**.143 "Registering templates into the public template group".

Recalling Templates

When you recall a template, the functions set in the template will be available automatically. If automatic start function is enabled, this equipment will automatically start the operation of each function when you press the button for the corresponding template.

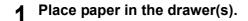


- **2** Place the original(s).
- **3** Press [TEMPLATE] on the touch panel.



The template menu appears.

▲ Press the button for the group to which the desired template is registered.

You can also select the group by keying in its group number (3 digits).

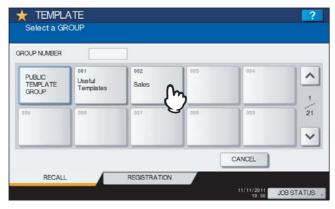


To switch the menu Press \land or \checkmark .

- 5 Key in the password when you have selected the private group. (If no password is set, go to step 6.)
 - 1) Press [PASSWORD] and then enter the password with the buttons on the touch panel or the digital keys on the control panel.
 - 2) Press [OK].



6 Press the button for the desired template.

COPY MOD	1	
002 M	 	 -17

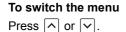

Templates with the automatic start function enabled can be identified with . If this mark is displayed, you can press it to immediately start the operation of the functions set in the template.

7 Key in the password for the selected template. (If no password is set, go to step 8.)

- 1) Press [PASSWORD] and then enter the password with the buttons on the touch panel or the digital keys on the control panel.
- 2) Press [OK].

			?
	NAME USER NAME PASSWORD	COPY MODE 002 User01	× •
.		10:50	JUB S (2)

8

Confirm that "Updated the template setting." is displayed on the touch panel.

The message is displayed for approx. 3 seconds.



9 Select other copy modes as required, and then press the [START] button on the control panel.

Changing Data

You can change the data of templates or private groups that are already registered, such as the template name, user name, password and setting of the automatic start function.

Note

The data of the public template group can be changed from the TopAccess menu but this cannot be done from the control panel. For how to change them from the TopAccess menu, refer to the **TopAccess Guide**.

Changing private group data

1 In the template menu, select the desired group.

- 1) Press the [REGISTRATION] tab.
- 2) Select the desired group by pressing its button or keying in its group number (3 digits).
- 3) Press [EDIT].

PUBLIC TEMPLATE GROUP	001 Useful Templates	002 Sales	003	004	1
005	008	007	2 008	009	1

To switch the menu

Press **^** or **~**.

- **2** Key in the password for the selected group. (If no password is set, go to step 3.)
 - 1) Press [PASSWORD] and then enter the password with the buttons on the touch panel or the digital keys on the control panel.
 - 2) Press [OK].

NAME USER NAME	: Sales : User01	
PASSWOOD	*****	
Ţ		


3 Change the data following step 3 on 🛄 P.146 "Creating a new private group".

4 Press the [FUNCTION CLEAR] button on the control panel. The menu returns to the BASIC menu.

Changing template data

In the template menu, select the group to which the desired template is registered.

- 1) Press the [REGISTRATION] tab.
- 2) Select the desired group by pressing its button or keying in its group number (3 digits).
- 3) Press [OPEN].

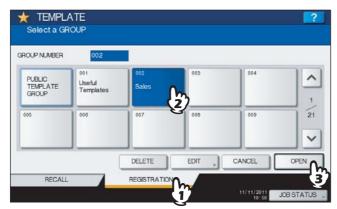

To switch the menu

Press \land or 🔽.

2

Enter the password as follows and then press [OK].

When the public template group is selected: Press [PASSWORD] and then enter the Admin Password (6 to 64 characters) with the buttons on the touch panel or the digital keys on the control panel.

When a private group is selected: Press [PASSWORD] and then enter the password (up to 20 characters) with the buttons on the touch panel or the digital keys on the control panel. If no password is set, go to step 3.

NPUT GROUP F				\$
	NAME USER NAME PASSWORD	: Sales : User01	CANCEL	

Select the desired template. 3

- 1) Press the button for the corresponding template.
- 2) Press [EDIT].

	^
	1,
	SAVE
RECALL REGISTRATION	OP VL

To switch the menu Press \land or 🔽.

Key in the password for the selected template. (If no password is set, go to step 5.) Δ

- 1) Press [PASSWORD] and then enter the password with the buttons on the touch panel or the digital keys on the control panel.
- 2) Press [OK].

NAME	COPY MODE 002	
USER NAME	: User01	
PASSWOOD		
- (7)		
V		

Change the data following step 7 on 🕮 P.143 "Registering templates into the public 5 template group".

Deleting Groups or Templates

You can delete private groups or templates no longer needed. If a private group is deleted, all the templates in the private group are also deleted.

Note

The public template group cannot be deleted.

Deleting private groups

1 In the template menu, select the desired private group.

- 1) Press the [REGISTRATION] tab.
- 2) Select the desired group by pressing its button or keying in its group number (3 digits).
- 3) Press [DELETE].

PUBLIC TEMPLATE GROUP	001 Useful Templates	002 Sales	003	004	
005	005	007	008	009	

To switch the menu

Press \land or 🔽.

2 Key in the password for the selected group. (If no password is set, go to step 3.)

- 1) Press [PASSWORD] and then enter the password with the buttons on the touch panel or the digital keys on the control panel.
- 2) Press [OK].




3 Press [DELETE].

GROUP NUMBER	ATTENTION	
PUBLIC TEMPLATE GROUP	Delete OK?	ŀ
005	DELET	
		OPEN

The private group is now deleted.

Deleting templates

- In the template menu, select the group to which the desired template is registered.
 - 1) Press the [REGISTRATION] tab.
 - 2) Select the desired group by pressing its button or keying in its group number (3 digits).
 - 3) Press [OPEN].

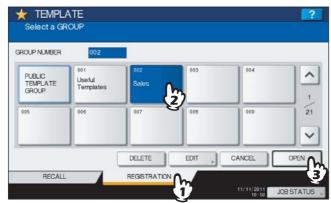

To switch the menu Press \land or \checkmark .

2 Enter the password as follows and then press [OK].

When the public template group is selected: Press [PASSWORD] and then enter the Admin Password (6 to 64 characters) with the buttons on the touch panel or the digital keys on the control panel.

When a private group is selected: Press [PASSWORD] and then enter the password (up to 20 characters) with the buttons on the touch panel or the digital keys on the control panel. If no password is set, go to step 3.

NPUT GROUP PA				?
	NAME USER NAME PASSWARD	Sales User01	CANCEL	

3 Select the desired template.

- 1) Press the button for the desired template.
- 2) Press [DELETE].

002 Sales		 	
COPY MODE 002			1
Ų			
			SAVE

To switch the menu Press \land or 🔽.

Key in the password for the selected template. (If no password is set, go to step 5.) Δ

- 1) Press [PASSWORD] and then enter the password with the buttons on the touch panel or the digital keys on the control panel.
- 2) Press [OK].

	; COPY		
		MODE 002	
NAME	: User0	1	
SWORD			
くわ			
		SSWQRD	

Press [DELETE]. 5

002 Sales	TTENTION				
COPY M 002		Delete	OK?		
		_		-	1
	DELET	m	CANCEL		
↑ RETURN		V			SAVE

The template is now deleted.

CONFIRMING JOB STATUS

This chapter describes how to confirm the processing status and the history of copy jobs performed.

Confirming Copy Job Status	
Confirming jobs in progress or ones in waiting	162
Confirming copy job history	
Confirming drawers	
Confirming amount of toner remaining	

Confirming Copy Job Status

You can confirm jobs in progress or ones in waiting, on the touch panel. Also you can delete, pause or resume jobs in waiting, and change their order. You can also confirm the history of copy jobs performed, the status of drawers and the amount of toner remaining in the toner cartridges.

Note

When this equipment is managed with the user management function, copy jobs in waiting only for a user who has logged in can be deleted, paused or their order changed, and the job history only for such a user is displayed on the print log list.

However, if the user has an administrator privilege, all copy jobs in waiting can be deleted, paused or their order changed, and the entire job history is displayed on the print log list.

Confirming jobs in progress or ones in waiting

You can confirm the jobs in progress or the ones in waiting, on the touch panel. To view them, press [JOB STATUS] on the touch panel.

🛅 COPY	STORAGE , SETTINGS , 🙀 TEMPLATE , ?
READY	^{Set} 1
AUTO A4 A4 B4 B4 EXIT TRAY APS	
BASIC	EDIT MAGE
	1/11/2011 JOB STAT

The print job list appears. (Press the [JOBS] tab if another tab menu is displayed.) Copy jobs appear on the print job list as well as print jobs.

PRINT	FAX	SCAN				
User	Name	Date,Time	Paper	Pages	Sets	Status
User01		10,10.16	A4	10	1	Printing
<u>ان</u>		10,1017	A4	4	1	Ready
User03		10,10.17	A4	3	1	Ready

On the print job list, you can confirm the icon of the job type, the name of the user who sent the job, the date and time the job was sent, the paper size, the number of pages and copy sets and the processing status. 5 jobs appear on 1 page of the print job list. When you press \land or \checkmark on the touch panel, the menu will be changed to the previous one or the next one, so that you can view up to 1000 jobs.

Press [CLOSE] when you finish the confirmation. The menu returns to the one shown before you pressed [JOB STATUS].

Deleting jobs

You can delete jobs that you no longer need to print.

1 Select the desired job on the print job list, and then press [DELETE]. You can select more than one job.

PRINT	FAX	SCAN				
Us	er Name	Date,Time	Paper	Pages	Sets	Status
User01		10,10.16	A4	10	1	Wait
<u>ت</u>		10,10.17	A4	4	1	Wait
User03	(m)	10,10.17	A4	4	1	Wait
	V					

2 Press [DELETE].

PRINT	TTENTION			
User01		Delete OK?		
User03	DELETE		CANCEL	
DELETE	Q			CLOSE

The job is now deleted.

Pausing jobs


Jobs whose status is "Wait" can be held in the queue (Pausing). Select the desired job on the print job list, and then press [PAUSE].

PRINT	FAX	SCAN				
U	ser Name	Date,Time	Paper	Pages	Sets	Status
User01		10,10.16	A4	10	1	Wait
b)		10,1017	A4	4	1	Wait
User03	ſ	10,10.17	A4	4	1	Wait
	L.	y				

The job is now paused. The paused job is not printed even when its turn comes. Printing of the next job starts.

Resuming the paused job

Select the desired job, and then press [RESUME].

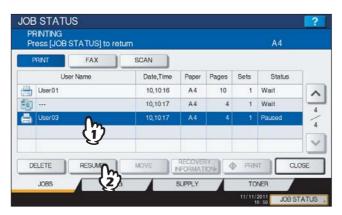

□ Moving jobs

You can change the order of the jobs in waiting by moving them within the list.

Note

You can only move jobs from and to those whose status is "Wait".

1 Select the desired job on the print job list, and then press [MOVE].

PRINT	FAX	SCAN				
Use	er Name	Date,Time	Paper	Pages	Sets	Status
User01		10,10.16	A4	10	1	Wait
··· (1)		10,10.17	A4	4	1	Wait
User03	m	10,10.17	A4	4	1	Wait
	Ū.					

2 Select the position that you want the job to move to. (It will come under the selected job.)


PRINT	FAX	SCAN				
Ut	ser Name	Date,Time	Paper	Pages	Sets	Status
User01	<u>C</u>	10,10.16	A4	10	1	Wait
ēj	- (")	10,10.17	A4	4	1	Wait
User03		10,10.17	A4	4	1	Wait
DELETE	PAUSE	MOVE	RECOVE		D PRM	

Press [JOB PRINT	STATUS] to retu	SCAN				A4
Us	er Name	Date,Time	Paper	Pages	Sets	Status
User01		10,10.16	A4	10	1	Wait
User03		10,10.17	A4	4	1	Wait
9		10,10:17	A4	4	1	Wait
DELETE	PAUSE		RECOVE		D PRM	л) С.05

Confirming the information of a skipped job

Copy jobs may not be performed because the specified paper or staples have run out, etc. These will be suspended and the next job will be performed (Job Skip function). Check on the touch panel how you can recover the suspended jobs.

1 Select the skipped job in the print job list, and press [RECOVERY INFORMATION].

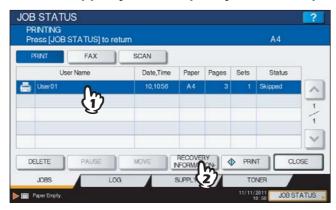

2 Resolve the cause of the skip following the instructions on the screen.

Cause	Paper empty (drawer)
Recovery condition	Add paper Set paper in the displayed drawer. * The paper size and type are displayed in Paper Size and Paper Type. * Printing restarts automatically.
PAPER SIZE	A4
PAPER TYPE	PLAN
	Drawer1

Note

If multiple causes exist, the second cause is displayed after you resolve the first one. Resolve all causes accordingly.

Confirming copy job history

You can confirm the history of copy jobs performed on the touch panel.



7 Press the [LOG] tab.

PRINT	FAX	SCAN				
U	ser Name	Date,Time	Paper	Pages	Sets	Status
User01		10,1016	A4	10	1	Printing
ēj		10,10.17	A4	4	1	Ready
User03		10,10.17	A4	3	1	Ready
DELETE	PAUSE		RECOVE		D PRP	r a.os

3 Press [PRINT].

PRINT	SEND	RECEIVE	SCAN	
	×		×	

The print log list appears. Copy jobs appear on the print log list as well as print jobs.

	User Name	Date,Time	Paper	Pages	Sets	
	User03	10,10.44	A4	4	1	
	(a)	10,10.43	A4	4	1	9
	User02	10,10.43	A4	6	1	18
韵		10,1039	A4	4	1	18
	User01	10,10.28	A4	1	1	~

On the print log list, you can confirm the icon of the job type, the name of the user who performed the job, the date and time the job was printed, the paper size and the number of pages or copy sets. 5 jobs appear on 1 page of the print log list. When you press \land or \checkmark on the touch panel, the menu will be changed to the previous one or the next one, so that you can view up to 120 jobs.

When you finish the confirmation, press [CLOSE] so that the menu returns to the one in step 3, and then press [CLOSE]. The menu returns to the one shown before you pressed [JOB STATUS].

Confirming drawers

You can confirm the size and type-setting of the paper or the amount remaining in the drawers. During printing you can confirm which drawer is feeding paper.




7 Press the [SUPPLY] tab.

-	- 1019			
a l	BYP	ASS		
A4	FEED	D		
A3				
A4-R				
B4				

During printing, the button for the drawer from which the paper is fed is highlighted. Press [CLOSE] when you finish the confirmation. The menu returns to the one shown before you pressed [JOB STATUS].

When the paper in the drawer has run out during printing, [JOB STATUS] on the touch panel blinks. In this case, press [JOB STATUS] so that the menu for displaying the printing status will appear and the button for the drawer whose paper has run out will blink on this menu. Printing resumes when you add paper to this drawer.

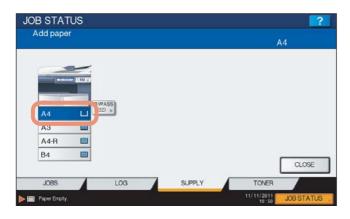

Confirming amount of toner remaining

You can confirm the approximate amount of toner remaining in the toner cartridge.

1 Press [JOB STATUS] on the touch panel.

2 Press the [TONER] tab.

BLACK(K)	0	25	50	75	100%	

Press [CLOSE] when you finish the confirmation. The menu returns to the one shown before you pressed [JOB STATUS].



OTHER INFORMATION

Continuous Copying Speed	172
Copying Function Combination Matrix	
Combination matrix 1/2	
Combination matrix 2/2	174

Continuous Copying Speed

Copy speeds under the condition in which originals are placed on the original glass and single-side copies are made continuously with 100% reproduction ratio in the non-sort mode (unit: sheet/minute).

ES9160 MFP

Bonor oizo	Feeder		Pape	r type	
Paper size	reeuer	PLAIN	THICK1	THICK2	THICK3 — 35.3 — 33.9 — 28.7
A4, A5-R, B5, LT, ST-R, 8.5"SQ	Drawer	35.3	35.3	_	—
	Bypass tray	35.3	35.3	35.3	35.3
A4-R, B5-R, LT-R	Drawer	35.0	33.9	—	
	Bypass tray	35.0	33.9	33.9	33.9
B4, FOLIO, LG, COMP, 13"LG	Drawer	29.5	28.7		
	Bypass tray	29.5	28.7	28.7	28.7
A3, LD	Drawer	25.4	24.8	—	—
	Bypass tray	25.4	24.8	24.8	24.8

ES9170 MFP

Papar siza	Feeder		Pape	r type	
Paper size	reeder	PLAIN	THICK1	THICK2	THICK3
A4, A5-R, B5, LT, ST-R, 8.5"SQ	Drawer	45.3	43.4	_	—
	Bypass tray	45.3	43.4	43.4	43.4
A4-R, B5-R, LT-R	Drawer	35.0	33.9		_
	Bypass tray	35.0	33.9	- - 43.4 43.4 - - 33.9 33.9 - -	
B4, FOLIO, LG, COMP, 13"LG	Drawer	29.5	28.7		—
	Bypass tray	29.5	28.7	28.7	28.7
A3, LD	Drawer	25.4	24.8	—	—
	Bypass tray	25.4	24.8	24.8	

• The bypass copying speed when the paper size is specified is as listed above.

• OKI-recommended paper is used for the values of the specifications above.

• These specifications vary depending on the copying conditions and the environment.

Copying Function Combination Matrix

■ Combination matrix 1/2

		Ctom to a	Conu 8		oo Dool	Outoido	Omit blank			Г	DA huild			ant.			100	r choot					Ed Block		/ FINIC
		Filing	Filing File		ground	erase	page SADF		TABLET	direction		number sta	stamp ins	insertion Back	- Back		Back - Top Back - F	k - Front			1	Nega/Pos	₽		4IN1
					adjust- ment									Only copie	Only back Both copied copied		Blai	k Both copied	d Top copied	Blank		0		Mask	
Bypass copy	hc hc	£	£	Yes	Yes	Yes	Yes	Yes	*1	Yes	4*	÷.	÷.	* **	-	°,	*3	*` *`	*3	*3	s Yes	s 1	5	£	*3
Mixed original sizes	inal sizes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	4	٩	۶		°N		°N N			N N	۶ ۷	Ñ	°2		Ŷ
	Text / Photo	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes Y	Yes Y	Yes Y	Yes	Yes Ye	Yes Yes	s Yes	s Yes	s Yes	s Yes	Yes	Yes
Original	Text	Yes	Yes	Yes	-	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	_	-	-	-	-	-	_	-	-	-	-	Yes
	Photo	Yes	Yes	Yes	_	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	_	_	_		_	+			_	_		Yes
-	Color Document	Yes	Yes	_	_	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	_	_		_	_		-	_	-	+	_	Yes
	1 - 1 Simplex	Yes	Yes	-	-	Yes	Yes	Yes	*3	Yes	Yes	Yes	Yes	-	oN 2	-	-	-	*3 Yes	-	s Yes	_	_	-	ۍ <u>۱</u>
	1 - Z Duplex	res	Les			res	res	res	2	res	res	1 es	res	-	+		-	-	_	+	-	_	-	-	2
2-sided	2 - 1 Split	Yes	Yes	+	+	Yes	Yes	Yes	r :	Yes	Yes	Yes	Yes	+	+	+	+	+	+	+	+	+	+	+	p :
- 1	2 - 2 Duplex	Yes	Yes	+	+	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	+	+	+	+	+	+	+	-	-	+	_	ę,
_	Book - 2	Yes	Yes	-		Yes	Ŷ	ı	No	Yes	Ŷ	Yes	Yes			_				-	_	_	-	_	۶
_ 1	Non-sort / Non-staple	ţ	Yes	+	-	Yes	Yes	Yes	Yes	Yes	4	Yes	Yes	+	-	+	+	-	+	÷	-	+	+	-	Yes
	Sort	Yes	Yes	_	_	Yes	Yes	Yes	Yes	Yes	4	Yes	Yes	_	_		_	_		_	_	_	_	_	Yes
~	Group	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	*4	Yes	Yes	2 N	No	2	No	No	No	°N N	o Yes	s Yes	s Yes	Yes	Yes
	Staple sort	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	*4	Yes	Yes					Yes Yi	Yes Yes		-	s Yes		Yes	Yes
	Magazine sort	۶	Ŷ	Yes	Yes	Yes	Yes	Yes	No	Yes	۶	Yes	Yes	2 N		2	_	No	Yes Yes	s Yes	s N	°2	_	g	Ŷ
Finishing	Center fold	Yes	Yes	Yes	Yes	Yes	٩	Yes	No	Yes	*4	No	٩			No No	No	No Ye	Yes Yes	s Yes		No	No	No	No
	Magazine sort & Saddle stitch	g	Ŷ	Yes	Yes	Yes	Yes	Yes	No	Yes	g	Yes	Yes	-			-		Yes Yes	-			-		Ŷ
	Magazine sort & Center fold	g	Ŷ	Yes	Yes	Yes	Yes	Yes	No	Yes	g	Yes	Yes	2 N		2 2	-		Yes Yes	-	s N	Ŷ	-		Ŷ
· -	Hole punch	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	*4	Yes	Yes						Yes Yes	s Yes		s Yes		Yes	Yes
	Saddle stitch	Yes	Yes	Yes		Yes	g	Yes	No	Yes	*4	٩	Ŷ		-		-		-	-	-				Ŷ
	Rotate sort	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	*4	Yes	Yes	2 N	No	2 N	No	No N	No No	No No	۶ ٥	Yes	s Yes	Yes	Yes
Image shift		ţ,	÷	Yes		Yes	Yes	Yes	No	Yes	4*	Yes	Yes	-		-			-						Yes
Edge erase		Yes	Yes	Yes	Yes	Ñ	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes Y	Yes Y	Yes Y	Yes	Yes Ye	Yes Yes	s Yes	s Yes	s No	Ŷ	Ŷ	Yes
Book center erase	ir erase	Yes	Yes	Yes	Yes	Yes	Yes	1	No	Yes	*4	Yes	Yes		No	2 N	No	No	No	No	o Yes	s	Yes	Ŷ	Ŷ
Dual page		Yes	Yes	Yes		Yes	Yes	1	No	Yes	Yes	Yes	Yes	No	No				No No				_		No
2IN1 / 4IN1		\$	*3	Yes	Yes	Yes	Yes	Yes	No	Yes	ø	Yes	Yes			2 Q	No	No	No No	No		Ñ	Ñ	Ŷ	
	Trim / Mask	Yes	Yes	-	-	Ŷ	Yes	Yes	Yes	Yes	۶	Yes	Yes	-	-	-	-	Yes	Yes Yes	-	s N	'	'		
Editing	Mirror	Yes	Yes	_	-	Ŷ	Yes	Yes	Yes	Yes	۶	Yes	Yes	_	_	-	_	_	-	_	_	1			
	Nega/Pos	Yes	Yes	N	_	N	Yes	Yes	Yes	Yes	٩	Yes	Yes	_		_	_		_	_	s N				
XY zoom		Yes	Yes	Yes	+	Yes	Yes	Yes	Yes	Yes	۶	Yes	Yes	+	-	+	+	+		s Yes	s				
_ 1	Front - Blank	ę.	°.	Yes	_	Yes	*3 *3	Yes	Yes	Yes	g	Yes	Yes	+	+	+	+	-	*3						
-	Front - 1 op copied	р :	p :	Yes		Yes		Yes	Yes	Yes	2	Yes	Yes						p						
	Front - Both copied	۳ ۲	<u>۽</u>	Xes :	+	; Yes	ŗ	Yes	Yes	Yes	2:	Yes	Yes	+				Yes							
sheet	Back - Blank Back - Ton omiod	r	? ;	Kes ≺or	Yes	Kor Yes	r ;	Yes	Yes	Yes	02 92	Yes Voc	Yes	Yes Voc			,n								
	Back - Both conject	o tu	• •	- Sex		S S	o «	Yes	Yes	Yes	2 2	Ser V	Yes	+	- e	,									
	Back - Only back copied	, tu	, ů	Yes	+	Yes	• •	Yes	Yes	Yes	2 2	Yes	Yes			1									
Sheet insertion	rtion	ů	*	Yes		Yes	g	Yes	Yes	Yes	۶	Yes	Yes		1										
Time stamp	0	\$	*3	Yes	Yes	Yes	Yes	Yes	No	Yes	*4	Yes		1											
Page number	ber	ţ,	÷	Yes	Yes	Yes	Yes	Yes	No	Yes	*4														
Job build		*4	*	Yes	Yes	Yes	*4	Yes	*4	*4															
Image direction	ction	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes											te selection	Size selection is required				
Book <-> TABLET	ABLET	Yes	Yes	Yes	_	Yes	Yes	Yes											*2 Siz	re selection	n is required	for [DOUB	SLE STAPL	Size selection is required for [DOUBLE STAPLE] and [REAR STAPLE]	R STAPLE
ADF -> SADF	DF	Yes	Yes	Yes	-	Yes	Yes		_											e function.	The function set later will be valid.	l be valid.			
Omit blank page	page	Yes	Yes	Yes	Yes	Yes														e setting c	The setting cannot be changed from 2nd job or later	anged from	1 2nd job or	later.	
Outside erase	ase	Yes	Yes	Yes	Yes														*5 Bo	okbinding	Bookbinding margin is not available	ot available.			
Backgrounc	Background adjustment	Yes	Yes	Yes																					
Sharpness		Yes	۴																						
Copy & File	5	ð	4																						
Store to e-Filing	Filing																								

■ Combination matrix 2/2

		Dual page			mage shift					Fink	Finishing							2-sided				Original Mode	Mode	W		pass
		center erase		erase		Rotate sort Saddle stitch		Hole Ma punch sor	gazine Ma & soi	gazine Cent t&	ter fold Mag	azine Staple	sort Group	Sort	Non-sort Non-stap	Non-sort / Book - 2 Non-staple	2 2-2 Duplex	2 - 1 Split	1 - 2 Duplex	1 - 1 Simplex	Color Document	PH		Text / ori Photo siz	original co sizes	copy
									nter fold Sa	Center fold Saddle	5					2							-			
Bypass copy	w	£	۰.	٠	Ł	£	÷	£	£	۲.		*1 *2	2 Yes		Yes	Ł	2	Yes	Ł	Yes	Yes	Yes	Yes	Yes	Ł	
Mixed original sizes	nal sizes	Q	No	Ŷ	Ŷ	Ŷ	No									g		Yes	Yes	Yes	Yes	Yes	Yes	Yes		
	Text / Photo	Yes	Yes	Yes	Yes	Yes	Yes	_	_		_	_		_	_	Yes	_	Yes	Yes	Yes	No	Q	N			
Original	Text	Yes	Yes	Yes	Yes	Yes	Yes	+	+	-	+	-	+	+	+	Yes	+	Yes	Yes	Yes	Ñ	ð				
	Photo	Yes	Yes	Yes	Yes	Yes	Yes	-	-		_	_	-	_	-	Yes	_	Yes	Yes	Yes	Ŷ					
	Color Document	Yes	Yes	Yes	Yes	Yes	Yes									Yes	-	Yes	Yes	Yes						
	1 - 1 Simplex	ε. t	Yes	Yes	Yes	Yes	ç, t	+	+	 E	+	"3 Yes	+	Yes	Yes	ۍ ۲	+	ۍ ډ	'n							
- popia-C	1 - 2 Uupex 2 - 1 Sol#	e da	No No	Vac Vac	Vac	Vac	o ¢	Vac	No	_	o ¢	-	20 1G2	-	_	° °	o t	•		_						
	2 - 1 Spill	2 2	2 oz	Yes	Yes	Yes	, Yes	+	Yes	+	+	+	+	+	+	. t.	ł		_							
	Book - 2	2 2	2 2	Yes	Yes	oN N	6. E.	+	oN N	-		-	-		-											
	Non-sort / Non-staple	Yes	Yes	Yes	Yes	ę,	ę.	Yes	£*	+	+															
	Sort	Yes	Yes	Yes	Yes	*3	*3	Yes	*3		-	-				1										
	Group	Yes	Yes	Yes	Yes	÷.	*3	Yes	*3	*3			~		1											
	Staple sort	Yes	Yes	Yes	Yes	ę,	*3	Yes	£*			*3		1												
	Magazine sort	No	No	Yes	No	*3	*3	No	*3	*3	*3															
Finishing	Center fold	Q	No	Yes	Ŷ	°*	*3	Ŷ	*3	*3																
	Magazine sort & Saddle stitch	Q	Ŷ	Yes	Ŷ	°,	£*	Ŷ	°.																	
	Magazine sort & Center fold	Q	No	Yes	Ŷ	°°	°	Ŷ																		
	Hole punch	Yes	No	Yes	Yes	Ŷ	оХ																			
	Saddle stitch	92	٩	Yes	g	°*																				
	Rotate sort	Q	Yes	Yes	Yes																					
Image shift		£	Yes	Yes																						
Edge erase		Yes	٥																							
Book center erase	ar erase	8																								
Dual page																										
	Trim / Mask																									
Editing	Mirror	T																								
	Nega/Pos	1																								
XY zoom	1																									
	Front - Blank																									
	Front - Top copied	1																								
	Front - Both copied																									
Cover	Back - Blank																									
	Back - Top copied																									
	Back - Both copied																									
	Back - Only back copied																									
Sheet insertion	rtion																									
Time stamp																										
Page number)er																									
Job build																										
Image direction	ction																	*1 Size s.	*1 Size selection is required.	required.						
Book <-> TABLET	ABLET	-																*2 Size s.	election is r	*2 Size selection is required for [DOUBLE STAPLE] and [REAR STAPLE]	DOUBLE	STAPLE] an	d [REAR S	TAPLE].		
ADF -> SADF	DF																	*3 The fu	nction set la	ater will be v	/alid.					
Omit blank page	page																	*4 The se	stting canno	The setting cannot be changed from 2nd job or later.	sd from 2nd	l job or later				
Outside erase	ese																	*5 Bookb	inding marg	*5 Bookbinding margin is not available.	ailable.					
Background	Background adjustment	1																								
Sharpness																										
Copy & File	e																									
Store to e-Filing	-iling																									

INDEX

Numerics

2IN1 / 4IN1		ł
	8	•

A

A	
A/B format	11
ADF	128
ADF -> SADF	128
Alert message indication area	8
AMS (Automatic Magnification Selection)	60
[APS]	
APS (Automatic Paper Selection)	54
Auto job start	33
Automatic Magnification Selection (AMS)	60
Automatic Paper Selection (APS)	54

В

BACKGROUND ADJUSTMENT	137
BASIC menu	8
[BASIC] tab	8
BOOK - TABLET	
BOOK CENTER ERASE	100
Bypass copying	
bypass copying	
envelope	44
non-standard size paper	47
standard size paper	
[BYPASS FEED]	10
Bypass tray	

С

Center fold	. 66,	76
Clearing the set functions		
COLOR DOCUMENT		.58
Confirmation screen		.52
Continuous feed mode		.28
COPY & FILE		.88
Copy quantity		.52
Copying		
auto job start		.33
basic procedure		.30
book-type originals	. 26,	85
bypass copying		.38
continuous copying speed	····· ′	172
copy & file		
copy quantity		
duplex copying		.82
envelope		
interrupting		.34
making copies		.30
mixed-size originals		
non-standard size paper		.47
number of copies		
proof copy		.35
reproduction ratio	. 52,	60
restarting		.32
stopping		
Copying function combination matrix	·····´	173
Copying functions		
before using copying functions		
clearing the set functions		
confirming the set functions		
COVER SHEET	····· ′	114
D		

	•	
Date and time		

Default settings Density adjustment Density adjustment buttons Department management function Drawer buttons Drawers	52, 59 9 8
acceptable copy paper buttons confirming current status placing paper DUAL PAGE Duplex copying	10 168 12
1-sided original -> 1-sided copy 1-sided original -> 2-sided copy 2-sided original -> 1-sided copy 2-sided original -> 2-sided copy book-type original -> 2-sided copy simplex/duplex setting	82 82 82 82

Е

_	
EDGE ERASE	
EDIT menu	
[EDIT] tab	8
EDITING	
masking	109
mirror image	
negative/positive reversal	112
trimming	
Editing functions	
2IN1 / 4IN1	104
ADF -> SADF	128
BOOK - TABLET	
BOOK CENTER ERASE	100
COVER SHEET	
DUAL PAGE	102
EDGE ERASE	
EDITING	109
IMAGE DIRECTION	125
IMAGE SHIFT	
JOB BUILD	122
MAGAZINE SORT	107
OMIT BLANK PAGE	130
OUTSIDE ERASE	132
PAGE NUMBER	120
SHEET INSERTION	116
TIME STAMP	119
XY ZOOM	113
End guide	
Envelope	11, 41, 44
Equipment status indication area	
[EXIT TRAY]	10

F

Feeding mode	28
Finisher	
Finisher	66
Inner Finisher	66
name of each part	68
Saddle Stitch Finisher	66
[FINISHING]	8

Finishing mode finishing mode52 FTP90 FTPS90

G

Group		66,	70
-------	--	-----	----

Н

Help button	.9
Hole punch	30
Hole Punch Unit	36

I

•	
Image adjustment functions	
BACKGROUND ADJUSTMENT	137
SHARPNESS	138
IMAGE DIRECTION	125
IMAGE menu	136
IMAGE SHIFT	95
[IMAGE] tab	
Inner tray	
name of each part	69
[INTERRUPT] button	
Interrupting copying	34

J

JOB BUILD	122
Job history	167
[JOB STATUS]	9
Job status	
Job status menu	162
Jobs	
confirming	162
deleting	163
moving	
pausing / resuming	
recovery information	166
skipped	166
K	

K format	11	

L

Large Capacity Feeder 11, 19	
Log167	
LT format11	

Μ

MAGAZINE SORT	107
Magazine sort	66, 76
Magazine sort & center fold	66, 76

Ν

NetWare IP	
NetWare IPX	
Non-sort Non-staple	
Number of copies	
Number of remaining copy sets	

0

OHP film	
OMIT BLANK PAGE	
Original glass	
[ORIGINAL MODE]	8, 58
Original mode	
COLOR DOCUMENT	58
original mode	
PHOTO	
TEXT	
ТЕХТ/РНОТО	
Original stopper	
Originals	
acceptable originals	
forgery prevention function	
mixed-size originals	
placing	
using the RADF (optional)	
OUTSIDE ERASE	
UUISIDE ERASE	

Ρ

PAGE NUMBER	
Paper	
acceptable copy paper	11
amount of paper remaining	
out of paper	31
paper type setting1	7, 40, 43
placing1	
precautions for storing copy paper	
registering paper size	
unacceptable copy paper	
Paper holder	
Paper holding lever	
Paper selection	
Paper size indicator	
Paper type on the bypass tray	
Paper type setting1	
PHOTO	
Plain paper	
Private group	450
changing private group data	
creating	
deleting	
private group registering templates	
[PROOF COPY] Proof copy	
Public template group	

R

RADF (Reversing Automatic Document Feeder)	
precautions	27
unacceptable originals	27
using the RADF (optional)	
Receiving tray indication	

Receiving tray selection	37	,
Recommended paper		
Registering paper size		
Reproduction ratio	52, 60)
Reversing Automatic Document Feeder (RADF)		
precautions	27	,
unacceptable originals	27	,
using the RADF (optional)	27	,
Rotate sort	66, 72	,

S

•	
Saddle stitch	
SADF	128
[SETTINGS]	9
Share folder	90
SHARPNESS	138
SHEET INSERTION	116
Side guides of the bypass tray	39, 45, 47
Side guides of the drawer	13
Side guides of the RADF	
(Reversing Automatic Document Feeder)	
Simplex/duplex setting	52
Single feed mode	29
SMB	91
Sort	,
Staple sort	
Stapling control section	
[START] button	31
Sticker labels	,
[STOP] button	
[STORAGE]	9
-	

Т

•	
[TEMPLATE]	9, 140
Template menu	140
Templates	
changing data	153, 154
deleting	156, 158
recalling	150
registering	143, 148
templates	140
useful templates	
TEXT	58
TEXT/PHOTO	58
Thick paper	11
Thin paper	
TIME STAMP	
Toner remaining amount	169
TopAccess	
Touch panel	
Tracing paper	
.	

U

Useful templates [USER FUNCTIONS] button User management function	15
X XY ZOOM	113
Z [ZOOM]	8, 60

	٠	٠	•	٠	٠	٠	٠	٠	٠	٠	٠	٠	٠	٠	٠	٠	٠	٠	٠	٠	٠	٠	٠	٠
	*	٠	•	٠	٠	٠	٠	٠	•	•	٠	٠	٠	٠	•	•	٠	•	٠	٠	٠	•	٠	٠
	•	•	•	•	•	٠	٠	•	•	•	•	٠	٠	•	•	•	٠	•	•	•	٠	•	•	٠
Oki Data Corporation	•	•	•	•	•	٠	•	•	•	٠	•	٠	•	•	•	•	•	•	٠	٠	٠	•	٠	٠
4-11-22 Shibaura, Minato-ku,Tokyo	•	•	•	•	•	٠	•	•	٠	•	•	•	•	•	٠	•	٠	٠	•	٠	٠	•	٠	•
108-8551, Japan	•	•	•	•	•	٠	•	•	•	•	•	٠	•	•	٠	•	٠	•	٠	٠	٠	•	٠	*
	•	•	•	•	•	٠	•	•	•	٠	•	٠	•	•	•	•	•	•	٠	٠	٠	•	٠	•
	•	•	•	•	•	٠	•	•	•	•	•	٠	•	•	٠	•	٠	•	•	•	٠	•	•	•
www.okiprintingsolutions.com	٠	•	•	٠	٠	٠	٠	٠	•	•	٠	٠	٠	٠	•	•	٠	•	٠	٠	٠	•	٠	٠
	٠		•	٠	٠	٠	٠	٠	•	•	٠	٠	٠	٠	•	•	٠	•	•	•	٠	•	•	٠
	*	•	•	٠	٠	٠	٠	٠	•	•	٠	٠	٠	٠	•	•	٠	•	•	•	٠	•	•	۰
	•	٠		•	٠	٠	٠	•	•	٠	٠	٠	٠	•	•	•	٠	•	•	٠	٠	•	٠	٠

45105102EE