

OKI

Wide Format Printer
Teriostar LP-2050 Series

Multifunction Model

LP-2050-MF

Printer Model

LP-2050

Quick Reference Guide

U00121382804



OKI Data Infotech Corporation

Preface

Your Printer is a Teriostar LP-2050 Series Wide Format Printer.

This manual describes the basic operation methods for both the LP-2050 and LP-2050-MF models. For more detailed information, see the User's Manuals on the supplied CD-ROM. Keep this guide in a place where you can easily read it when required.


Table of Contents

Turning the Power On/Off	3	Operating the Printer from a Computer MF	23
Power On	3	Troubleshooting	24
Power Off	3	When an Error Message Appears	24
Mode Buttons	3	Smears on a Printout	24
Replacing the Paper	4	Changing the Time Until Power Save Mode	24
Replacing the Toner Cartridge.....	6	Automatic Paper Cutting After a Certain Time	24
Replacing the Waste Toner Bottle	8	Automatic Paper Cutting After Opening	
Replacing the Charger Unit	10	and Closing a Door	25
Replacing the Process Cartridge	12	Changing the Print Density	25
Part Names.....	14	Wrinkles on Tracing Paper	25
Paper Jams	16	Selecting Paper to Match the Print Data	25
Copying MF	20	Missing Print or Slow Data Reception	26
Importing Images (Documents) to a Computer MF	21	Service Representatives	29
		Disposal Method	29




Turning the Power On/Off

 
Power On

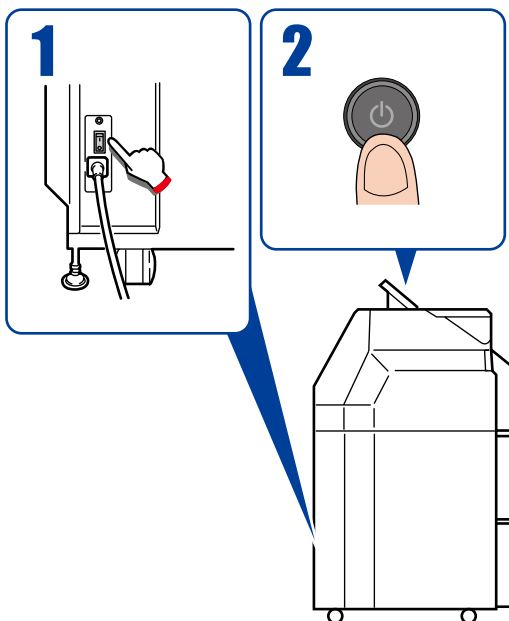

Power Off

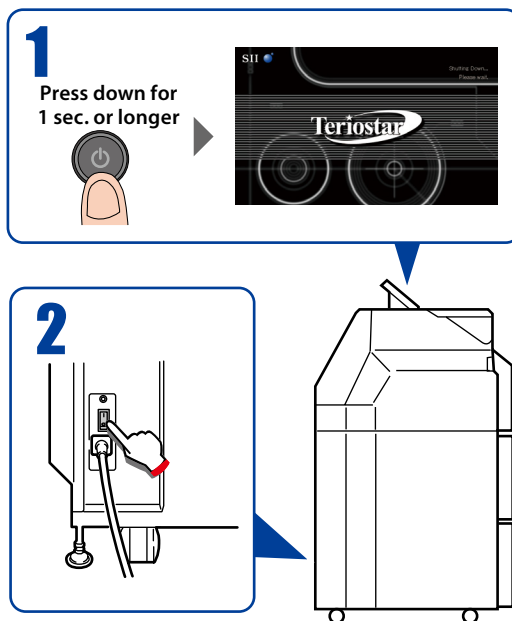 

Mode Buttons

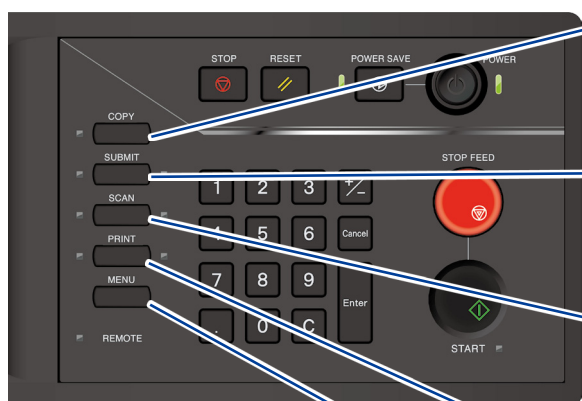 

● COPY button MF

Changes to copy mode, and the lamp at the button's left lights up. For more details, see the separate *User's Manual for Multifunction Printer Operation*.

● SUBMIT button MF

Changes to submission mode, and the lamp at the button's left lights up. For more details, see the separate *User's Manual for Multifunction Printer Operation*.

● SCAN button MF

Changes to scan mode, and the lamp at the button's left lights up. For more details, see the separate *User's Manual for Multifunction Printer Operation*.

● PRINT button

 
Changes to print mode and enables printing.

● MENU button


Changes to menu mode, which enables the Printer setting specification.

Replacing the Paper


1

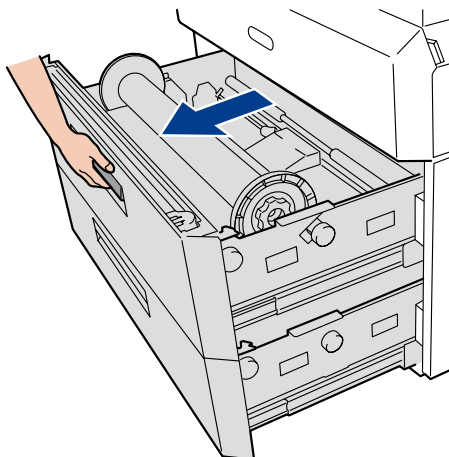


2

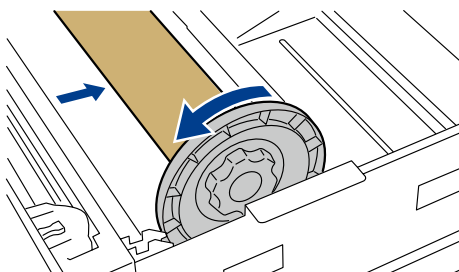 


3

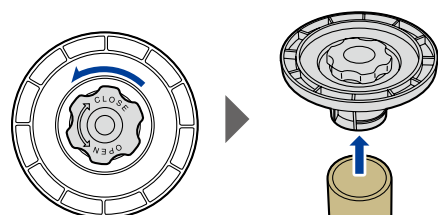 


4

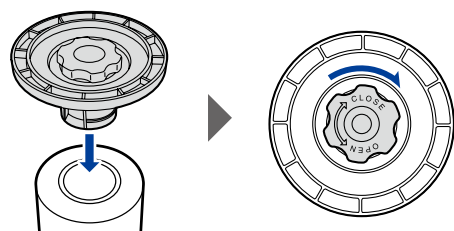 


5

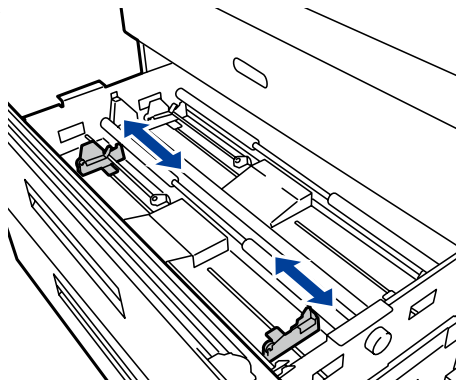 



6

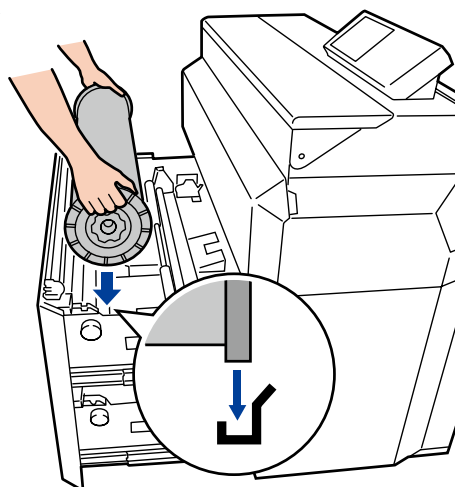 


7

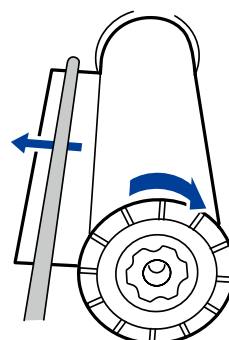 


8

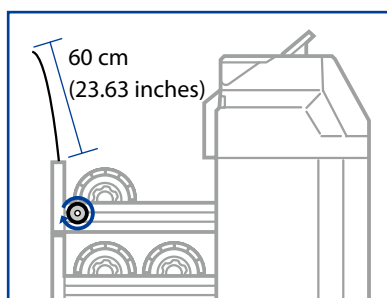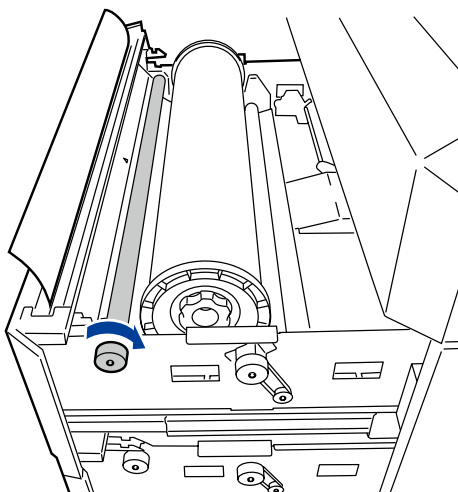  


9

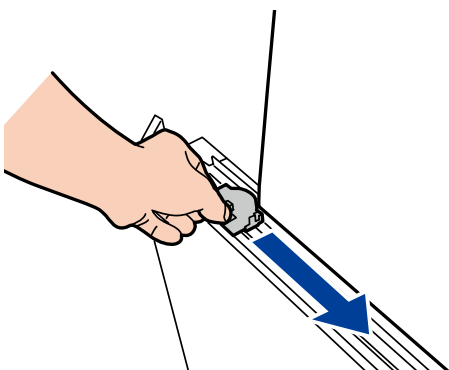 

10

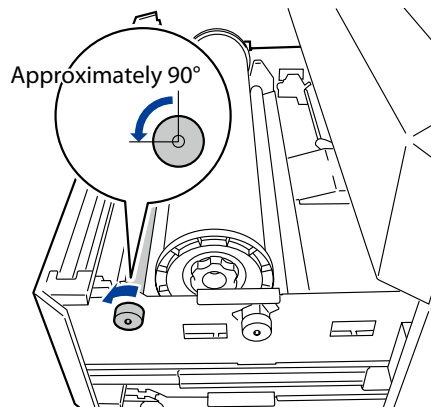 


11

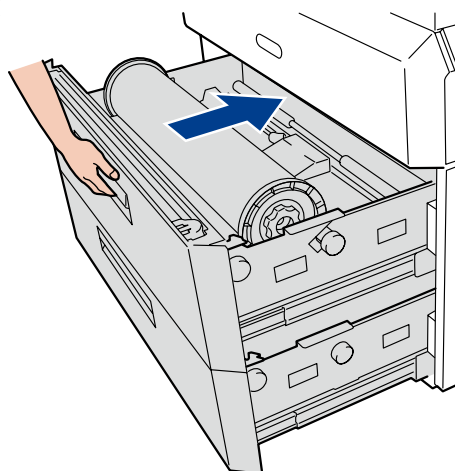 




Replacing the Toner Cartridge

 
1

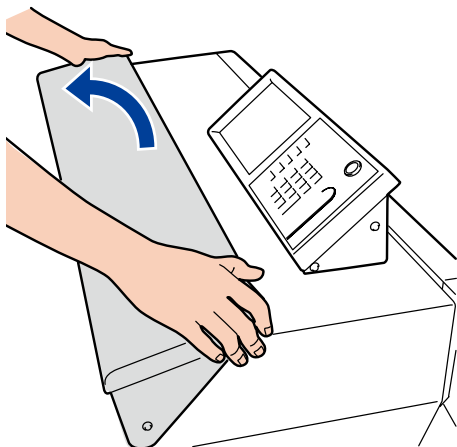


2

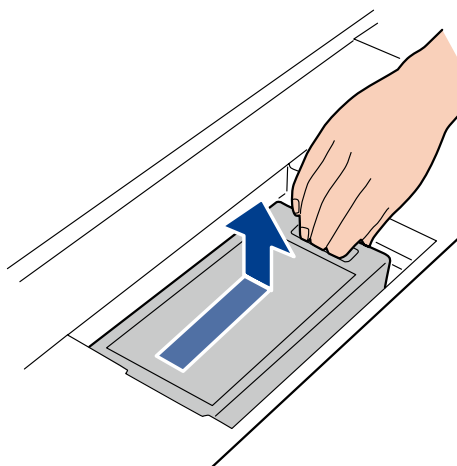 


3

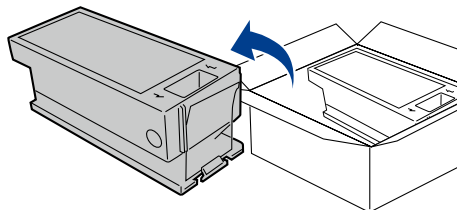 


4

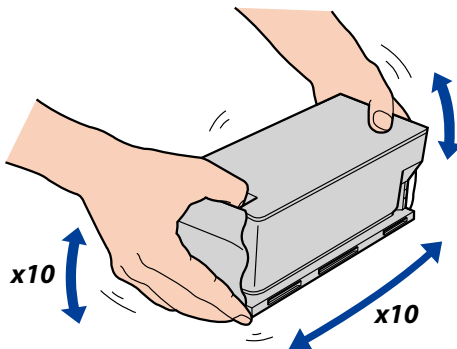 


5

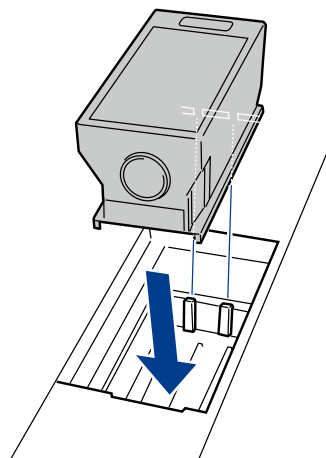 

6

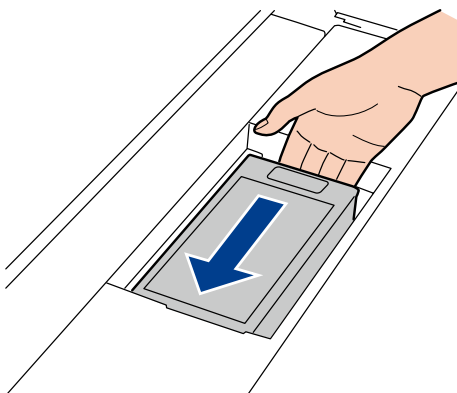 

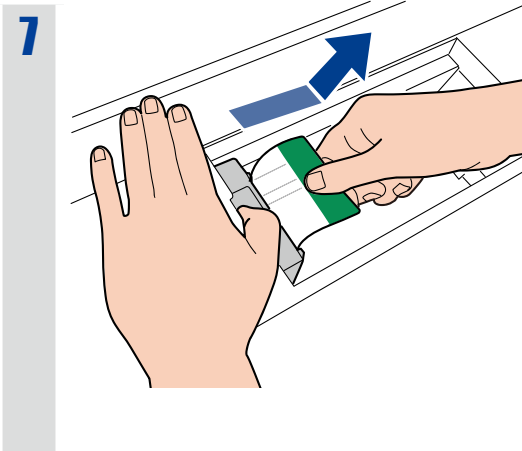 




Disposing of Empty Toner Cartridges

Put the used toner cartridge into the bag provided in the box of the new toner cartridge, and dispose of it according to the local regulations.




Replacing the Waste Toner Bottle

   
1

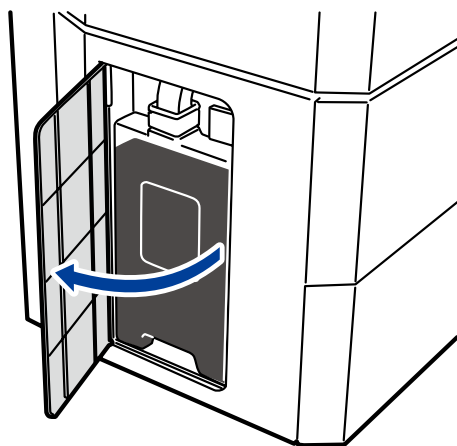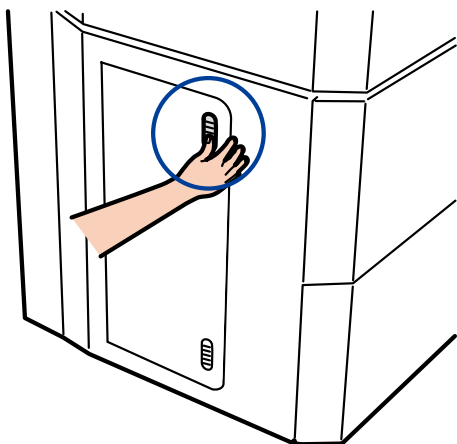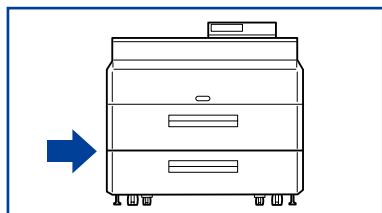


2

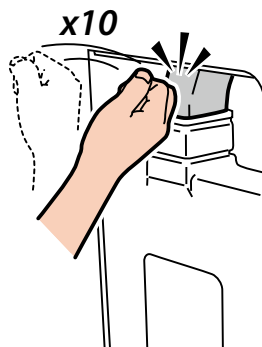 


3

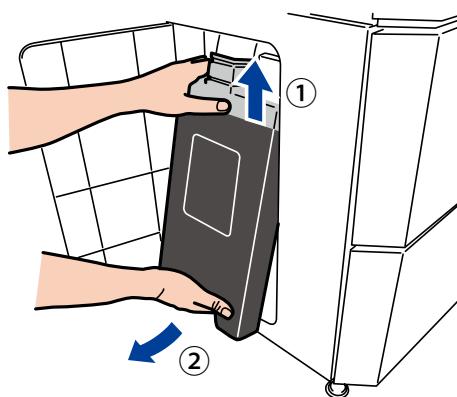 


4

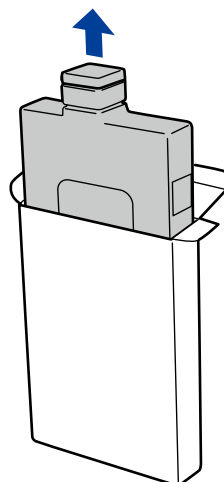 


5

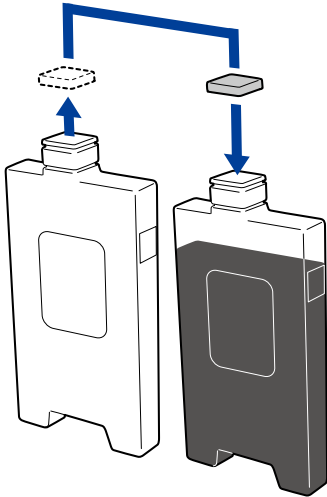 

6

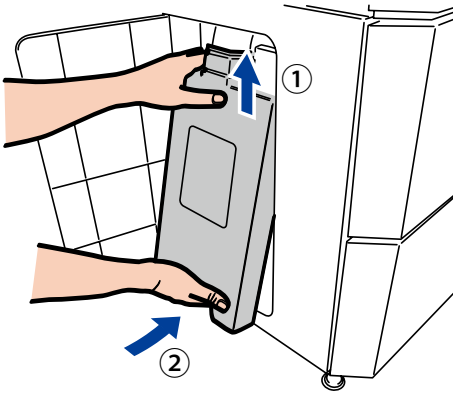 

7

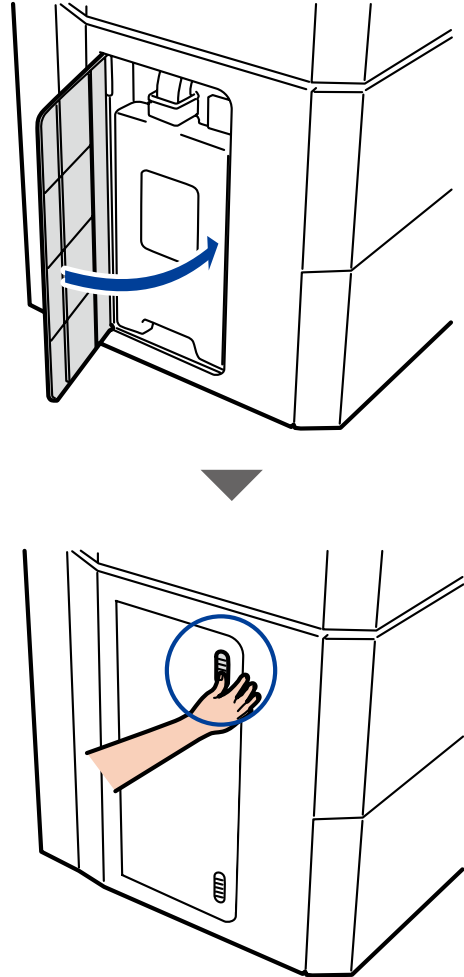 

Disposing of Used Toner Bottles

Dispose of the waste toner bottle according to the local regulations.



 
Replacing the Charger Unit

1


Press down for
1 sec. or longer





2

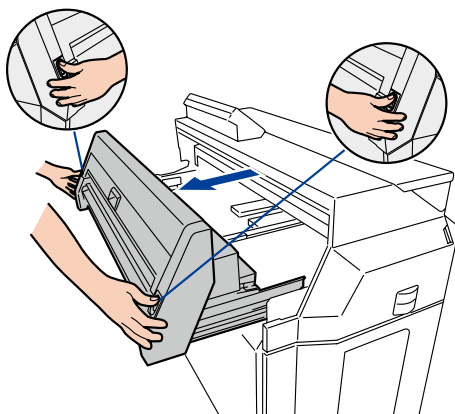


3

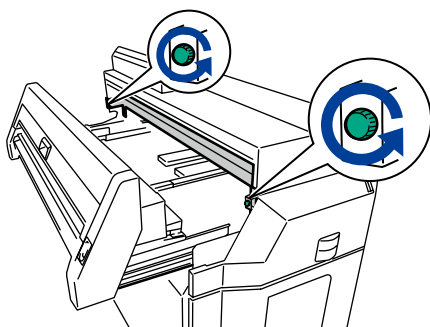 


4

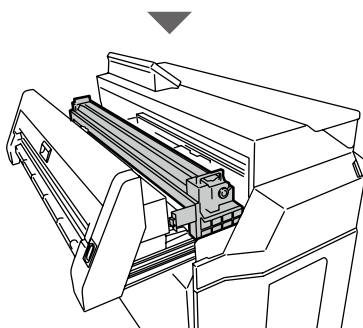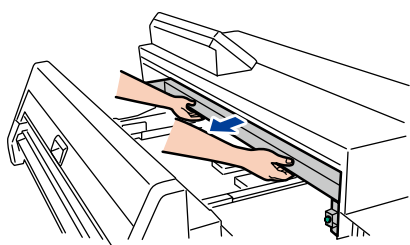  


5

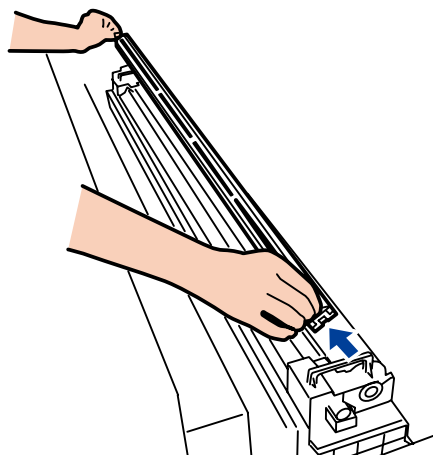 


6

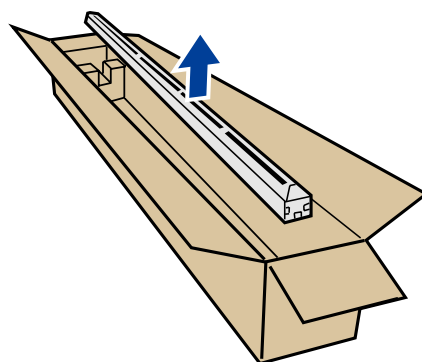 


7

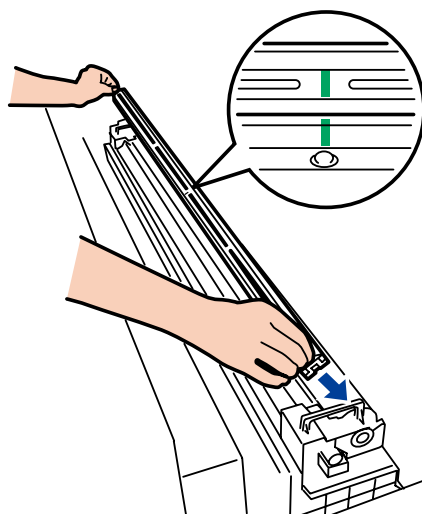 


8

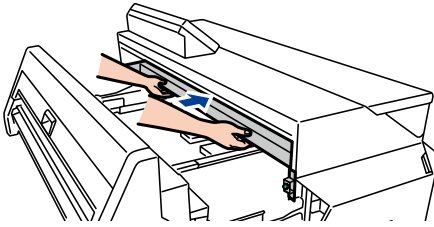 

9

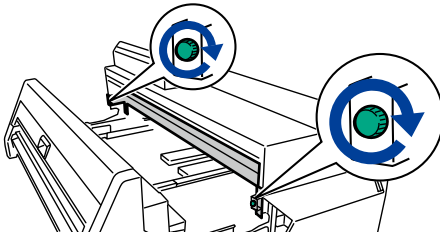 

10

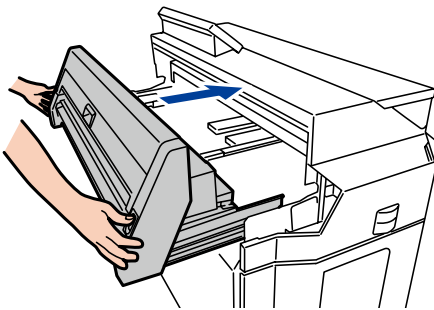 

11



TIP ♦ The charger unit can be installed in either direction.

If lines or other defects appear on the printout, inverting the charger unit right and left sides may solve the problem.



 
Replacing the Process Cartridge

1


Press down for
1 sec. or longer




2

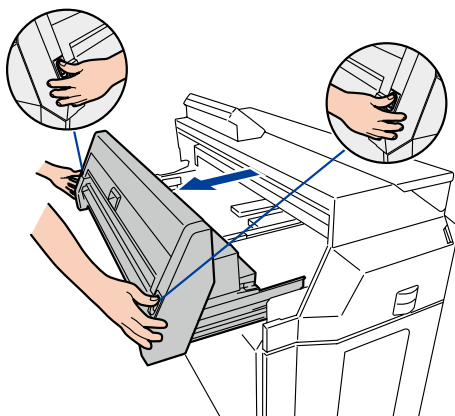


3

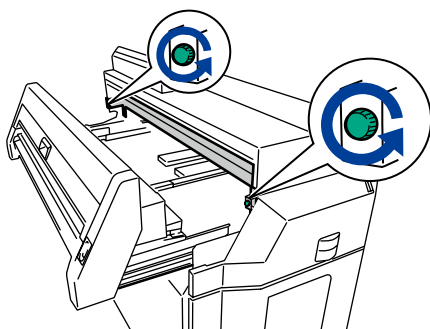 


4

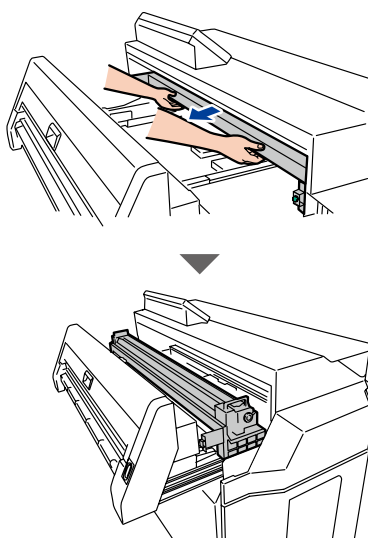 


5

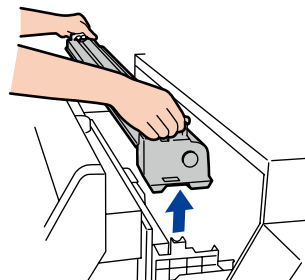 


6

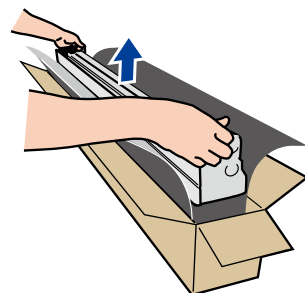 


7

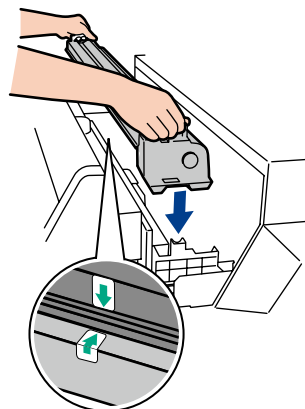 


8

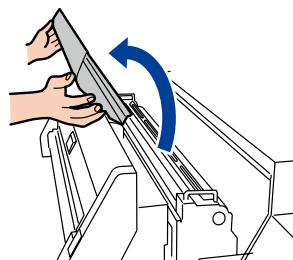 


9

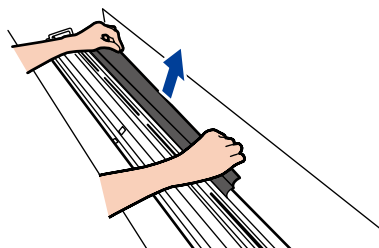 


10

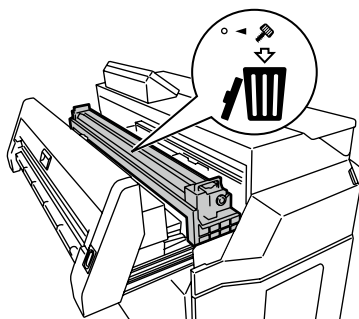 


11

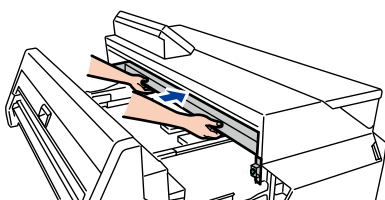 


12

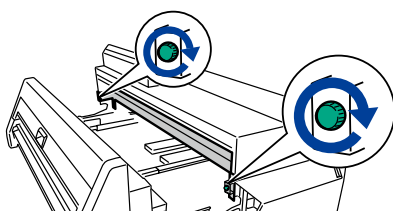 




13

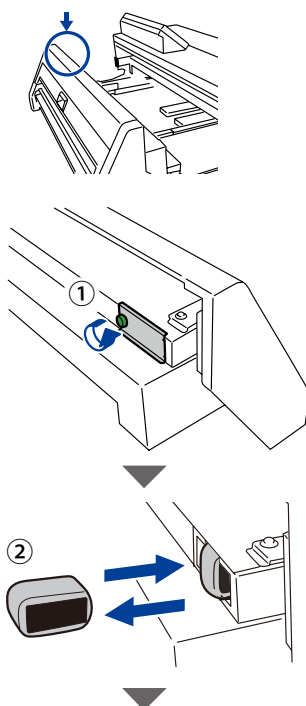 

14

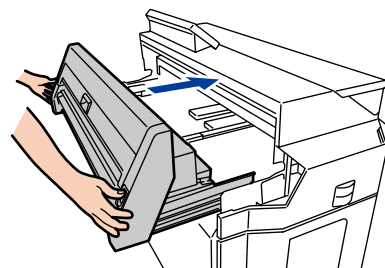 

15

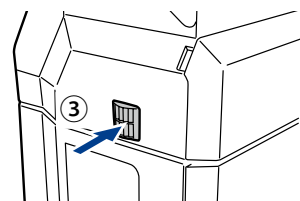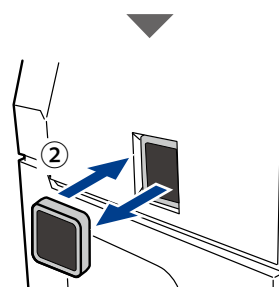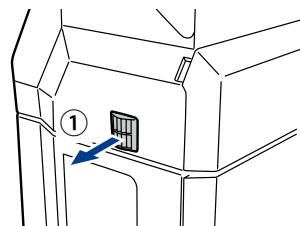   

16



 


Part Names

Front Side

Printer Model

Toner door

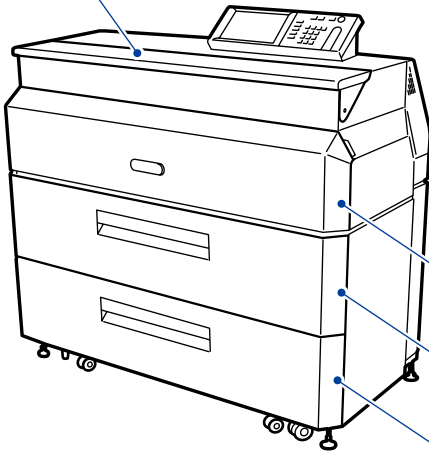


Front door

Drawer for rolls 1 and 2


Drawer for rolls 3 and 4

Multifunction Model


 
Scanner cover

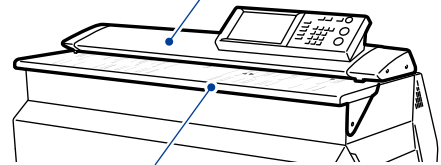

Document table

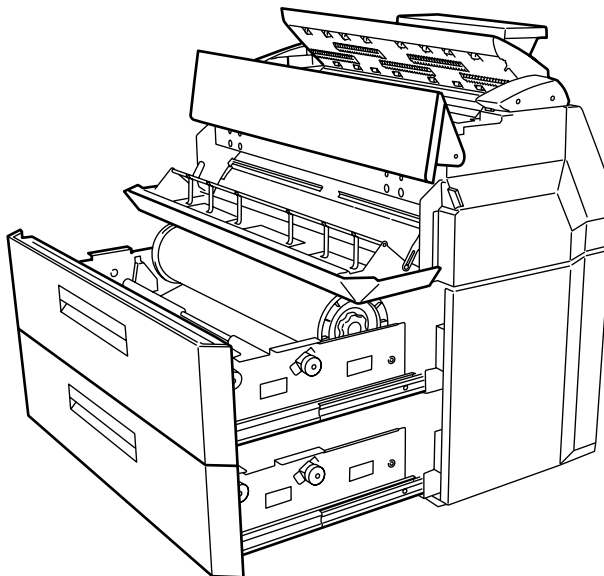 


Rear Side

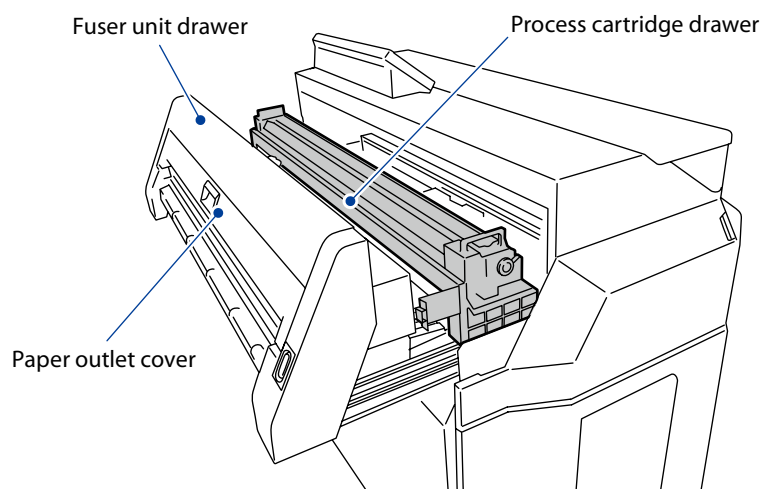 
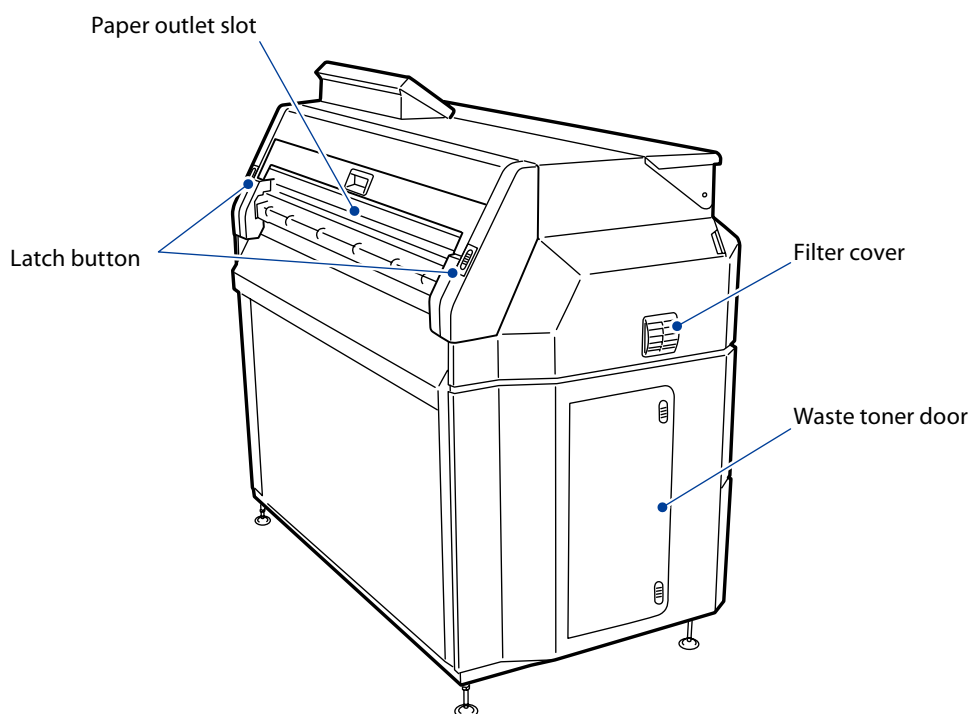 


Paper Jams


 
The door requiring action is displayed, in accordance with the paper jam location. Open the specified door and take the appropriate action to remove the paper jam.

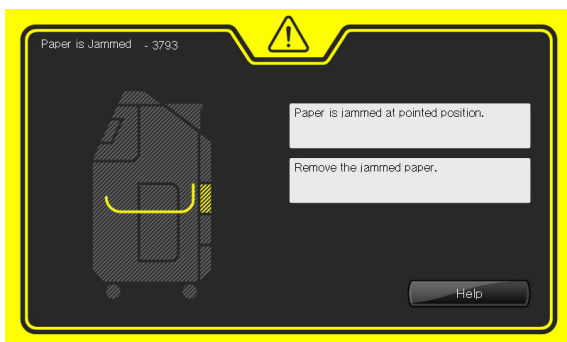

➔ Paper jam in a Roll paper drawer

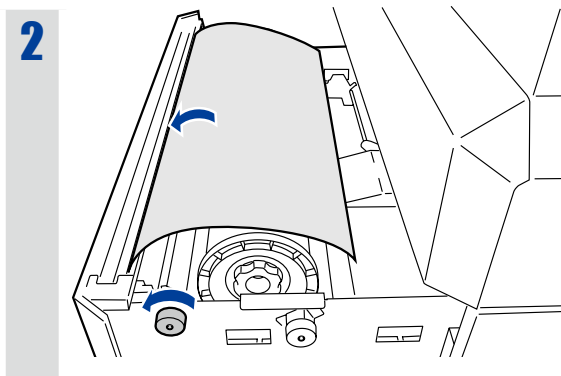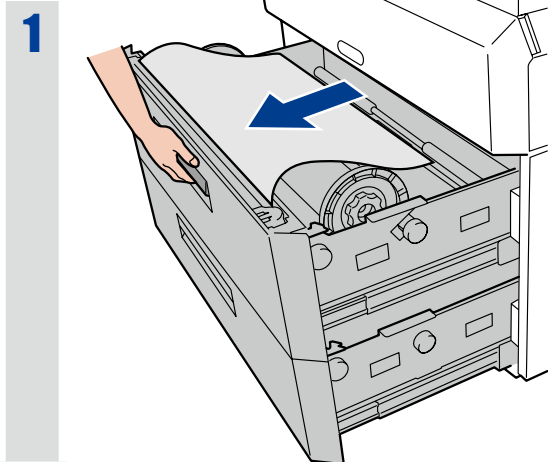  


3

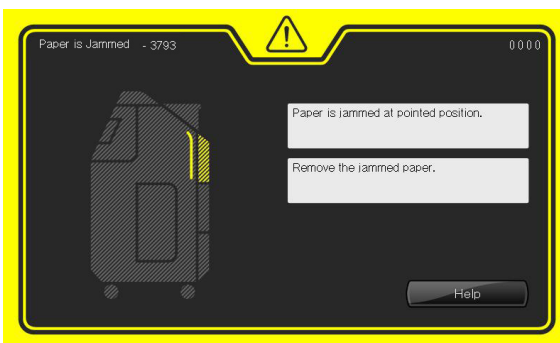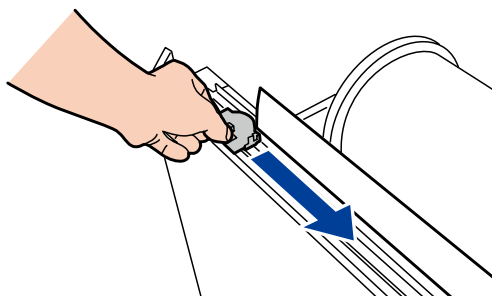  


➔ Paper jam in the front door


 
1

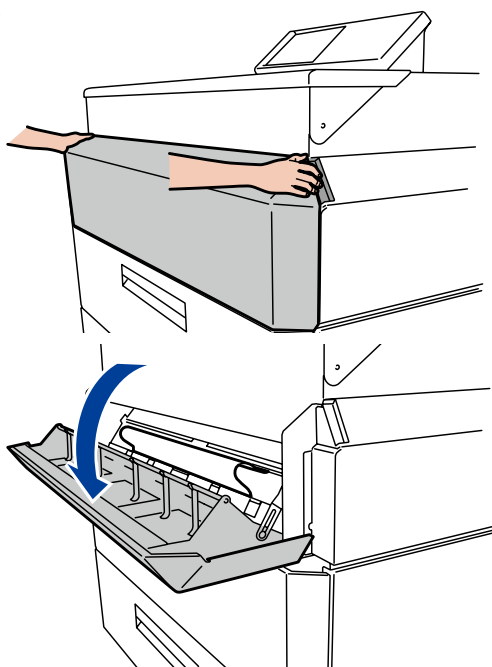

2

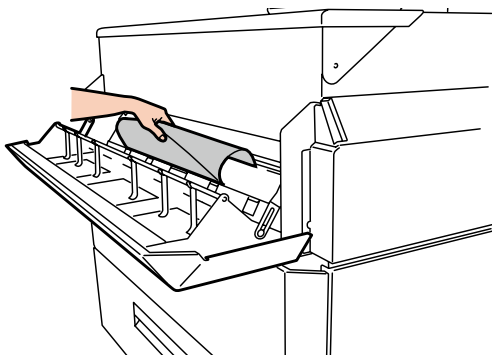 


3

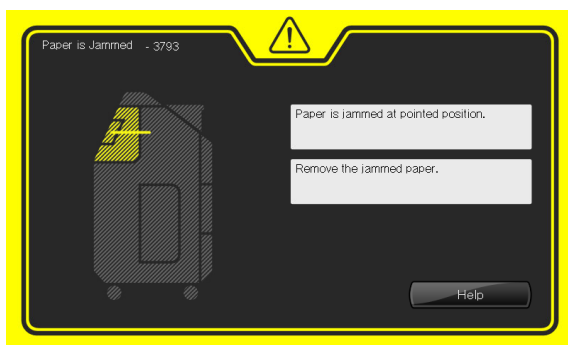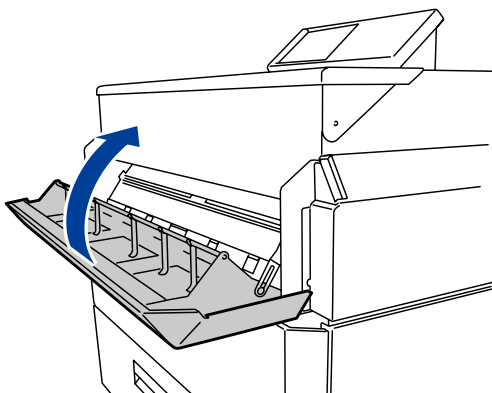  


➔ Paper jam in the Fuser unit

 
1

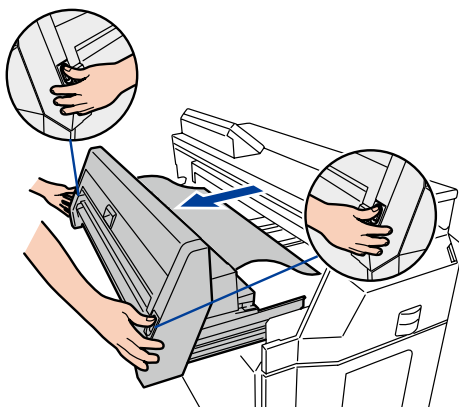


2

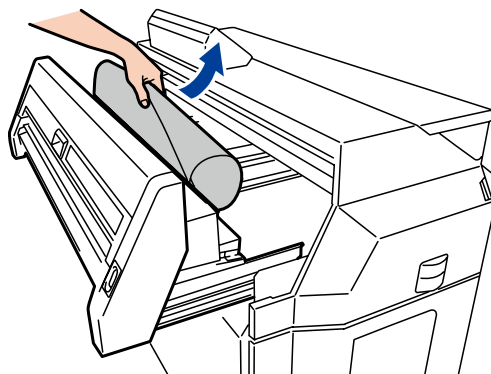 


 When you cannot pull out the paper easily:

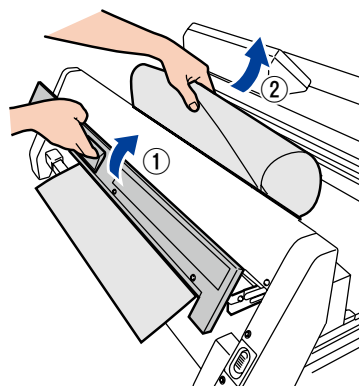


3

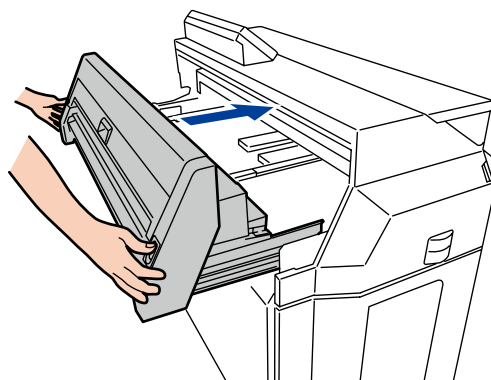 

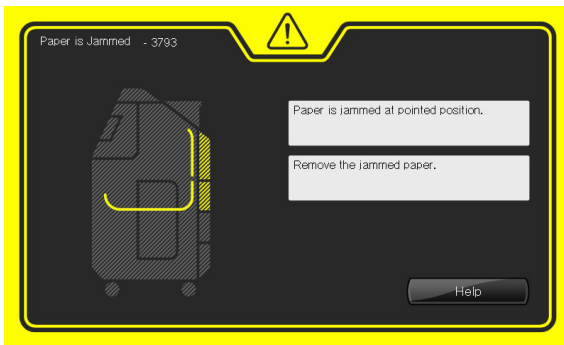 


➔ Paper jam in a roll paper drawer or front door

 
1

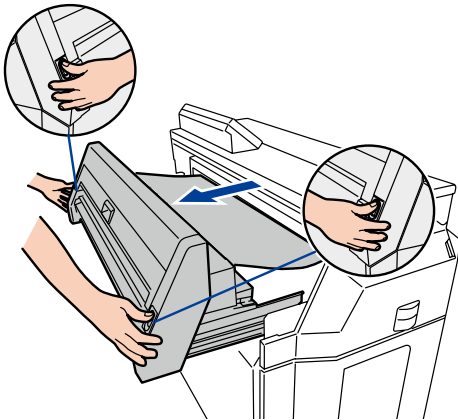


2

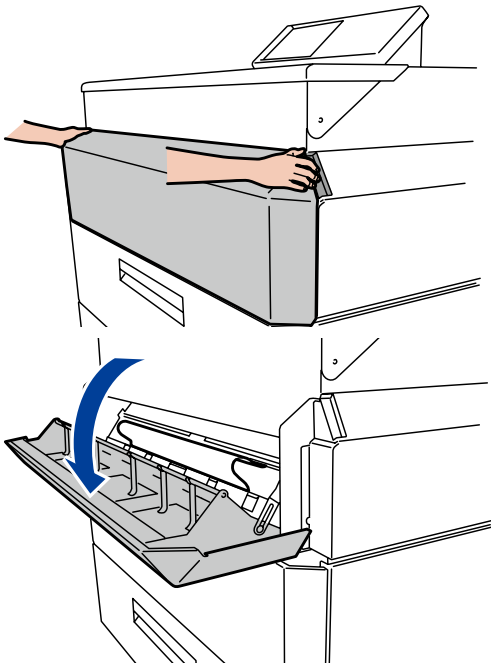 


3

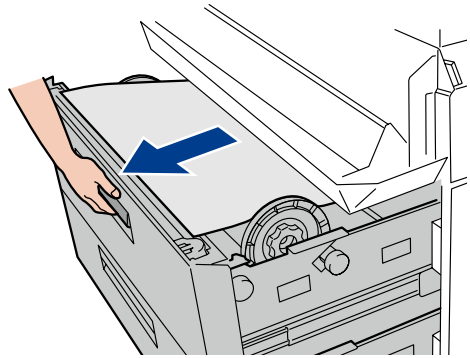 


4

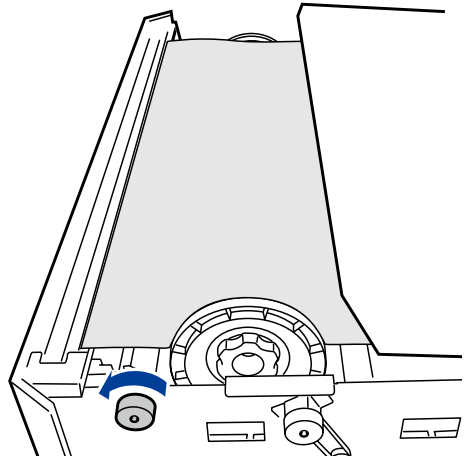 


5

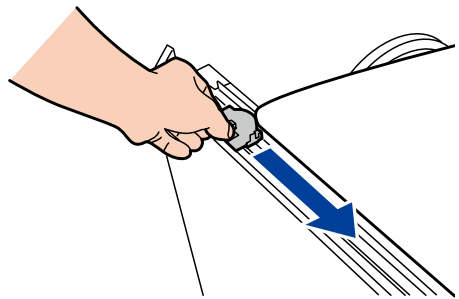 



6

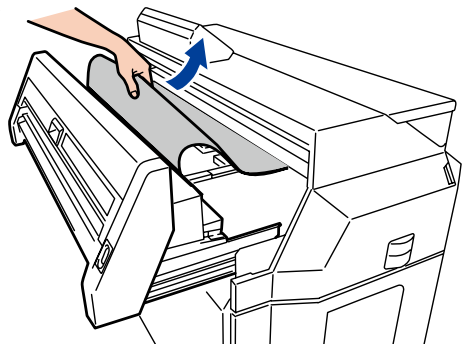 

7

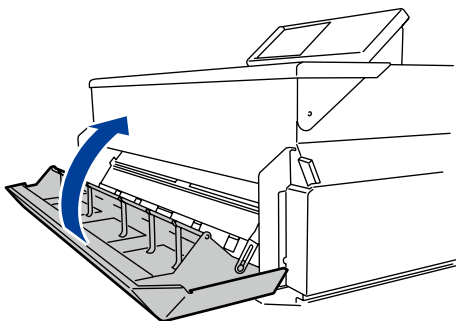 


8

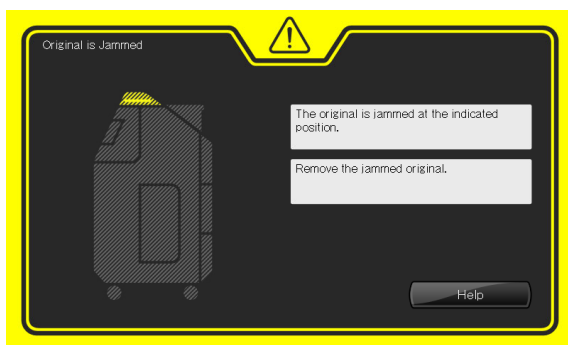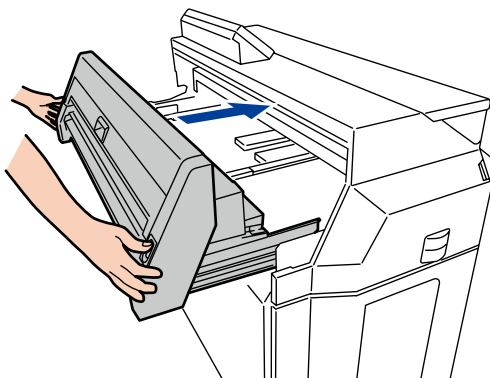  


➔ Original jam MF

 
1

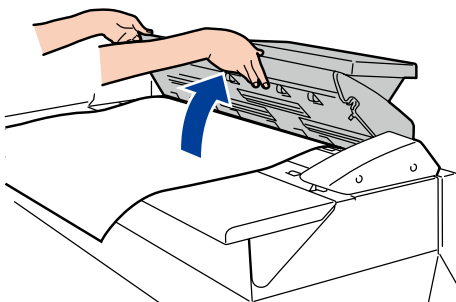


2

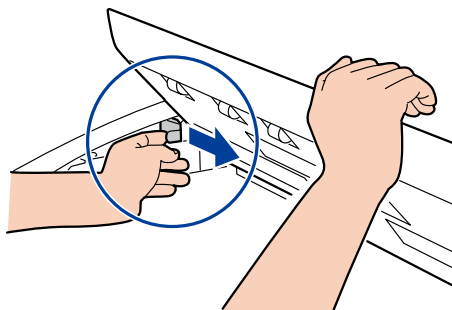 


3

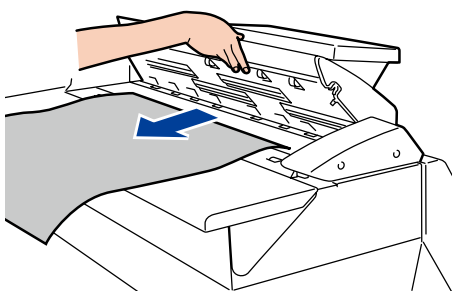 


4

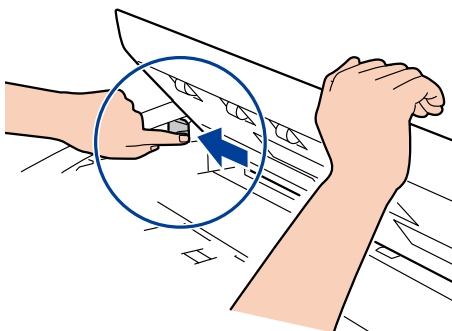 

5

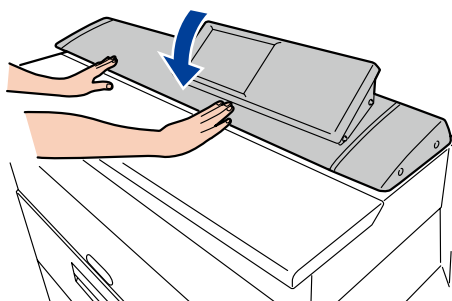 

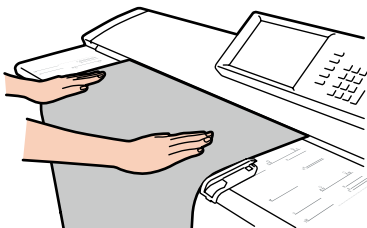 

Set the original

 
Position the original facing down. Set it in the Printer aligned with the original width guide. The inserted original is automatically pulled into the Printer, and set.



Importing Images (Documents) to a Computer


MF

1

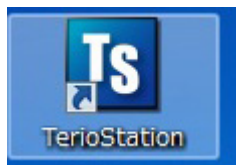


Double-click **TerioStation**.

 2

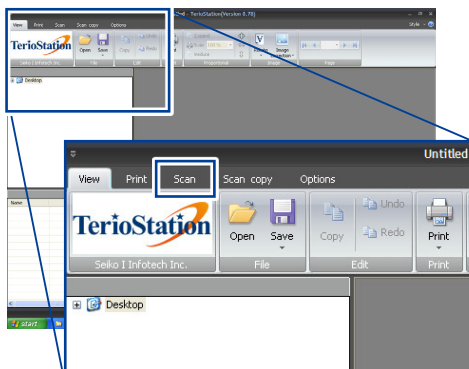


Click the **Scan** tab.

 3

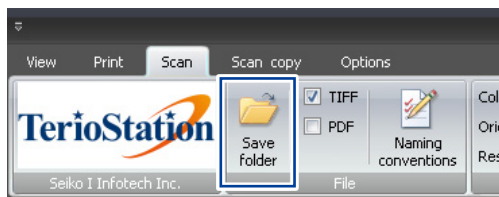


Click **Save Folder**.

 4

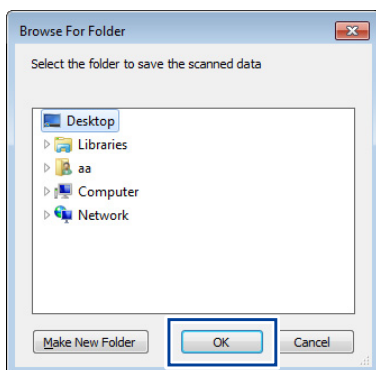


Select the destination folder to save the scanned data. Click **OK**.

 5

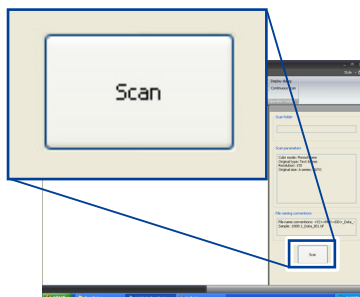


Click **Scan**.

 6

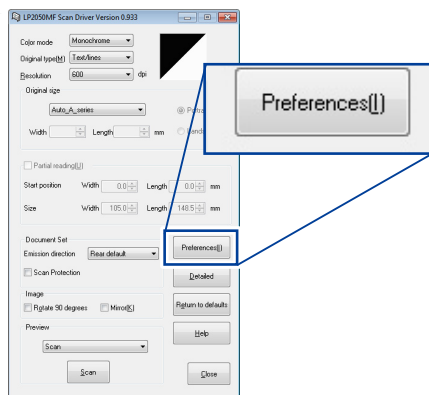


Click **Preferences**.

 7

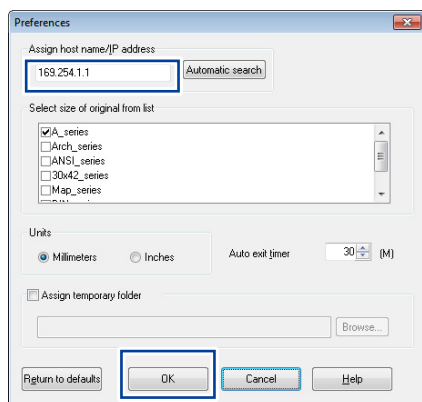


Input the Printer IP address in the **Assign host name/IP address** field. Click **OK**.

 8

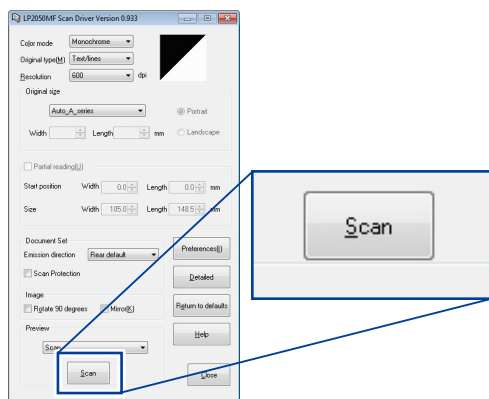

Set the scan conditions, and then click **Scan**.

 9

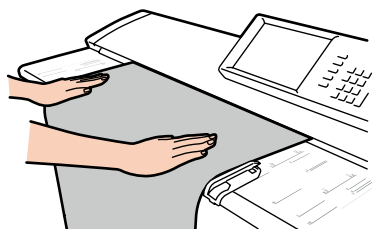

Load the original.

Important

- ◆ If "Scanner is operating in another mode" is displayed, press SCAN on the operation panel.
- ◆ If "Color processing is not supported because the scanner being used is a dedicated monochrome device" is displayed, you cannot scan in color mode.



1

Start the web browser and enter "http://(IP address set on the Printer)" in the address field. Press **Enter**.

2

Click **English**.

3

Click an item from the left menu to check the settings or Printer status.

When an Error Message Appears

 
Take the action specified by the panel message.
Or see the *User's Manual for Basic Printer Operation, Chapter 4*.

Smears on a Printout

Replace the process cartridge. (📖 page 12)


Changing the Time Until Power Save Mode

Set **Time Before Power Save** in the Printer Engine menu.

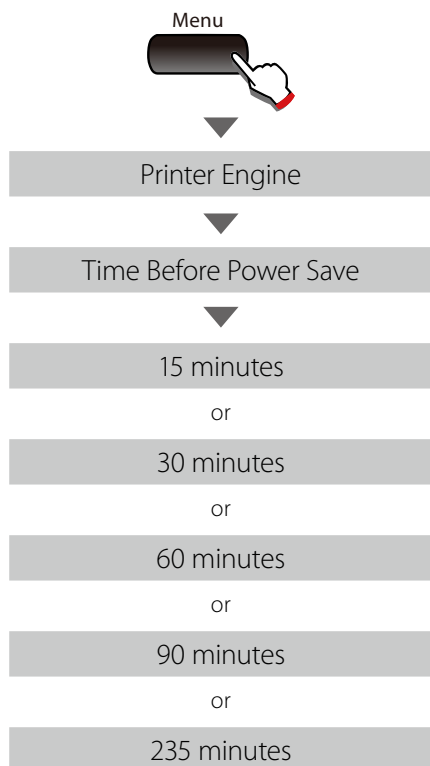


Automatic Paper Cutting After a Certain Time

 Set **Top Cut Timer** in the Printer Engine menu.

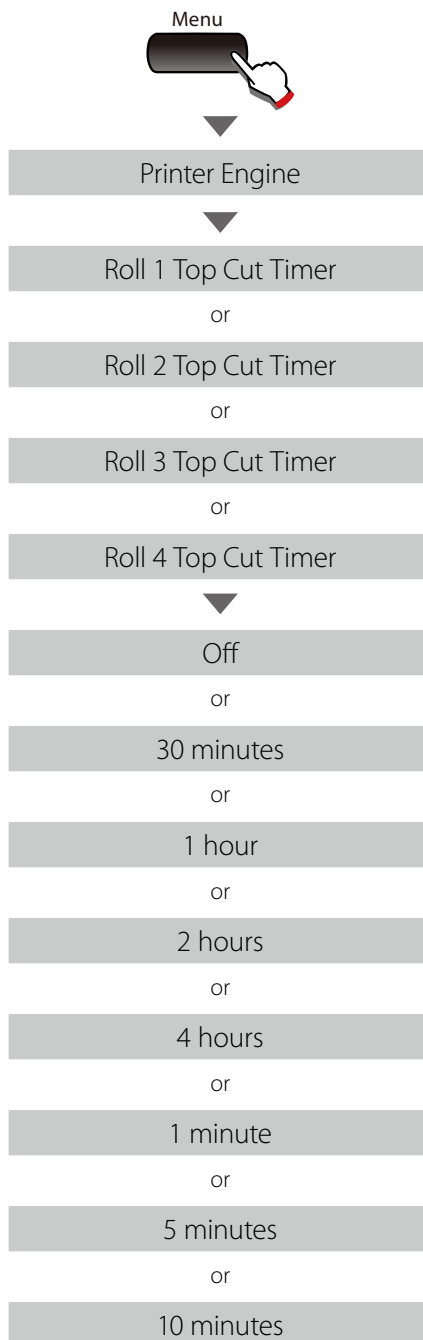


Automatic Paper Cutting After Opening and Closing a Door

 Set **Top Cut at Door Open** to **On** in the Printer Engine menu.

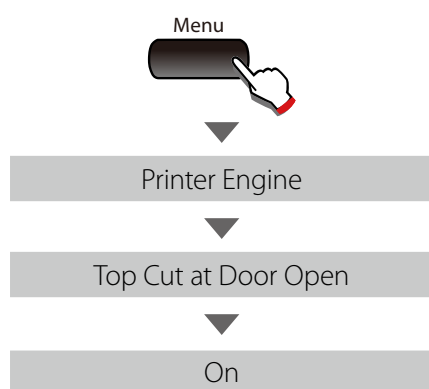


Changing the Print Density

 Set **Print Density** in the Printer Engine menu.

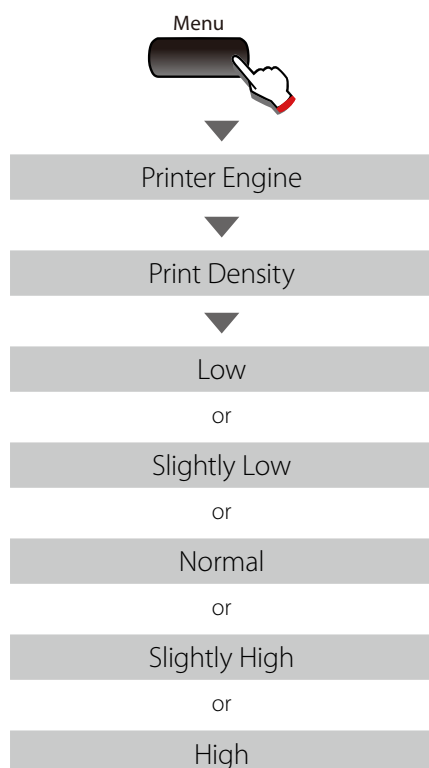


Wrinkles on Tracing Paper

 Set **Humidity for Tracing Paper** to **High Humidity** in the Printer Engine menu.

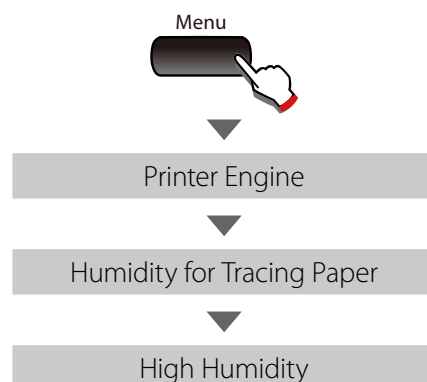

Selecting Paper to Match the Print Data

 
Select **Optimal** at Paper Supply Mode.

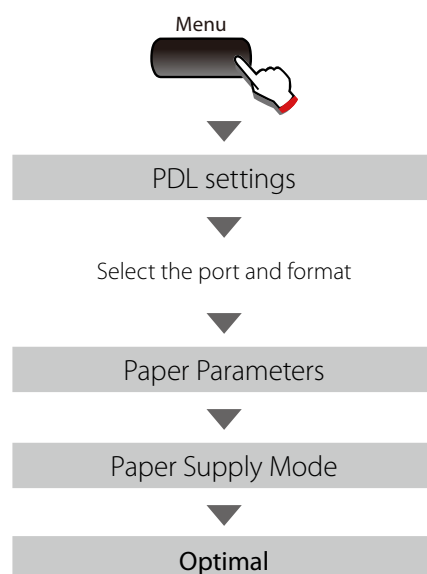


Missing Print or Slow Data Reception

Change the driver settings.

 
1 In **Start Menu**, open **Devices and Printers**.

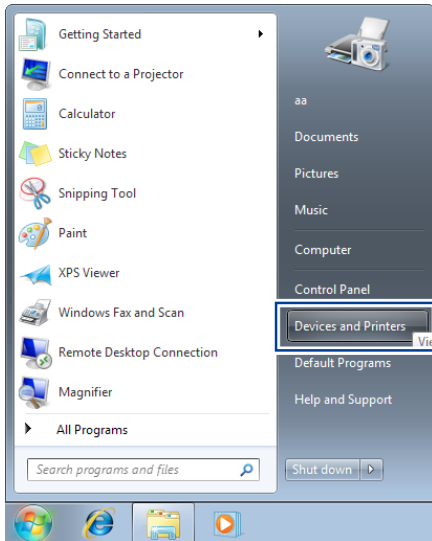

 
2 Right-click the **OKI LP-2050** icon, and then click **Printing Preferences**.

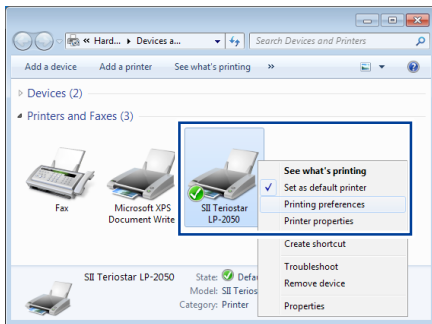


3 Click the **Options** tab.

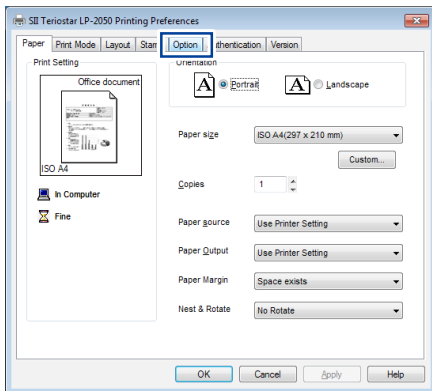 

 
4 Click **Change** in the operation mode of the driver.

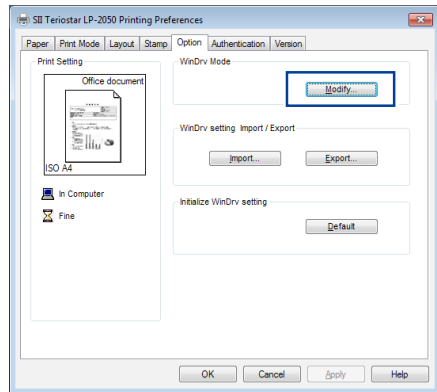

 
5 Change the output process selection from **Process with Printer** to **Process with Computer**. Click **OK**.

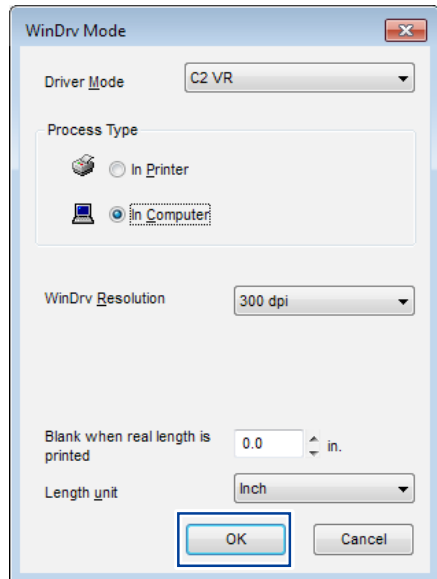

6 Click **Apply**.

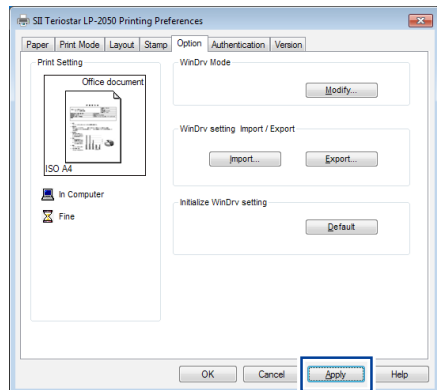 

7 Click **OK**.

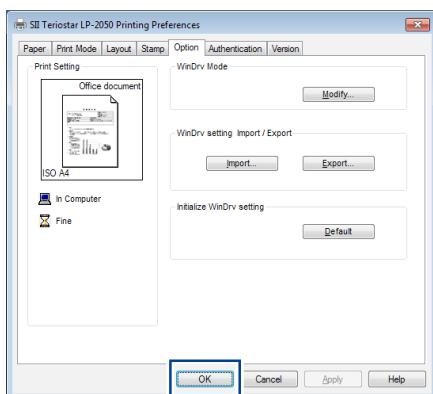 


8 Print.


If the symptom persists, perform the following setting operation.

If the problem persists:

 1 Perform steps 1 to 4 and open **Driver Operation Mode**.

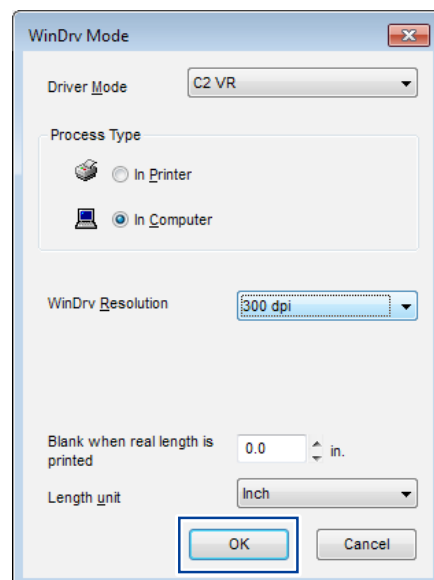


 2 Set the resolution of the printer driver to **200dpi** or **100dpi**. Click **OK**.

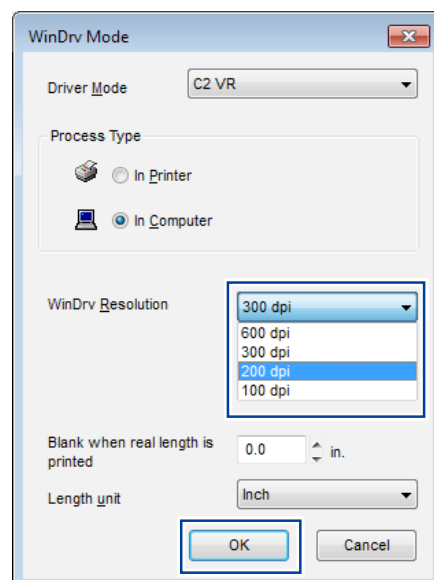


3

 Click **Apply**.

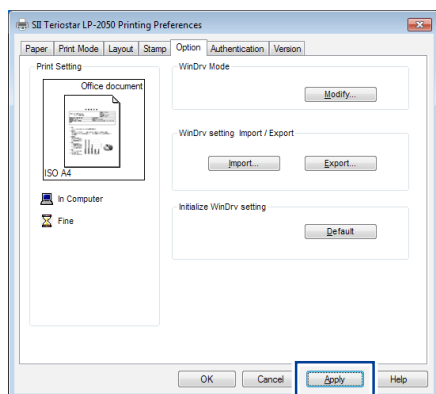

4

 Click **OK**.

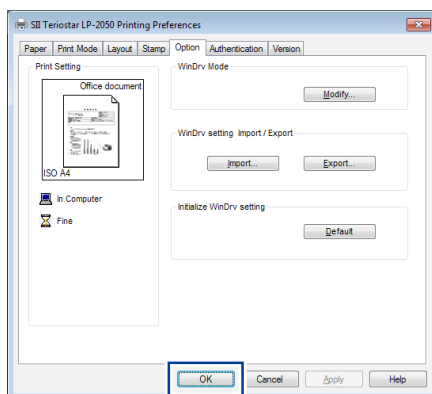

5

Print.

The User's Manuals and driver are on the supplied CD-ROM.



Service Representatives

OKI Data Infotech offers support to ensure you get the most from your Teriostar LP-2050 Series Printer. For details, contact your dealer or nearest service representative.
<http://www.okidata-infotech.com/distributors/index.html>

Disposal Method

Dispose of the used toner cartridges and waste toner bottles according to the local regulations.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



The CE mark, that shows that the products sold in the EU are conformed to the requirements of EC directive, is statutorily obliged to be affixed to the products.

In each directive, the scope of directive to be applied to equipment is explicitly defined. Our company's product LP-2050 series conforms the EMC directive, low voltage directive and RoHS Directive.

Inquiry of CE mark:

OKI Europe Ltd.

Wide Format Division

Siemensstrasse 9 , D-63263 Neu-Isenburg

Germany

Tel: +49 (0)6102 297 400

Fax: +49 (0)6102 297 50 400

OKI Data Infotech Corporation

8 Nakase 1-chome, Mihama-ku, Chiba-shi, Chiba 261-8507, Japan

Phone : +81 43 211 1363

Fax : +81 43 211 8709

OKI

OKI Data Infotech Corporation

1-8, Nakase, Mihama-ku, Chiba-shi, Chiba, 261-8507, Japan

TEL: (043) 211-1369

U00121382804 December, 2015

Copyright© 2015 OKI Data Infotech Corporation.

All rights reserved.

The contents of this manual may be changed without prior notice.