

OKI

MULTIFUNCTIONAL DIGITAL COLOR SYSTEMS

Safety Information

ES9466 MFP/ES9476 MFP

© 2016 Oki Data Corporation All rights reserved

Under the copyright laws, this manual cannot be reproduced in any form without prior written permission of Oki Data.

Safety Information

■ Preface

Thank you for purchasing the Oki Multifunctional Digital Systems or Multifunctional Digital Color Systems. The SAFETY INFORMATION describes the necessary precautions for using this OKI Multifunctional Digital Systems.

This is a manual that is aimed at general users and administrators. For your added safety, be sure to read this booklet before using this equipment. The models vary from region to region.

The following table shows combinations of the model name indicated on the front cover and the model name given in the identification label.

Model name on the front cover	Model name on the identification label
ES9466 MFP	N31316B
ES9476 MFP	N31317B

If there is a model name in the note, the corresponding model is applicable. If not, the above models are applicable.

Example:

ES9466 MFP: This is a note for using ES9466 MFP.

□ Color LCD display

Super high-level technologies are used to produce a color LCD display. However, the following phenomena may occur; 1) “Missing/dead” or “lit” dots may exist. 2) Unevenness in color or brightness may occur depending on the viewing angles or the temperature change. Please note that they are not to be regarded as being defects of the color LCD display.

□ Precautions when using the touch panel

- Using the touch panel near a device that generates electromagnetic waves, such as a fluorescent lamp, electric generator or air conditioner, may cause a malfunction.
- If you operate the touch panel with wet or gloved fingers, it may not respond normally.
- Pressing the touch panel with a strong force will damage it and cause a breakage.
- Attaching a label or seal to the touch panel may cause a malfunction.

□ Trademarks

- Microsoft, Windows, Windows NT, and the brand names and product names of other Microsoft products are trademarks of Microsoft Corporation in the US and other countries.
- Apple, AppleTalk, Macintosh, Mac, Mac OS, Safari, iPhone, iPod touch, TrueType, AirPrint, AirPrint logo, and iPad are trademarks of Apple Inc.
- IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- Adobe®, Acrobat®, Reader, and PostScript® are trademarks or registered trademarks of Adobe Systems Incorporated.
- Mozilla®, Firefox® and the Firefox logo® are trademarks or registered trademarks of Mozilla Foundation in the U.S. and other countries.
- IBM, AT and AIX are trademarks of International Business Machines Corporation.
- NOVELL®, NetWare®, and NDS® are trademarks of Novell, Inc.
- Other company names and product names in this manual are the trademarks of their respective companies.

❑ Official Names of Windows Operating System

- The official name of Windows Vista® is Microsoft Windows Vista Operating System.
- The official name of Windows® 7 is Microsoft Windows 7 Operating System.
- The official name of Windows® 8.1 is Microsoft Windows 8.1 Operating System.
- The official name of Windows® 10 is Microsoft Windows 10 Operating System.
- The official name of Windows Server® 2008 is Microsoft Windows Server 2008 Operating System.
- The official name of Windows Server® 2012 is Microsoft Windows Server 2012 Operating System.
- The official name of Windows Server® 2016 is Microsoft Windows Server 2016 Operating System.

❑ Disclaimer Notice

The following notice sets out the exclusions and limitations of liability of OKI DATA CORPORATION (including its employees, agents and sub-contractors) to any purchaser or user ('User') of the ES9466 MFP/ES9476 MFP including its accessories, options and bundled software ('Product').

1. The exclusion and limitations of liability referred to in this notice shall be effective to the fullest extent permissible at law. For the avoidance of doubt, nothing in this notice shall be taken to exclude or limit OKI DATA CORPORATION liability for death or personal injury caused by OKI DATA CORPORATION negligence or OKI DATA CORPORATION's fraudulent misrepresentation.
2. All warranties, conditions and other terms implied by law are, to the fullest extent permitted by law, excluded and no such implied warranties are given or apply in relation to the Products.
3. OKI DATA CORPORATION shall not be liable for any loss, cost, expense, claim or damage whatsoever caused by any of the following:
 - (a) use or handling of the Product otherwise than in accordance with the manuals, including but not limited to Operator's Manual, User's Guide, and/or incorrect or careless handling or use of the Product;
 - (b) any cause which prevents the Product from operating or functioning correctly which arises from or is attributable to either acts, omissions, events or accidents beyond the reasonable control of OKI DATA CORPORATION including without limitation acts of God, war, riot, civil commotion, malicious or deliberate damage, fire, flood, or storm, natural calamity, earthquakes, abnormal voltage or other disasters;
 - (c) additions, modifications, disassembly, transportation, or repairs by any person other than service technicians authorized by OKI DATA CORPORATION; or
 - (d) use of paper, supplies or parts other than those recommended by OKI DATA CORPORATION.
4. Subject to paragraph 1, OKI DATA CORPORATION shall not be liable to Customer for:
 - (a) loss of profits; loss of sales or turnover; loss of or damage to reputation; loss of production; loss of anticipated savings; loss of goodwill or business opportunities; loss of customers; loss of, or loss of use of, any software or data; loss under or in relation to any contract; or
 - (b) any special, incidental, consequential or indirect loss or damage, costs, expenses, financial loss or claims for consequential compensation;

whatsoever and howsoever caused which arise out of or in connection with the Product or the use or handling of the Product even if OKI DATA CORPORATION is advised of the possibility of such damages.

OKI DATA CORPORATION shall not be liable for any loss, cost, expense, claim or damage caused by any inability to use (including, but not limited to failure, malfunction, hang-up, virus infection or other problems) which arises from use of the Product with hardware, goods or software which OKI DATA CORPORATION has not directly or indirectly supplied

■ Security Precautions

In order to make correct use of this equipment's security function, first read the following precautions carefully. Be sure to assign administrators who have enough capability to sustain responsible management since significant privileges for managing and handling this equipment will be given them.


□ To Administrators


- To avoid physical security problems, such as hardware removal or inappropriate disassembly at the installation site, take all necessary measures, such as checking who enters and leaves the site.
- When connecting this equipment with an outer network such as the Internet, only operate it in a network environment protected by a firewall, etc. to prevent information from being leaked due to incorrect settings or avoid illegal access by unauthorized users.
- To prevent the configuration settings from being altered improperly or similar, before you use this equipment, change the administrator and user registration passwords set by factory default. Also, be sure periodically to change each password set for this equipment.
- In order to make proper use of the network and user management functions, be sure to read the TopAccess Guide first.
- Be sure to understand the security policy and its procedure in your organization, and manage and operate this equipment and external devices according to the policy after first reading the operator's manual. Then explain the security instructions to general users who are authorized to use this equipment to allow them to conform to the security rules.
- Provide general users with the appropriate privilege of using this equipment and keep supervising its correct operation.
- Always check if the network function and user management function are enabled in order to maintain security. Should you happen to come across any abnormality, contact your service technician immediately. See the TopAccess Guide for the checking method.
- If any failure or unauthorized access occurs in this equipment, check the logs in TopAccess to find the cause. See the TopAccess Guide for details of checking logs.
- Be sure to keep the OSs and browsers, which are installed in your computer used by connecting this equipment, in the latest status. Then explain this to general users of this equipment to allow them to conform to this.

□ To General Users



- After you have finished operating the equipment, be careful not to forget to remove any originals, printed paper or USB storage devices.
- Change the password regularly. Make sure not to use any predictable number such as your birthday or employee ID number, and keep it secret.
- Do not leave the equipment during the performance of a job since your originals may be seen or the output paper could be taken by someone.
- Check your log regularly to guard against unauthorized access by identity theft. If there are too many logs, you may find the one you want more easily using the sort function in TopAccess.


❑ Data Encryption Function

An icon  appears on the touch panel when the user data of the Data Encryption Function by AES are enabled on this equipment.

An icon  appears on the touch panel when the Data Encryption Function with Wipe Technology HDD is enabled on this equipment.

How to check the active status of Data Encryption Function

The icon  or  appears on the upper right of the counter screen if the Data Encryption Function is enabled. Contact your service technician for the use of the Data Encryption Function.

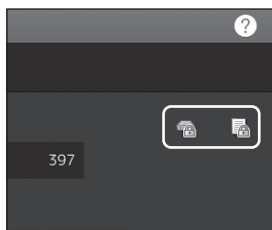 

■ Notice to Users

After a suitable place has been selected for the installation of the ES9466 MFP/ES9476 MFP, please do not change it. Avoid excessive heat, dust, vibration and direct sunlight. Also, provide proper ventilation as the copier emits a small amount of ozone.



Indicates that the products affixing this mark use laser and potential risk and hazard of eye or optic damage and/or skin burns if not avoided. Please follow the cautions described near this mark.



Indicates that the locations affixing this mark are high temperature and have potential risk and hazard of skin burns and/or relating damage if not avoided. Please do not touch the location and its peripheral area.

ES9466 MFP

The unit is classified as Class 1 Laser Product according to IEC60825-1:2014 including amendments. The unit uses laser diodes with a max. output of 25 mW, a wavelength of 788 nm at a continuous pulse.

ES9476 MFP

The unit is classified as Class 1 Laser Product according to IEC60825-1:2014 including amendments. The unit uses laser diodes with a max. output of 15 mW, a wavelength of 792 nm at a continuous pulse.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

For the EU only

Working environment

From EMC (Electromagnetic Compatibility) point of view, the operation of this product is being restricted in following environments:

- Medical Environments: This product is not certified as a medical product according to the Medical Product Directive 93/42/EEC.
- Domestic environments (e.g. a private living room with TV / Radio sets in the nearby surrounding area) because this is a so called EMC class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures!

Any consequences resulting from the use of this product in restricted working environments are not the responsibility of Oki Data.

The consequences of the use of this product in restricted working environments may be an electromagnetic interference with other devices or machines in the nearby surrounding area. This can result into malfunction including data loss / data error pertaining to this product or the other devices / machines involved in the electromagnetic interference.

Furthermore, for general safety reasons, the use of this product in environments with explosive atmospheres is not permitted.

CE compliance

This product is labelled with the CE mark in accordance with the provisions of the applicable European Directives, notably the Low Voltage Directive 2014/35/EU, the Electromagnetic Compatibility Directive 2014/30/EU, the RoHS Directive 2011/65/EU for this product and the electric accessories, the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC for the telecommunication accessories.

CE marking is the responsibility of Oki Europe Limited Biays House Wick Rode Egham Surrey, TW20 OHJ United Kingdom.

For a copy of the related CE Declaration of Conformity, please contact your dealer or Oki Data.

Warning:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Following information is for EU-member states only:



This product is marked according to the requirement in EU-Directive on Waste electrical and electronic equipment - WEEE.

The use of the symbol indicates that this product may not be disposed as unsorted municipal waste and has to be collected separately. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about the take-back and recycling of this product please contact your supplier where you purchased the product.

Following information is for EU-member states only:



Disposal of batteries and/or accumulators based on EU-Directive on batteries and accumulators and waste batteries and accumulators.

By ensuring that batteries and/or accumulators are disposed of correctly, you will help prevent potential negative consequences for the environmental and human health, which could otherwise be caused by inappropriate waste handling of this product.
For more detailed information about the take-back and recycling of batteries and/or accumulators, please contact your supplier where you purchased this product.

This device is not intended for use in the direct field of view at visual display workplaces.
To avoid incommoding reflections at visual display workplaces this device must not be placed in the direct field of view.

Duplex printing (if applicable)

Duplex printing enables both sides of a sheet of paper to be used, and therefore helps to reduce the use of valuable resource's by reducing your paper consumption. We recommend that this feature is enabled whenever you print.

Recycled paper

This product can be used to print on recycled paper which is produced in accordance with European standard EN 12281 or a similar quality standard. In addition it can support printing on paper down to a weight of 64 g/m², lighter paper means less raw materials and represents a resource saving.

Energy consumption

The amount of electricity a machine consumes depends as much on its properties as it does on the way you use it. The machine is designed to allow you to reduce electricity consumption by switching to "Ready" after the last print page. If required it can immediately print again from this mode. If no additional prints are required, and after a certain time period, the device switches to energy saving modes. This is power management.

In these modes the machine consumes less power (watts). If the machine is to print again it needs a little longer to return from an energy-saving mode than from the Ready mode.

For maximum energy savings we advise the default values for power management should be used.

The Energy Star programme is a voluntary scheme to promote the development and purchase of energy efficient models, which help to minimise environmental impact.

For India only

Following information is only for India:



The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the take-back and recycling of this product, please contact your supplier where you purchased the product. This product including components, consumables, parts and spares complies with the “India E-Waste Rules” and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1% by weight and 0.01% by weight for cadmium, except for the exemption set in the Rule.

For Argentina only

Following information is only for the province of Buenos Aires in Argentina:



La siguiente información es solo para Argentina
El uso de este símbolo indica que este producto no puede ser tratado como residuos domésticos.
Asegúrese que este producto se deseché correctamente, Usted ayudara a evitar posibles consecuencias negativas para el medio ambiente y la salud humana, que podrían derivarse de la incorrecta manipulación de este producto.

Para mas información sobre el reciclaje de este producto, consulte con nuestro.

For Turkey only

Following information is only for Turkey:

AEEE Yönetmeliğine Uygundur

For China only

	Indicates that the products affixing this mark can be used in areas other than tropical climate area in China.
	Indicates that the products affixing this mark can be used in areas up to 2000 m above sea level in China.

For Thailand, Singapore, China and Canada only

A take-back program for products, toner cartridges and waste toner boxes is available for each of the above countries. To return them, please do so in accordance with the contract between the supplier and the consumer or contact your supplier where you purchased the product.

❑ Supplies / Parts

- **Dependability**

Genuine Oki supplies are subjected to the strictest of inspections so that every supply you receive will perform at optimal levels.

- **High Productivity**

Genuine Oki supplies are created to meet the demands of our competitive world and provide highspeed reliable copies when you need them.

- **Stable Image Quality**

Genuine Oki supplies are designed to provide consistently stable image output.

- **Copier-friendly Supplies**

Genuine Oki supplies are designed to help to keep the copier and all its parts in troublefree working order. Reduction of machine wear is due to Oki's intimate knowledge of the copier's characteristics, ensuring the highest standard of care.

- **Perfectly Suited Supplies**

From the beginning Oki supplies and machines were made for each other. Whenever Oki designs a new machine, it also designs a new toner that is made just for that machine. By using Genuine Oki supplies with Oki copiers, you are guaranteed optimum performance.

❑ Toner

- **Optimum Image Quality**

Oki toner is manufactured using ultra-fine quality materials under precisely controlled conditions to ensure that your Oki copiers will continually generate sharp high-quality images.

- **Cost Advantage**

Genuine Oki toner provides value. Only the proper amount of toner is used during the reproduction process, thereby enabling the machine to continue to operate until all the toner has been used. In this way you get the full value from each cartridge used.

- **Environmental Harmony**

Genuine Oki toner is manufactured with the environment in mind. To protect our planet for the benefit of future generations, we use embossed or plastic labels, making our toner cartridges fully recyclable. In addition, dust and ozone levels have been reduced to improve the working environment.

- **User Friendly**

Before approving our toners for sale, we test them to be sure that they pass the strictest of health standards. This takes all the worry out of handling the toner.

❑ General


- **Service and Support Benefits**


Oki's Service technicians are certified to keep your copier performing at optimum levels. To ensure continuous image quality, utilize an authorized Oki Service provider to care for and perform periodical maintenance on your copier.

 
□ How to read this manual


Symbols in this manual


In this manual, some important items are described with the symbols shown below. Be sure to read these items before using this equipment.

 **WARNING** Indicates a potentially hazardous situation which, if not avoided, could result in death, serious injury, or serious damage, or fire in the equipment or surrounding objects.

 **CAUTION** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, partial damage to the equipment or surrounding objects, or loss of data.

 **Note** Indicates information to which you should pay attention when operating the equipment.

 **Tip** Describes handy information that is useful to know when operating the equipment.

 Pages describing items related to what you are currently doing. See these pages as required.

■ General Precautions

□ When installing or moving

WARNING

For the U.S.A. and Canada

Multifunctional Digital Systems require 120 V, 12 A, 50/60 Hz electric power.

For the EU

Multifunctional Digital Systems require 220 - 240 V AC, 8 A, 50/60 Hz electric power.

Except the U.S.A., Canada and the EU

Multifunctional Digital Systems require 220 - 240 V AC, 8 A, 50/60 Hz electric power.

- Do not use a power supply with a voltage other than that specified.
Avoid multiple connections in the same outlet. This could cause a fire or give you an electric shock. If you are considering increasing the number of outlets, contact an electrician.
- Always connect this Multifunctional Digital Systems to an outlet with a ground connection to avoid the danger of fire or electric shock in case of short-circuiting. Contact your service representative for the details. Be sure to use a 3-conductor, grounded wall outlet.
In areas, except the U.S. and Canada, where a 2-pin plug is used, the Multifunctional Digital Systems must be grounded for safety. Never ground it to a gas pipe, a water pipe, or any other object not suitable for grounding.
- Plug the power cord securely into the outlet. If it is not plugged in properly, it could heat up and cause a fire or give you an electric shock.

-
- Do not damage, break or attempt to repair the power cord.
The following things should not be done to the power cord.
 - Twisting it
 - Bending it
 - Pulling it
 - Placing anything on it
 - Heating
 - Situating it near radiators or other heat sources

 
This could cause a fire or give you an electric shock. If the power cord is damaged, contact your service representative.

- Do not install the equipment by yourself or try to move it once it has been installed. This could result in an injury or damage to the device. Contact your service representative if the equipment needs to be installed or moved.
- The socket outlet shall be near the equipment and be easily accessible.
- Pull out the plug from the outlet more than once a year to clean around the prongs. Accumulating dust and dirt could cause a fire due to the heat released by electric leakage.


⚠ CAUTION

- When removing the plug from the outlet, do not pull the power cord. Always hold the plug when removing it from the outlet. If the power cord is pulled, the wires may break and this could cause a fire or give you an electric shock.
- Make sure that the ventilation holes are not blocked.
If the temperature within the Multifunctional Digital Systems becomes too high, a fire could result.
- Both the Paper Feed Pedestal and the Large Capacity Feeder have 4 adjusters (antiskid devices) underneath. After the equipment has been moved and installed, be sure to turn and lower them to fix it.
For the Paper Feed Pedestal, fix the fall-prevention stoppers after the adjusters have been adjusted.

Paper Feed Pedestal

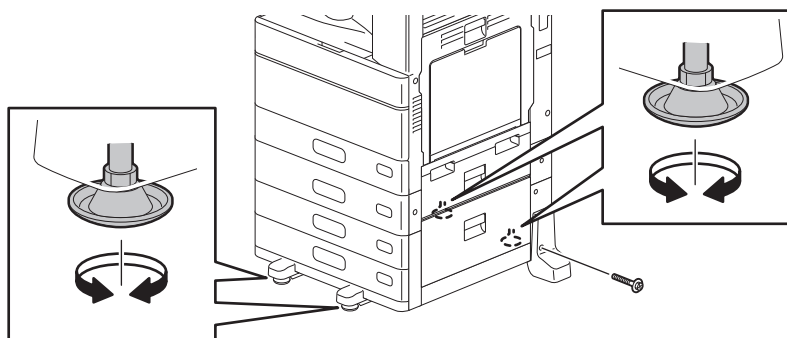


Large Capacity Feeder

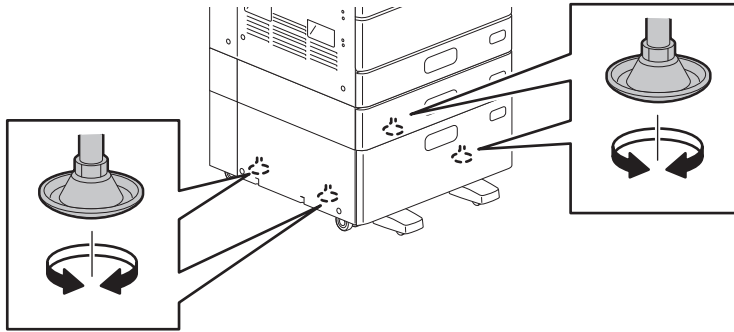 


Before moving the equipment with the Desk installed, remove the front stabilizer. Be sure to reinstall it after the equipment has been moved.

 Removing the stabilizer

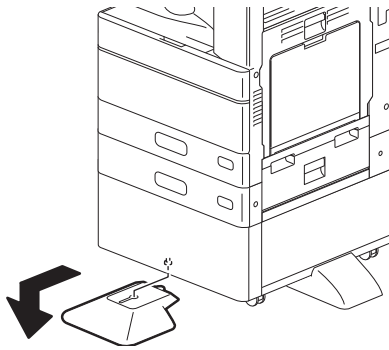

Installing the stabilizer

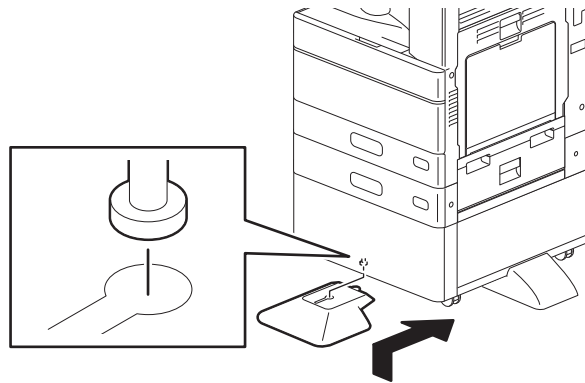 

⚠ WARNING

Do not install the equipment by yourself or try to move it once it has been installed. This could result in an injury or damage to the device. Contact your service representative if the equipment needs to be installed or moved.

Other points

- If there is insufficient space around the equipment, the poor ventilation will result in malfunction, also some operations such as feeding from MPT and releasing paper jams may become difficult. To ensure adequate space, follow the table below as a guide.

Adequate space		
Rear	Left	Right
20 cm (7.9")	30 cm (11.8")	80 cm (31.5")

- Be sure to fix the power cable securely so that no one trips over it.
- Adverse environmental conditions may affect the safe operation and performance of the Multifunctional Digital Systems, and the Multifunctional Digital Systems could break down.
 - Avoid locations near windows or with exposure to direct sunlight.
 - Avoid locations with drastic temperature fluctuations.
 - Avoid too much dust.

-
- Avoid locations that suffer from vibration.
 - Make sure that the air is able to flow freely and that there is sufficient ventilation. Without adequate ventilation, the unpleasant odor released by ozone will begin to dominate the atmosphere. The ozone filter is a periodic replacement part. For more details, contact your supplier where you purchased the product.
 - When the noise of the equipment is too loud, placing it in a separate room is recommended.

□ When using the Multifunctional Digital Systems

⚠ WARNING

 
- Do not take off the cover of the equipment; otherwise you could be injured or get an electric shock.
- Do not remove or connect the plug with wet hands, as this could give you an electric shock.
- Do not place any container with liquid (flower vases, coffee cups, etc.) on or near the equipment. This could cause a fire or give you an electric shock.
- Keep paper clips and staples away from the air vent. If not, a fire could result or you could get an electric shock.
- If the Multifunctional Digital Systems becomes excessively hot, smoke comes out of it or there is an odd smell or noise, proceed as follows.
Turn the main power switch OFF and remove the plug from the outlet, then contact your service representative.
- If the Multifunctional Digital Systems will not be used for more than one month, remove the plug from the outlet for safety purposes during that time. If an insulation failure occurs, this could cause a fire or give you an electric shock.
- Do not touch any portions other than those specified in the Operator's Manual. This could cause a malfunction, or you could get an electric shock, be injured or burned.

⚠ CAUTION







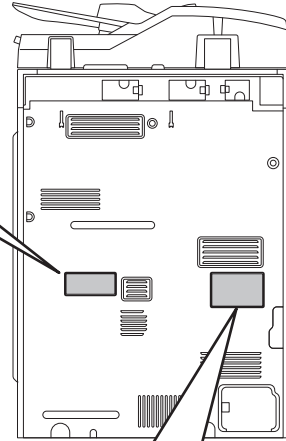



- Do not place heavy objects (4 kg/9 lb. or more) on the original glass and do not press on it with force. Breaking the glass could cause personal injury.
- Do not place heavy objects (4 kg/9 lb. or more) on the Multifunctional Digital Systems. If the objects fall off, this could cause injury.
- Do not touch the fuser unit or the metal area around it. Since they are very hot, you could be burned or the shock could cause you to injure your hand in the machine.
- Be careful not to let your fingers be caught when closing the tray. This could cause an injury.
- Be careful not to let your fingers be caught between the equipment and the duplexing unit or automatic duplexing unit. This could cause an injury.
- Do not touch the metal portion of the guide plate in the duplexing unit or automatic duplexing unit as it could burn you.
- Do not touch the hinge (= a connecting part) on the rear side of the Reversing Automatic Document Feeder/Dual Scan Document Feeder. This could catch and injure your fingers when you open or close the Reversing Automatic Document Feeder/Dual Scan Document Feeder.
- Always keep hands and fingers clear of the finisher stacker hinge, as the stacker could move unexpectedly. Failure to do so could result in injury to your hand and/or fingers.
- Do not use the pulled out trays as steps. This could injure you if you fall.
- When changing the angle of the control panel, be careful not to catch your hands in the gap between the equipment and the control panel. This could cause personal injury.

Position of certification labels, etc.


Explanatory label



Identification label

<p>For ES9466 MFP</p> <p>Model No. N31316B 220-240V AC 50/60Hz 8A</p>      <p>Oki EUROPE LIMITED Blays House, Wick Road, Egham, Surrey, TW20 0HJ, United Kingdom</p> <p>EU ONLY</p> <p>www.tuv.com ID: 0000052590</p> <p>Manufacturer : Oki Data Corporation 4-11-22 Shibaura, Minato-ku, Tokyo 108-8551, Japan</p> <p style="text-align: right;">TC</p> <p style="text-align: center;">Oki Data Corporation Made in China</p>	<p>For ES9476 MFP</p> <p>Model No. N31317B 220-240V AC 50/60Hz 8A</p>      <p>Oki EUROPE LIMITED Blays House, Wick Road, Egham, Surrey, TW20 0HJ, United Kingdom</p> <p>EU ONLY</p> <p>www.tuv.com ID: 0000052590</p> <p>Manufacturer : Oki Data Corporation 4-11-22 Shibaura, Minato-ku, Tokyo 108-8551, Japan</p> <p style="text-align: right;">TC</p> <p style="text-align: center;">Oki Data Corporation Made in China</p>
--	---

 Warning label

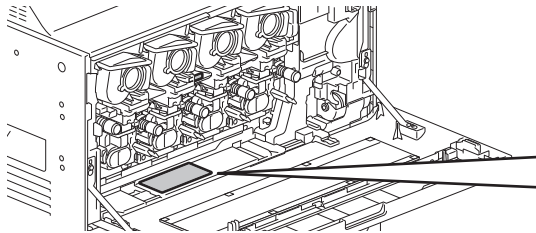

DANGER-CLASS 3B INVISIBLE LASER RADIATION WHEN OPTICAL UNIT OPEN OR DRUM UNIT REMOVED AND INTERLOCK DEFEATED, AVOID DIRECT EXPOSURE TO BEAM.


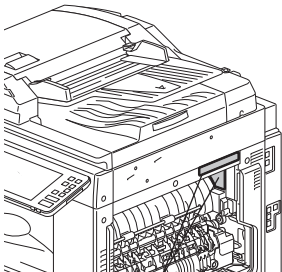 
VORSICHT-KLASSE 3B UNSICHTBARE LASERSTRAHLUNG, WENN DIE ABDECKUNG GEÖFFNET ODER DIE TRUMMEL ENTFERNT UND DIE VERRIEGELUNG UNWIRKSAM GEMACHT WIRD, NICHT DIREKT DEM STRAHL AUSSETZEN.

DANGER-CLASSE 3B RAYON LASER INVISIBLE LORSQUE LE BLOC OPTIQUE EST OUVERT, LE TAMBOUR RETIRE ET LE VERROUILLAGE HORS D'USAGE, EVITER L'EXPOSITION DIRECTE AU RAYON.

 
PELIGRO-RADIACION INVISIBLE DE LASER CLASE 3B CUANDO LA UNIDAD OPTICA ESTA ABIERTA O LA UNIDAD DEL CILINDRO ES RETIRADA Y CUANDO EL INTERRUPTOR DE SEGURIDAD ESTA DESACTIVADO, EVITE EXPOSICION DIRECTA AL RAYO.

危険-ドラムユニットを外したり光学ユニットを開けたときドラススイッチを無効にするとクラス3Bの不可視レーザー放射の恐れあり。ビームへの直接曝露を避けよ。

>PS<

Warning for high temperature area (Fuser unit)

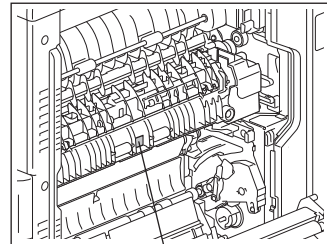

Warning for high temperature area (Fuser unit)

Other points

- Be very careful to treat the touch panel gently and never hit it. Breaking the surface could cause malfunctions.
- Do not turn the power OFF with jammed paper remaining inside the equipment. This could cause a malfunction when the power is turned ON next time.
- Be sure to turn the power OFF when leaving the office or if there is a power outage. However, do not turn the power OFF if the weekly timer is in use.
- Be careful because the paper exit area and paper just after exiting are hot.
- Do not place anything other than paper on the receiving tray. This could disturb a normal operation and cause malfunctions.
- Do not touch the photoconductive drum, transfer belt and 2nd transfer roller. This could cause image problems.
- Do not open/close the covers and the MPT, or pull out the trays during printing.

□ During maintenance or inspection

WARNING

- Never attempt to repair, disassemble or modify the Multifunctional Digital Systems by yourself. You could cause a fire or get an electric shock. Always contact your Service representative for maintenance or repair of the internal parts of the Multifunctional Digital Systems.
- Do not let liquids such as water and oil get into the system when cleaning the floor. This could cause a fire and give you an electric shock.

CAUTION

- Always keep the plug and outlet clean. Prevent them from accumulating dust and dirt. This could cause a fire and give you an electric shock due to the heat released by electric leakage.
- Do not touch the stapling area. The actual needle point could cause you personal injury.

Other points

- Do not use such solvents as thinner or alcohol when cleaning the surface of the Multifunctional Digital Systems.
 - This could warp the shape of the surface or leave it discolored.
 - When using a chemical cleaning pad to clean it, pay attention to any cautionary points.
- Repair parts will be provided for a period of 7 years after the final manufacturing of the product.
- The life of each consumable differs depending not only on the copy/print volume but also on other factors (operating time, output image, media type and so on). Due to this, the life cannot be specified in a simple description using the copy/print volume. For more details, contact your supplier where you purchased the product.

❑ When handling supplies

⚠ CAUTION

- Never attempt to incinerate toner cartridges and waste toner boxes. Dispose of used toner cartridges and waste toner boxes in accordance with local regulations.

Other points

- Read the operator's manual carefully to replace the toner cartridge using the correct procedure. An improper procedure could cause toner leakage or scattering.
- Do not open the toner cartridge forcibly. This could cause toner leakage or scattering.
- Keep the toner cartridge out of the reach of children.
- If toner is spilt on your clothes, wash it off with cold water. If you use warm water, your clothes will be permanently stained with toner because it will not come out.
- If toner leaks from the toner cartridge, be careful not to inhale or touch it.

First-aid measures

If you inhale or touch toner, etc; carry out the following treatment.

- Inhalation: Remove from exposure area to fresh air immediately. Contact a physician if there is any difficulty in breathing or other signs of distress.
- Skin Contact: Wash with soap and water. Wash clothing before reuse. If irritation occurs or is persistent, seek medical attention.
- Eye Contact: Immediately flush eyes with plenty of water for at least 15 minutes. If irritation persists, call a physician.
- Ingestion: Dilute stomach contents with several glasses of water.

■ Environmental Information

❑ ENERGY STAR® Program

Oki Data Corporation, as a member of the ENERGY STAR Program, attaches the ENERGY STAR logo to all products which meet the ENERGY STAR Program requirements.



The ENERGY STAR Program aims at the promotion of the development and wider usage of office equipment including energy-efficient computers in order to address environmental issues such as global warming. Manufacturers that participate in this program can attach the ENERGY STAR logo to products after confirming that they meet the energy saving standards of this program. Also, these standards and logo are commonly used within the U.S. Environmental Protection Agency (EPA) and participating countries.

Specified products, sales countries or regions may not be included.

To distinguish whether or not the product meets the ENERGY STAR Program requirements, check if the corresponding logo is on the product.

If you have any questions, contact your service representative.

Oki Data Corporation
4-11-22 Shibaura, Minato-ku, Tokyo
108-8551, Japan

www.oki.com/printing/

